

CIRCUIT INSPECTION


Power source circuit

CIRCUIT DESCRIPTION


This circuit provides power to operate the rear left door ECU.

WIRING DIAGRAM

Rear Left (LHD)

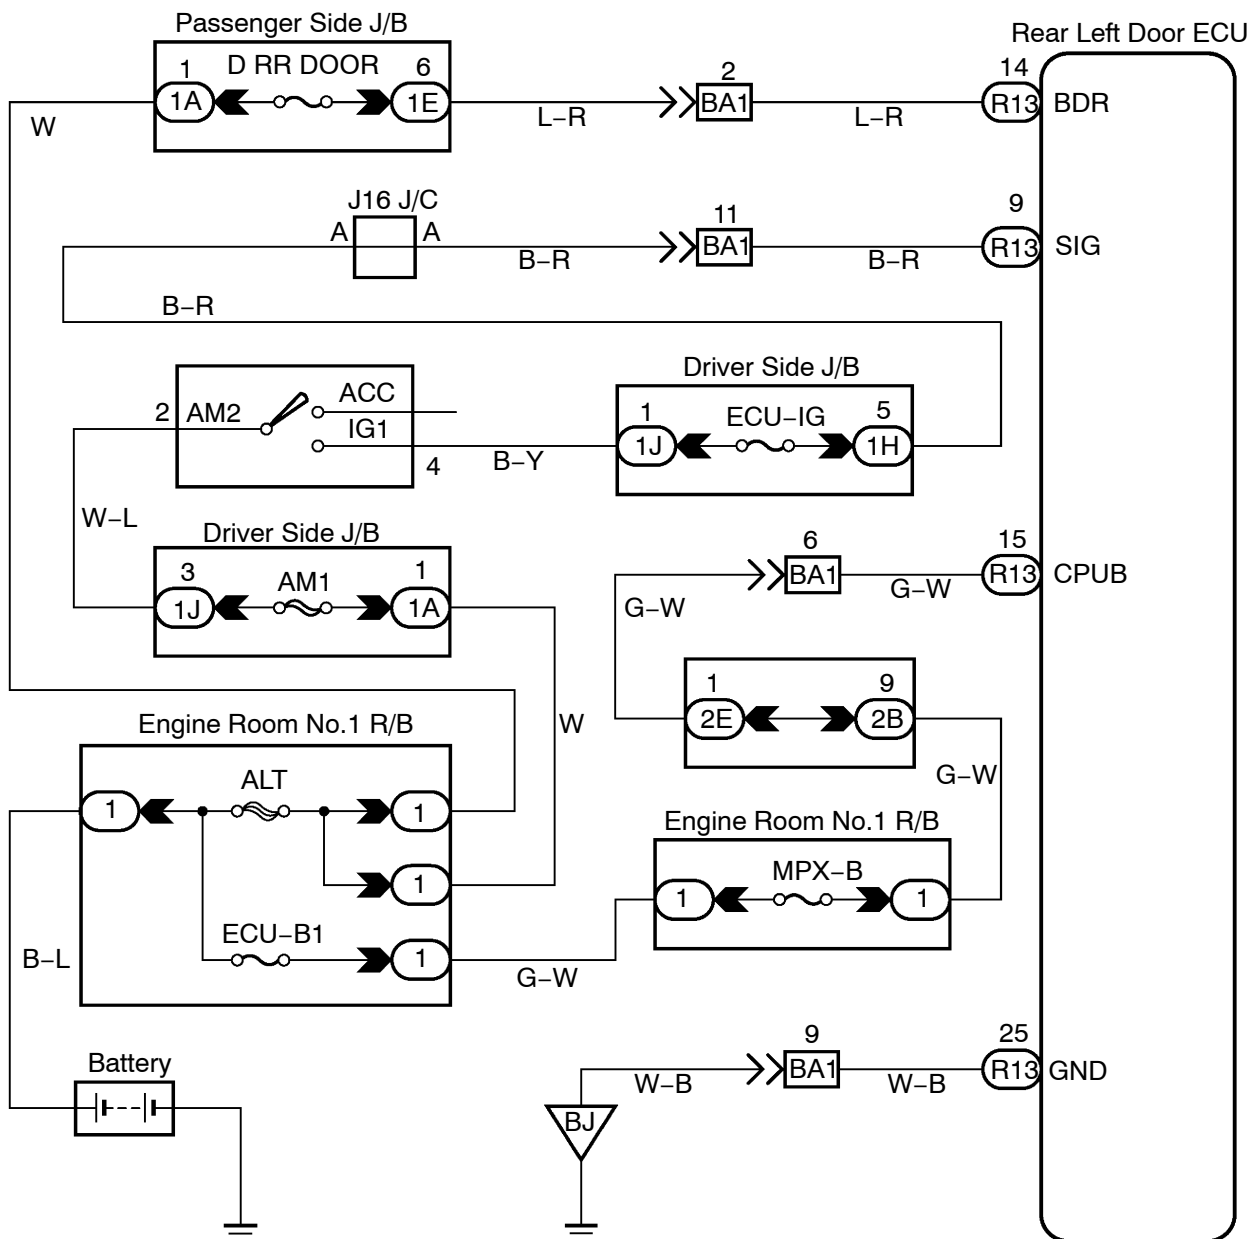

Rear Left (RHD)

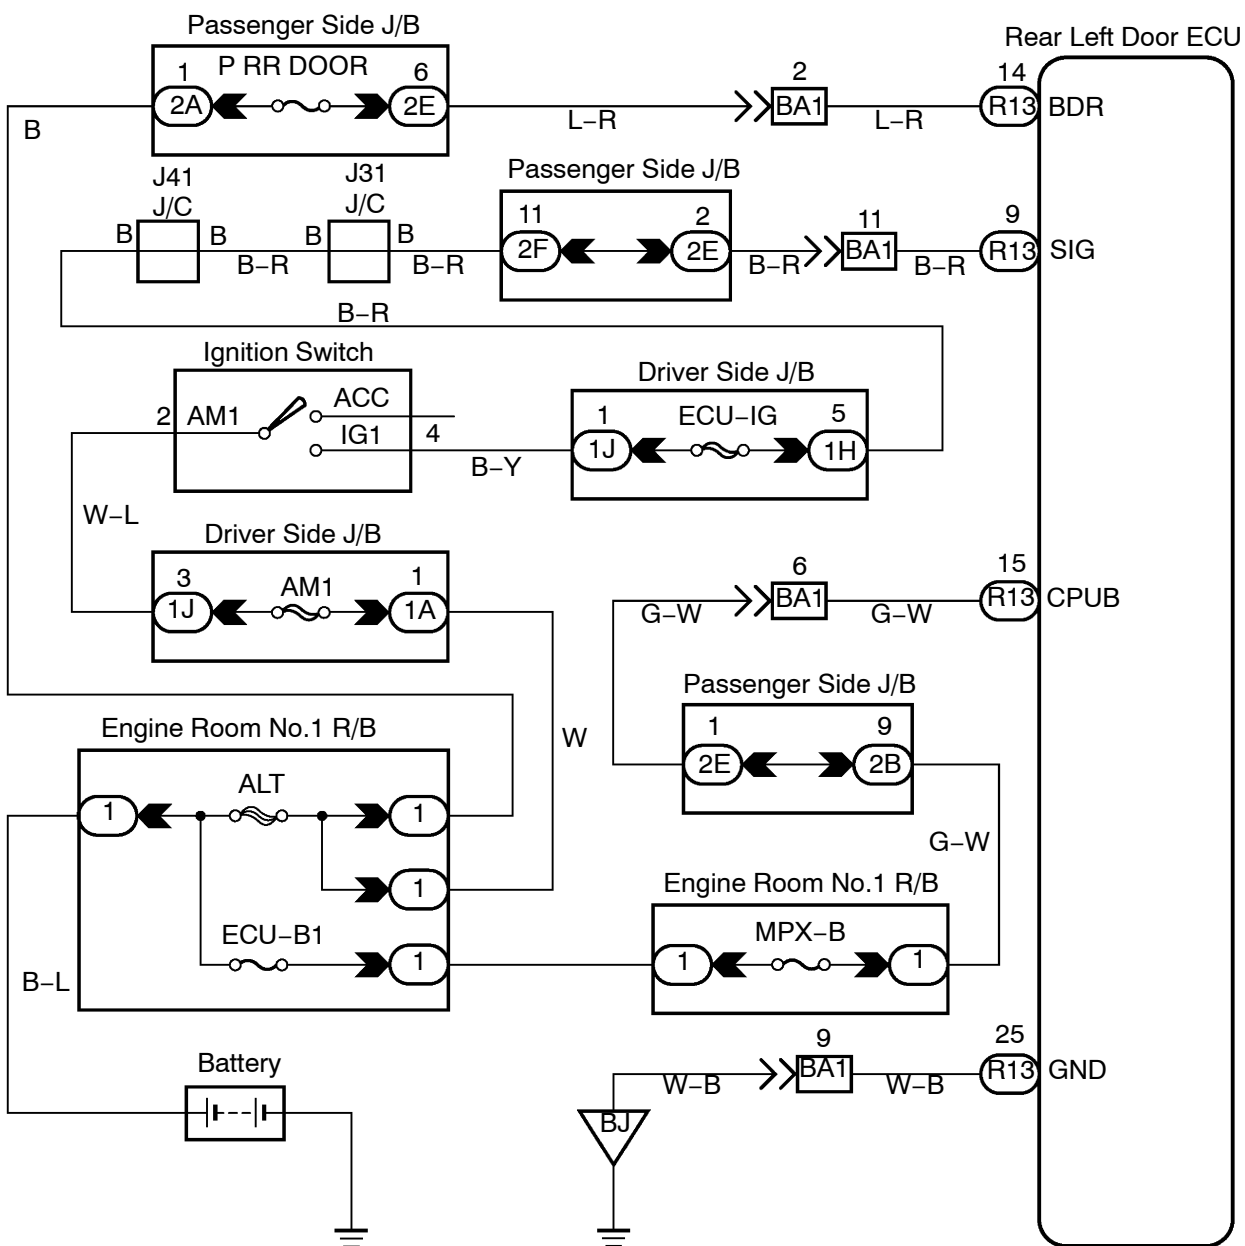

105629

INSPECTION PROCEDURE

1	Check MPXB, GAUGE and DOOR(RL) fuse.
----------	---

CHECK:

Check continuity of MPXB, GAUGE and DOOR(RL) fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminals BDR, CPUB, SIG and GND of rear left door ECU connector.
----------	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:**Voltage: 10 – 14V****PREPARATION:**

(a) Turn ignition switch OFF.

(b) Disconnect the rear left door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:**Voltage: 10 – 14V**

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-770](#)).

NG

3**Check wireharness and connector between ECU and body ground.****NG****Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector
between ECU and battery.**