

DTC	B1217 / 17	Rear left door ECU communication stop
------------	-------------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between rear left door ECU and body No.1 ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1217/17	No communication from rear left door ECU more than 10 seconds.	• Rear left door ECU • Wireharness

WIRING DIAGRAM

[See page DI-816](#)

INSPECTION PROCEDURE

1	Check rear left door ECU.
----------	----------------------------------

CHECK:

Check if the rear left door window glass auto up.

HINT:


With this inspection rear left door ECU CPU can be diagnosed if it works normal or not.

NG

Replace the rear left door ECU.

OK

2 Check wireharness

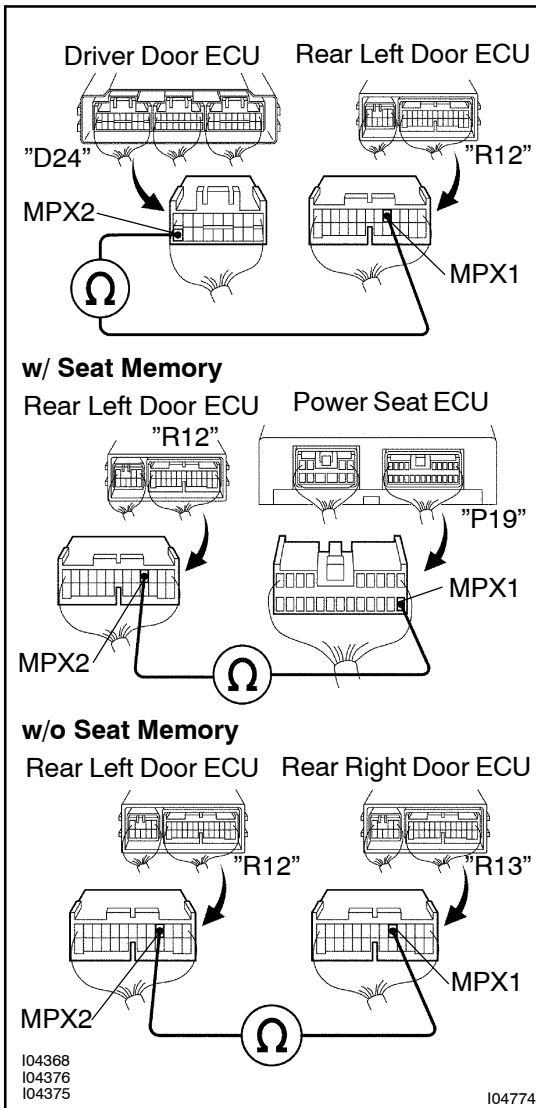

PREPARATION:

Disconnect connector "D24" of driver door ECU, "R12" of rear left door ECU and "P19" of power seat ECU (or "R13" of rear right door ECU).

CHECK:

- Check continuity between terminals MPX2 of driver door ECU and MPX1 of rear left door ECU.
- w/Seat memory
Check continuity between terminals MPX2 of rear left door ECU and MPX1 of power seat ECU.
- w/o Seat memory
Check continuity between terminals MPX2 of rear left door ECU and MPX1 of rear right door ECU.

OK:

There is a continuity in wireharness of both (a) and (b) or (a) and (c), (a) or either (b) or (c).

HINT:

If there is OPEN in wireharness of either (a), (b) or (c), please repair it.

NG

Repair or replace wireharness.

OK

Replace the rear left door ECU.