

DTC	P0115	Water Temp. Circuit Malfunction
-----	-------	---------------------------------

CIRCUIT DESCRIPTION

A thermistor built into the water temp. sensor changes the resistance value according to the water temperature.

The structure of the sensor and connection to the engine ECU is the same as in the DTC P0110 shown on [page DI-99](#).


DTC No.	DTC Detecting Condition	Trouble Area
P0115	Open or short in water temp. sensor circuit	• Open or short in water temp. sensor circuit • Water temp. sensor • Engine ECU

HINT:

After confirming DTC P0115, use the OBD scan tool hand-held tester to confirm the water temperature from CURRENT DATA.

Temperature Displayed	Malfunction
-40°C (-40°F)	Open circuit
140C° (284°F) or more	Short circuit

WIRING DIAGRAM

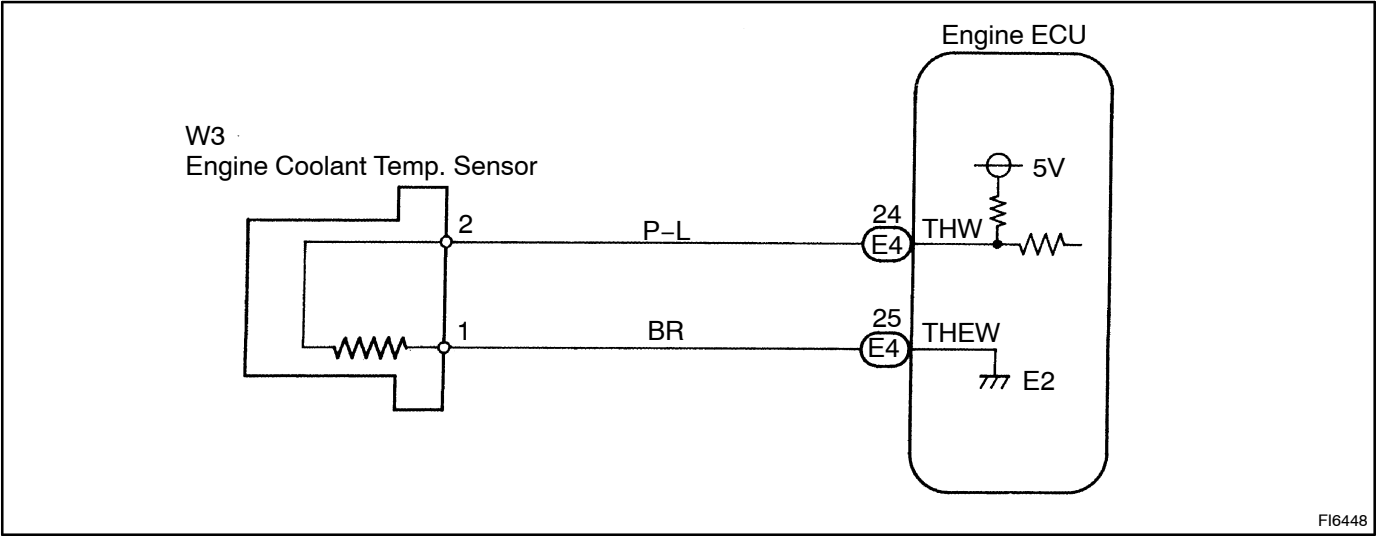

INSPECTION PROCEDURE

HINT:

Read freeze frame data using a OBD scan tool or hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected, when troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine warmed up or not, the air-fuel ratio lean or rich, etc. at the time of the malfunction.

- | | |
|----------|--|
| 1 | Connect OBD scan tool or hand-held tester, and read value of water temperature. |
|----------|--|

PREPARATION:

- (a) Connect the OBD scan tool or hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and switch the hand-held tester main switch ON.

CHECK:

Read temperature value on the OBD scan tool or hand-held tester.

OK:

Same as actual water temperature

HINT:

- If there is open circuit, Hand-held tester indicates -40°C (-40°F).
- If there is short circuit, Hand-held tester indicates 140°C (284°F) or more.


NG

-40°C (-40°F)...Go to step 2.
 140°C (284°F) or more...Go to step 4.

OK

Check for intermittent problems (See page [DI-73](#)).

2 Check for open in harness or engine ECU.

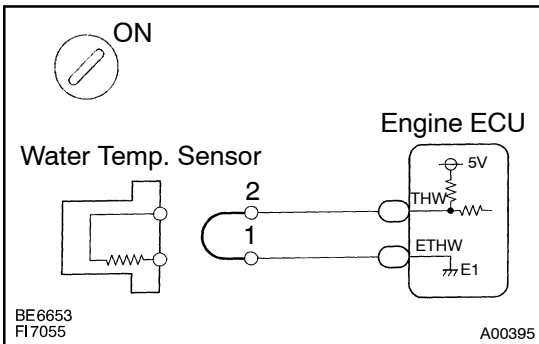

PREPARATION:

- Disconnect the water temp. sensor connector.
- Connect sensor wire harness terminals together.
- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD scan tool or hand-held tester.

OK:


Temperature value: 140°C (284°F) or more

OK

Confirm good connection at sensor. If OK, replace water temp. sensor.

NG

3 Check for open in harness or engine ECU.

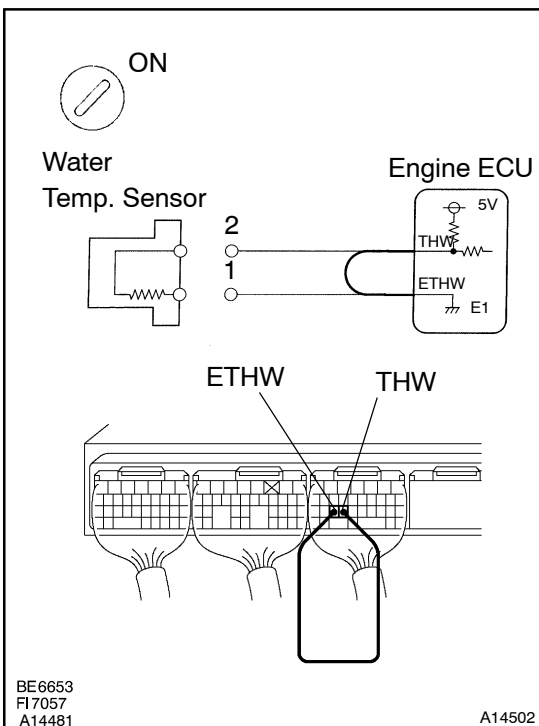

PREPARATION:

- Remove the engine ECU hood and cover (See page FI-74).
- Connect between terminals THW and ETHW of the engine ECU connector.

HINT:

Water temp. sensor connector is disconnected.

Before checking, do a visual and contact pressure check for the engine ECU connector (See page IN-30).

- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD scan tool or hand-held tester.

OK:

Temperature value: 140°C (284°F) or more


OK

Open in harness between terminals ETHW or THW, repair or replace harness.

NG

Confirm good connection at engine ECU. If OK, check and replace engine ECU (See page IN-30).

4 Check for short in harness and engine ECU.

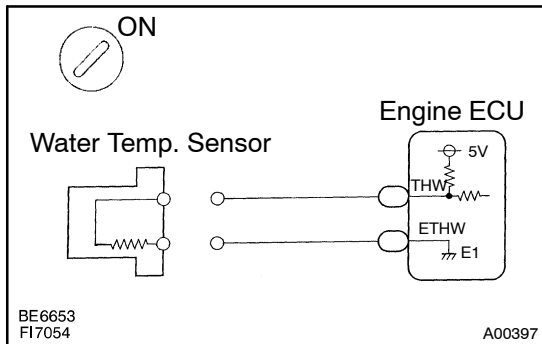

PREPARATION:

- Disconnect the water temp. sensor connector.
- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD scan tool or hand-held tester.

OK:


Temperature value: -40°C (-40°F)

OK

Replace water temp. sensor.

NG

5 Check for short in harness or engine ECU.

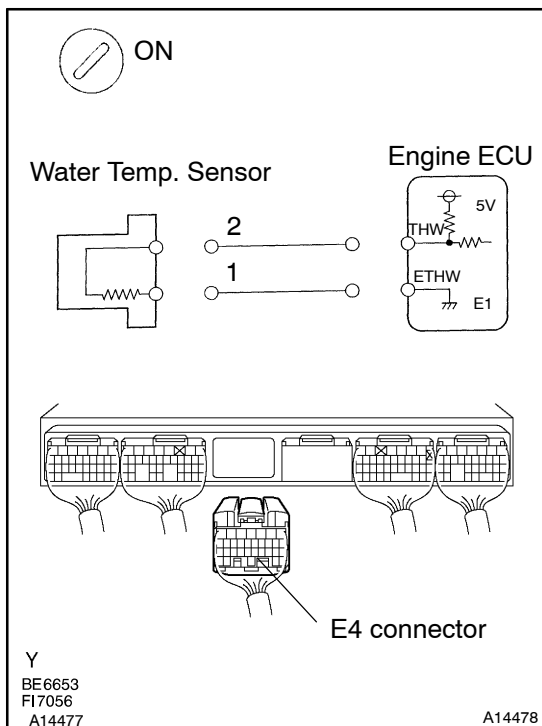

PREPARATION:

- Remove the engine ECU hood and cover ([See page FI-74](#)).
- Disconnect the E4 connector of the engine ECU.

HINT:

Water temp. sensor connector is disconnected.

- Turn the ignition switch ON.

CHECK:

Read temperature value on the OBD scan tool or hand-held tester.

OK:

Temperature value: -40°C (-40°F)

OK

Repair or replace harness or connector.

NG

Check and replace engine ECU ([See page IN-30](#)).