


Door courtesy light and courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

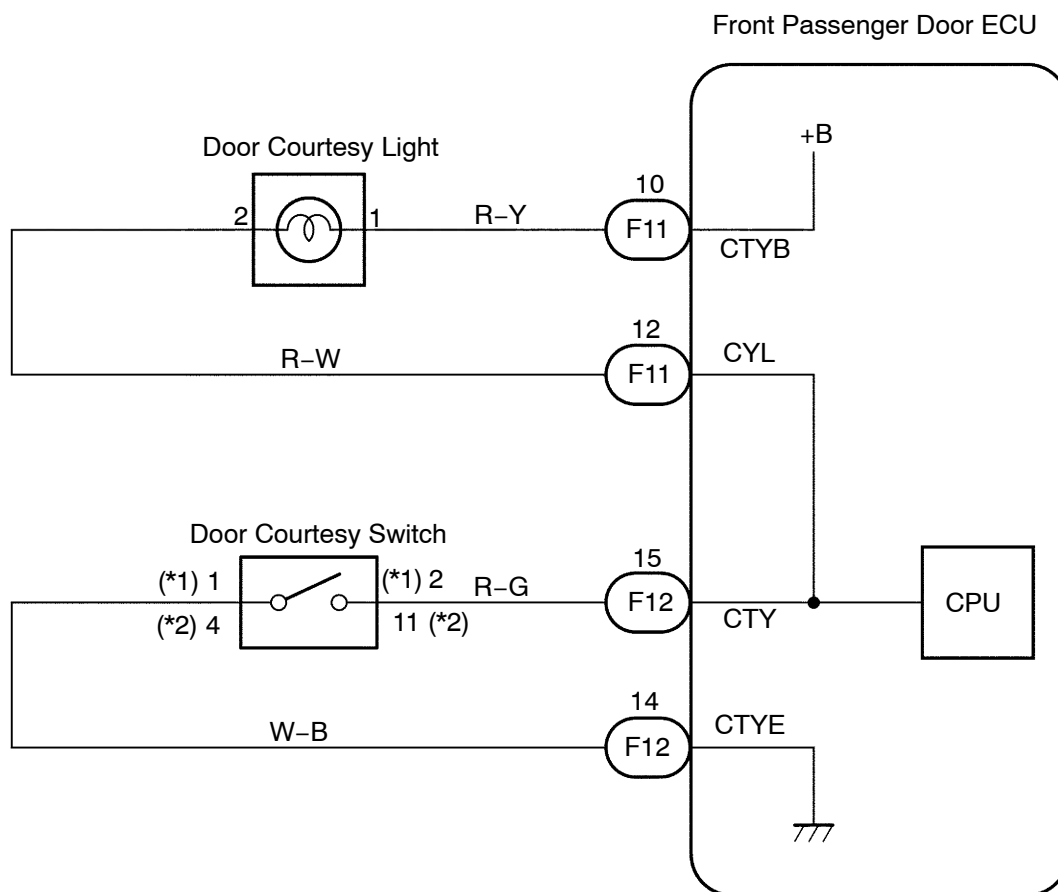

(*1): w/o Double locking system

(*2) w/ Double locking system

I03216

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check operation of door courtesy light. |
|----------|--|

CHECK:

Check that door courtesy light comes on when door opened, and goes off when door is closed.

OK:

Must be operated normally.

OK

Proceed to next circuit inspection shown on problem symptom table (See page Pub. No. RM588E on page DI-616).

NG

- | | |
|----------|--|
| 2 | Check courtesy light. (See Pub. No. RM588E on page BE-66) |
|----------|--|

NG

Replace the courtesy light.

OK

- | | |
|----------|--|
| 3 | Check courtesy switch
(w/o Double locking system: See Pub, No. RM588E on page BE-66
w/ Double locking system: See page BE-3). |
|----------|--|

NG

Replace the courtesy switch.

OK

4

Check wireharness and connector between courtesy light and front passenger door ECU, courtesy switch and front passenger door ECU.

NG

Repair or replace wireharness or connector.

OK

**Proceed to next circuit inspection shown on
problem symptoms table
(See Pub. No. RM588E on page DI-616.)**