
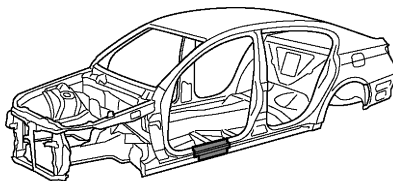
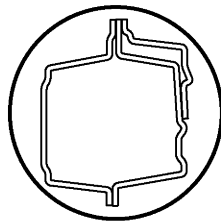
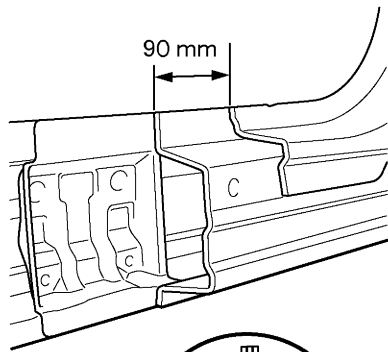
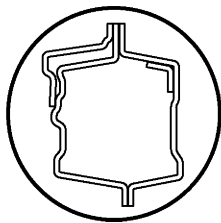
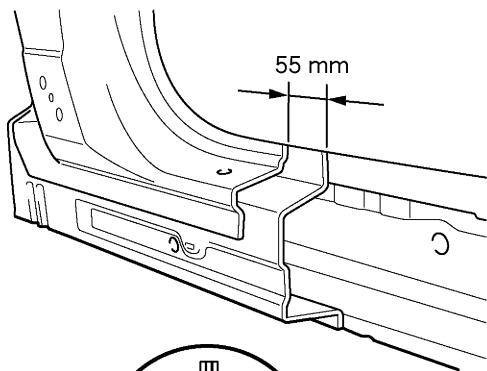


|                                   |                                                                                                |
|-----------------------------------|------------------------------------------------------------------------------------------------|
| <b>ROCKER OUTER PANEL (CUT-H)</b> | <br>F22248A |
| <b>REPLACEMENT</b>                |                                                                                                |




**REMOVAL**

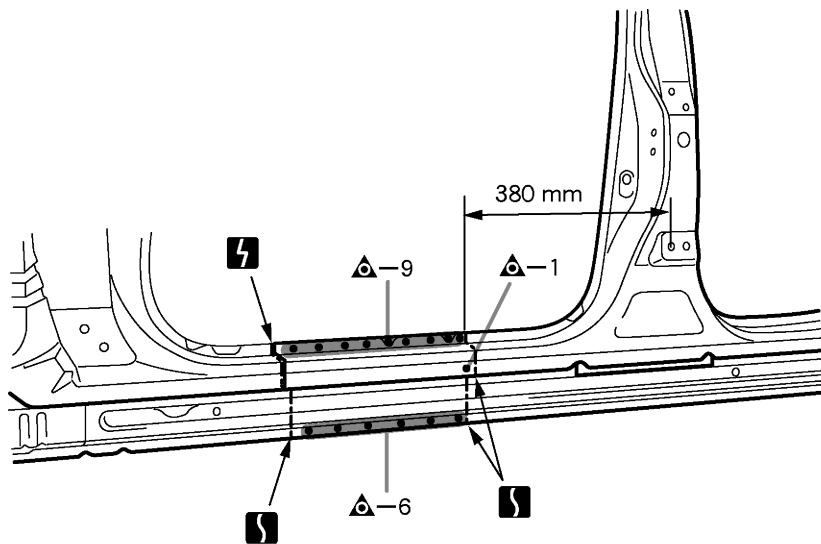

F22248

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

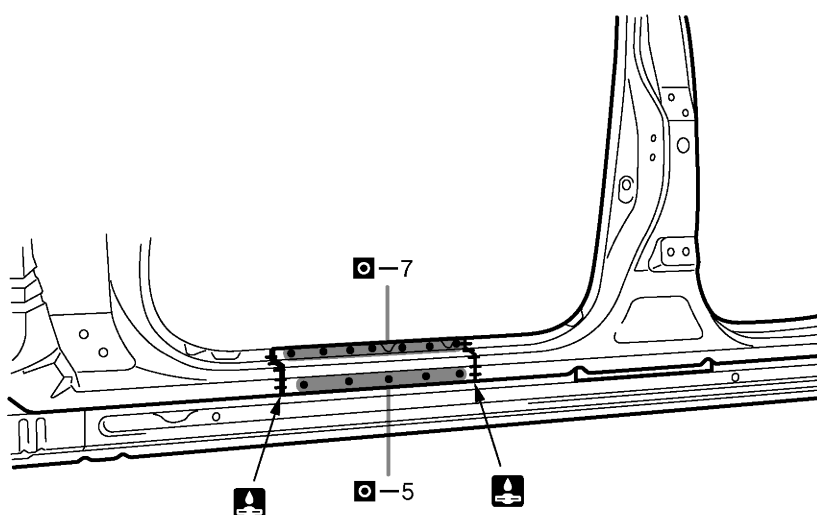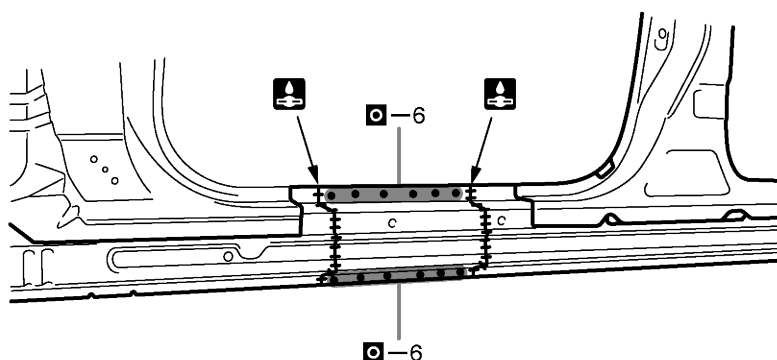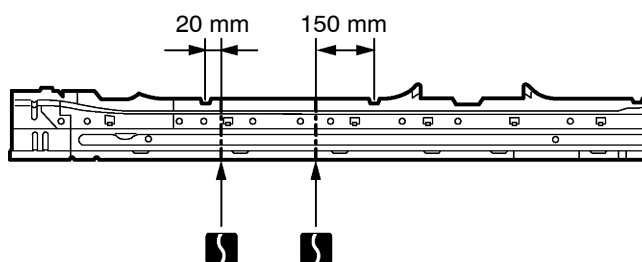

F22249

**POINT**

- 1 Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.
- 2 After welding the rocker outer panel to the vehicle side, install the outer panel.

20 mm ( 0.79 in.)

150 mm ( 5.91 in.)