


BODY DIMENSION DRAWINGS

ENGINE COMPARTMENT

(Three-Dimensional Distance)

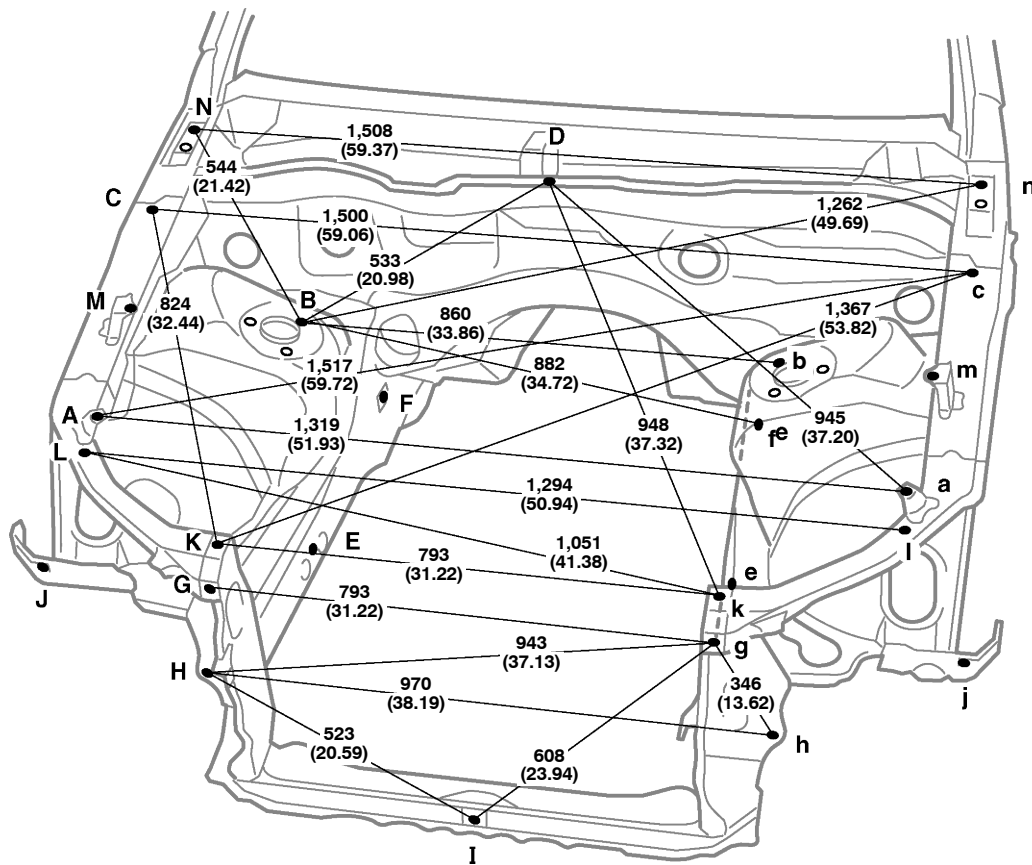

Vehicle Dimensions Left ↔ Right

A-C or a-c	A-N or a-n	A-n or a-N	C-N or c-n	C-n or c-N	D-E or d-e	D-f or d-F	J-j
570 (22.44)	827 (32.56)	1,635 (64.37)	259 (10.20)	1,526 (60.08)	801 (31.54)	614 (24.17)	1,562 (61.50)

K-N or k-n	K-n or k-N	L-N or l-n	L-n or l-N	M-m	M-N or m-n	M-n or m-N
1,065 (41.93)	1,527 (60.12)	892 (35.12)	1,658 (65.28)	1,380 (54.33)	551 (21.69)	1,545 (60.83)

Height from Imaginary Standard Line


A, a	K, k	N, n
684 (26.93)	622 (24.49)	773 (30.43)

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front fender installation nut	M6 (0.24)	H, h	Crush box installation nut	M10 (0.39)
B, b	Front spring support hole inner-rear	ø 13 (0.51)	I	Hood lock support installation nut	M6 (0.24)
C, c	Front apron to cowl side upper member standard hole	ø 10 (0.39)	J, j	Radiator support to front fender bracket standard hole	ø 10 (0.39)
D	Cowl top inner panel center mark	—	K, k	Radiator upper support installation nut	M6 (0.24)
E, e	Front sidemember standard hole	ø 15 (0.59)	L, l	Radiator upper support standard hole	ø 10 (0.39)
F, f	Front sidemember standard hole	ø 15 (0.59)	M, m	Front fender installation nut	M6 (0.24)
G, g	Radiator upper support installation nut	M6 (0.24)	N, n	Hood hinge installation nut-rear	M8 (0.31)

(Three-Dimensional Distance)

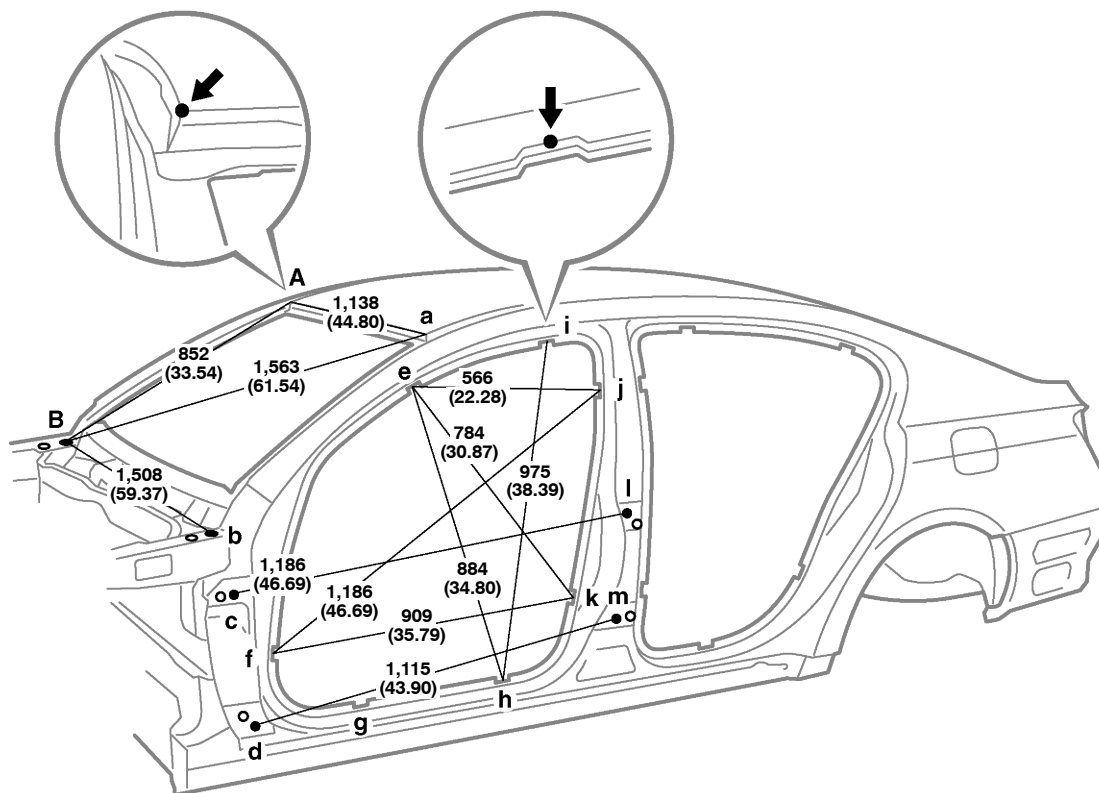

E-e	F-f	G-g	H-h	I-i	J-j	K-k
1,247 (49.09)	1,486 (58.50)	1,492 (58.74)	1,492 (58.74)	1,151 (45.31)	1,337 (52.64)	1,498 (58.98)


E-f or e-F	E-h or e-H	E-i or e-I	E-k or e-K	F-j or f-J	F-k or f-K	G-h or g-H	H-i or h-I
1,580 (62.20)	1,625 (63.98)	1,276 (50.24)	1,576 (62.05)	1,842 (72.52)	1,747 (68.78)	1,558 (61.34)	1,634 (64.33)

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Roof panel corner	—	H, h	Rocker panel assembly mark	—
B, b	Hood hinge installation nut-rear	M8 (0.31)	I, i	Roof side rail assembly mark	—
C, c	Front door hinge installation nut	M10 (0.39)	J, j	Center body pillar assembly mark	—
D, d	Front door hinge installation nut	M10 (0.39)	K, k	Center body pillar assembly mark	—
E, e	Front body pillar assembly mark	—	L, l	Rear door hinge installation nut	M8 (0.31)
F, f	Front body pillar assembly mark	—	M, m	Rear door hinge installation nut	M8 (0.31)
G, g	Rocker panel assembly mark	—	—	—	—

BODY OPENING AREAS (Side View-Rear)

(Three-Dimensional Distance)

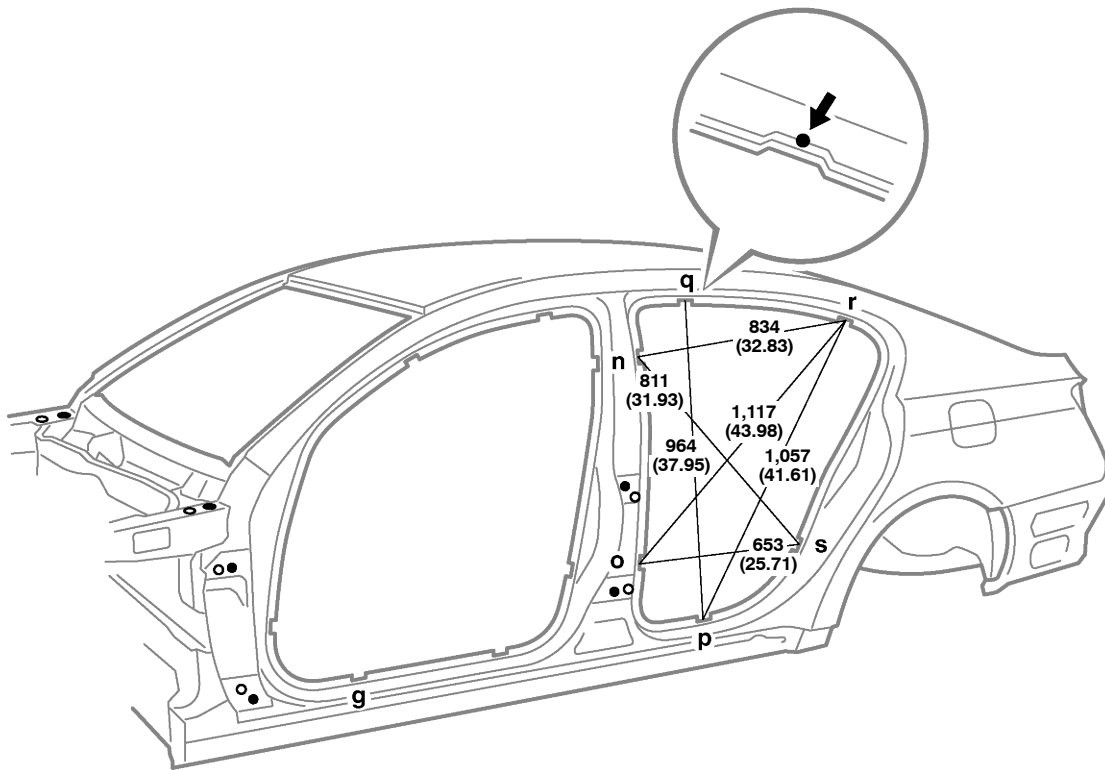

Vehicle Dimensions Left ↔ Right

N-n	O-o	P-p	Q-q	R-r	S-s
1,337 (52.64)	1,498 (58.98)	1,492 (58.74)	1,138 (44.80)	1,215 (47.83)	1,495 (58.86)

G-p or g-P	N-p or n-P	N-r or n-R	N-s or n-S	O-r or o-R	O-s or o-S	P-q or p-Q	R-s or r-S
1,886 (74.25)	1,632 (64.25)	1,523 (59.96)	1,630 (64.17)	1,751 (68.94)	1,633 (64.29)	1,621 (63.82)	1,514 (59.61)



HINT: For symbols, capital letters indicate right side of vehicle,
small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
G, g	Rocker panel assembly mark	—	Q, q	Roof side rail assembly mark	—
N, n	Center body pillar assembly mark	—	R, r	Quarter panel assembly mark	—
O, o	Center body pillar assembly mark	—	S, s	Quarter panel assembly mark	—
P, p	Quarter panel assembly mark	—	—	—	—

BODY OPENING AREAS (Rear View)

(Three-Dimensional Distance)

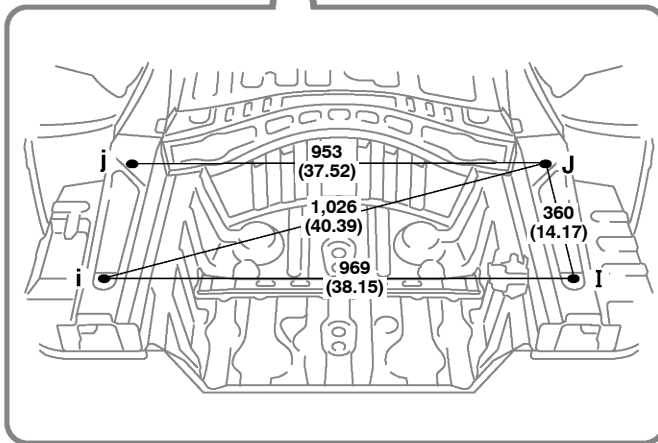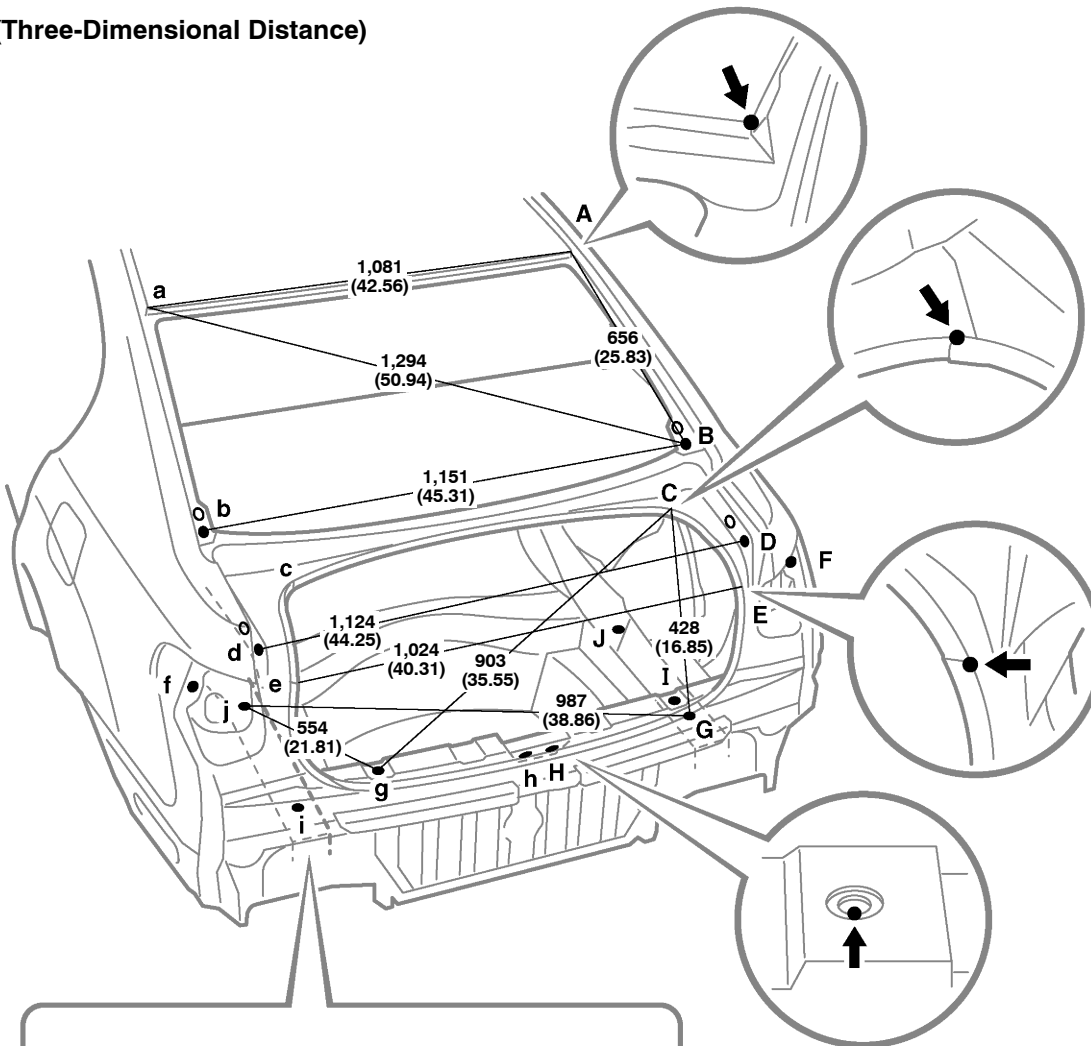

Vehicle Dimensions Left ↔ Right

F-f	H-J	H-j	h-J	h-j
1,393 (54.84)	704 (27.72)	740 (29.13)	742 (29.21)	702 (27.64)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Roof panel corner	—	F, f	Quarter panel standard hole	ø 13 (0.51)
B, b	Luggage hinge installation standard hole	ø 10 (0.39)	G, g	Finish plate installation hole	ø 8.5 (0.33)
C, c	Luggage compartment opening trough/ Upper back reinforcement adjoining portion	—	H, h	Luggage door lock striker installation nut	M6 (0.24)
D, d	Luggage hinge installation hole	ø 11 (0.43)	I, i	Rear sidemember reinforcement standard hole	ø 18 (0.71)
E, e	Quarter panel outer extension/Luggage compartment opening trough adjoining point	—	J, j	Rear sidemember reinforcement standard hole	ø 18 (0.71)

UNDER BODY 2WD

(Three-Dimensional Distance)

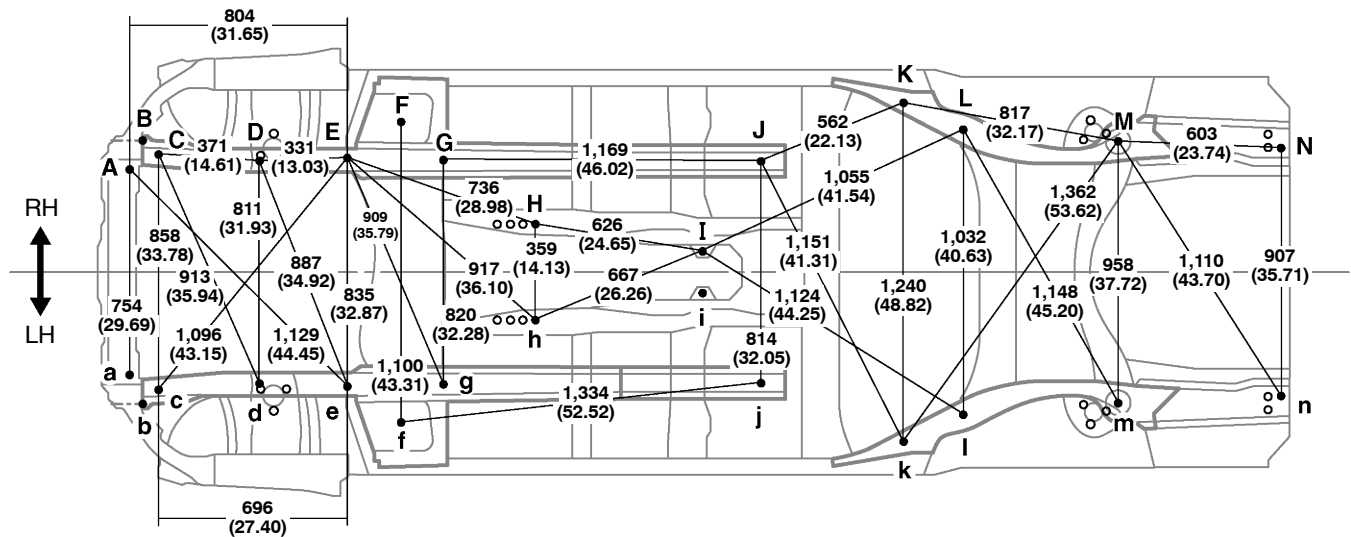


Vehicle Dimensions Left ↔ Right

Front ←

B-b	C-F or c-f	C-f or c-F	E-G or e-g	F-j or f-J	G-j or g-J
970 (38.19)	915 (36.02)	1,335 (52.56)	376 (14.80)	1,635 (64.37)	1,426 (56.14)

1	2	3
100 (3.94)	100 (3.94)	100 (3.94)

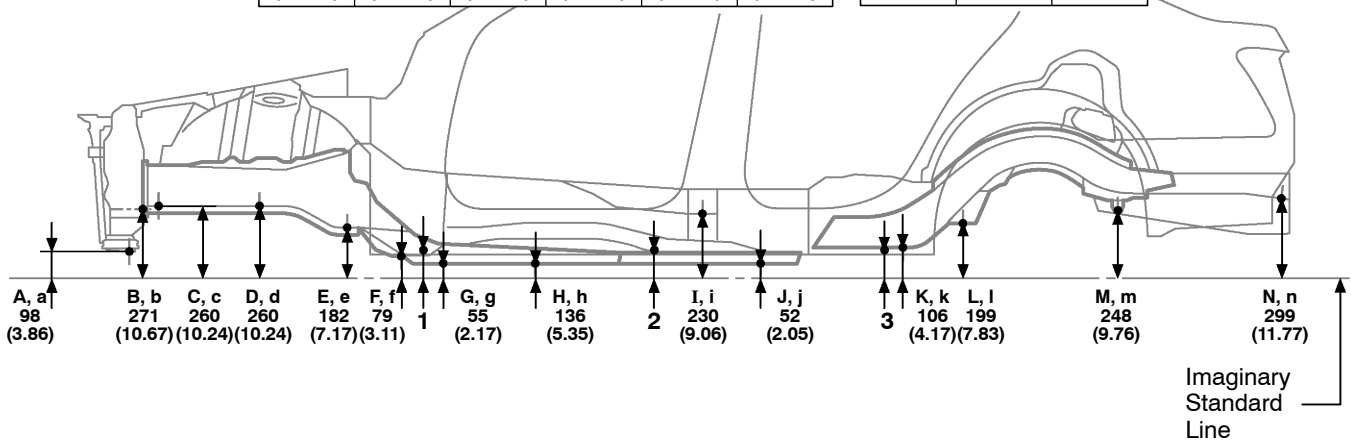


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember No.1 reinforcement standard hole	ø 10 (0.39)	H, h	Engine rear mounting member installation nut	M10 (0.39)
B, b	Crush box installation nut	M10 (0.39)	I, i	Propeller shaft center support bearing installation nut	M10 (0.39)
C, c	Front sidemember stanard hole	ø 18 (0.71)	J, j	Front floor under reinforcement standard hole	ø 15 (0.59)
D, d	Front suspension crossmember installation nut	M14 (0.55)	K, k	Rear floor sidemember standard hole	ø 18 (0.71)
E, e	Front suspension crossmember installation nut	M16 (0.63)	L, l	Rear suspension member installation nut-front	M14 (0.55)
F, f	Torque box front standard hole	ø 25 (0.98)	M, m	Rear suspension member installation nut-rear	M14 (0.55)
G, g	Front sidemember standard hole	ø 25 (0.98)	N, n	Muffler support bracket installation nut	M12 (0.47)

UNDER BODY 4WD


(Three-Dimensional Distance)

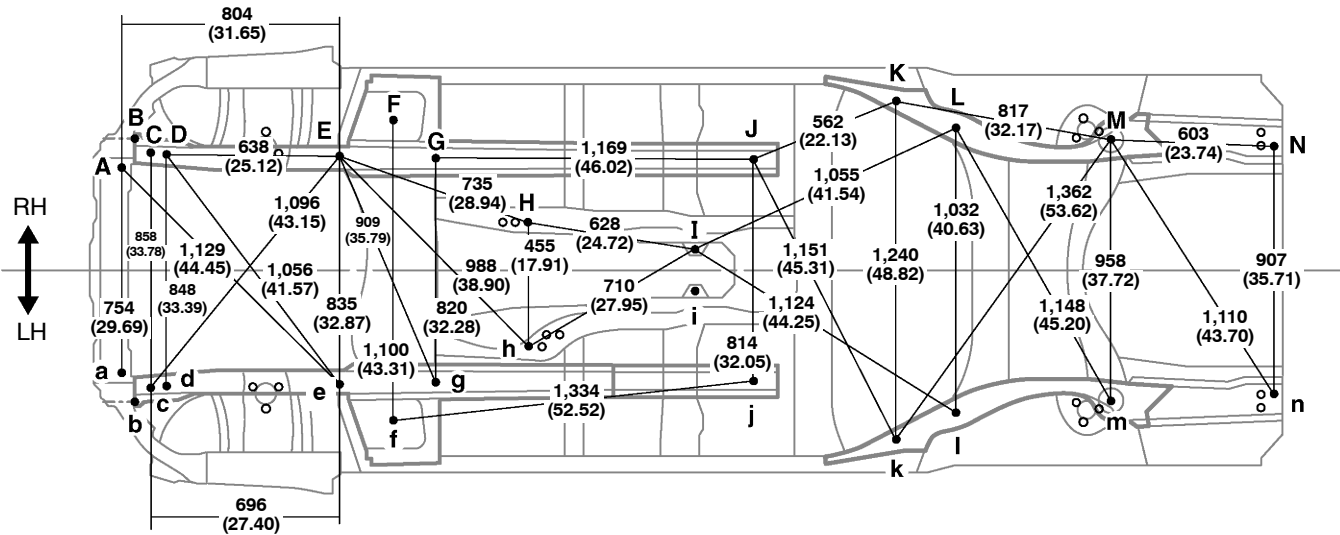

Vehicle Dimensions Left ↔ Right

Front ←

B-b	C-F or c-f	C-f or c-F	E-G or e-g	e-H	e-h	H-i	h-i	F-j or f-J	G-j or g-J
970 (38.19)	915 (36.02)	1,335 (52.56)	376 (14.80)	912 (35.91)	713 (28.07)	667 (26.26)	650 (25.59)	1,635 (64.37)	1,426 (56.14)

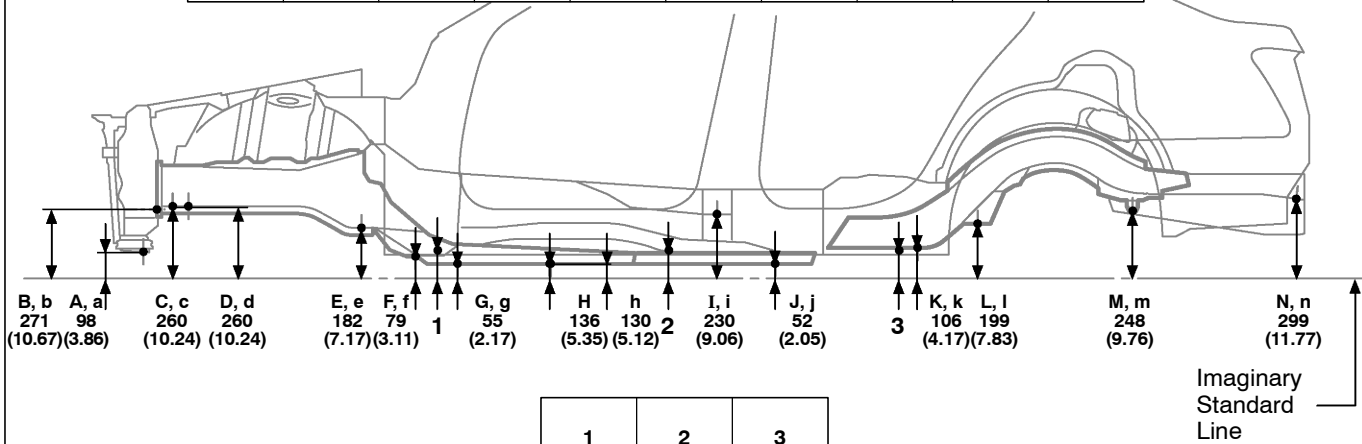


1	2	3
100 (3.94)	100 (3.94)	100 (3.94)

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember No.1 reinforcement standard hole	ø 10 (0.39)	H, h	Engine rear mounting member installation nut	M10 (0.39)
B, b	Crush box installation nut	M10 (0.39)	I, i	Propeller shaft center support bearing installation nut	M10 (0.39)
C, c	Front sidemember standard hole	ø 18 (0.71)	J, j	Front floor under reinforcement standard hole	ø 15 (0.59)
D, d	Front suspension crossmember installation nut	M14 (0.55)	K, k	Rear floor sidemember standard hole	ø 18 (0.71)
E, e	Front suspension crossmember installation nut	M16 (0.63)	L, l	Rear suspension member installation nut-front	M14 (0.55)
F, f	Torque box front standard hole	ø 25 (0.98)	M, m	Rear suspension member installation nut-rear	M14 (0.55)
G, g	Front sidemember standard hole	ø 25 (0.98)	N, n	Muffler support bracket installation nut	M12 (0.47)

UNDER BODY 2WD

(Two-Dimensional Distance)

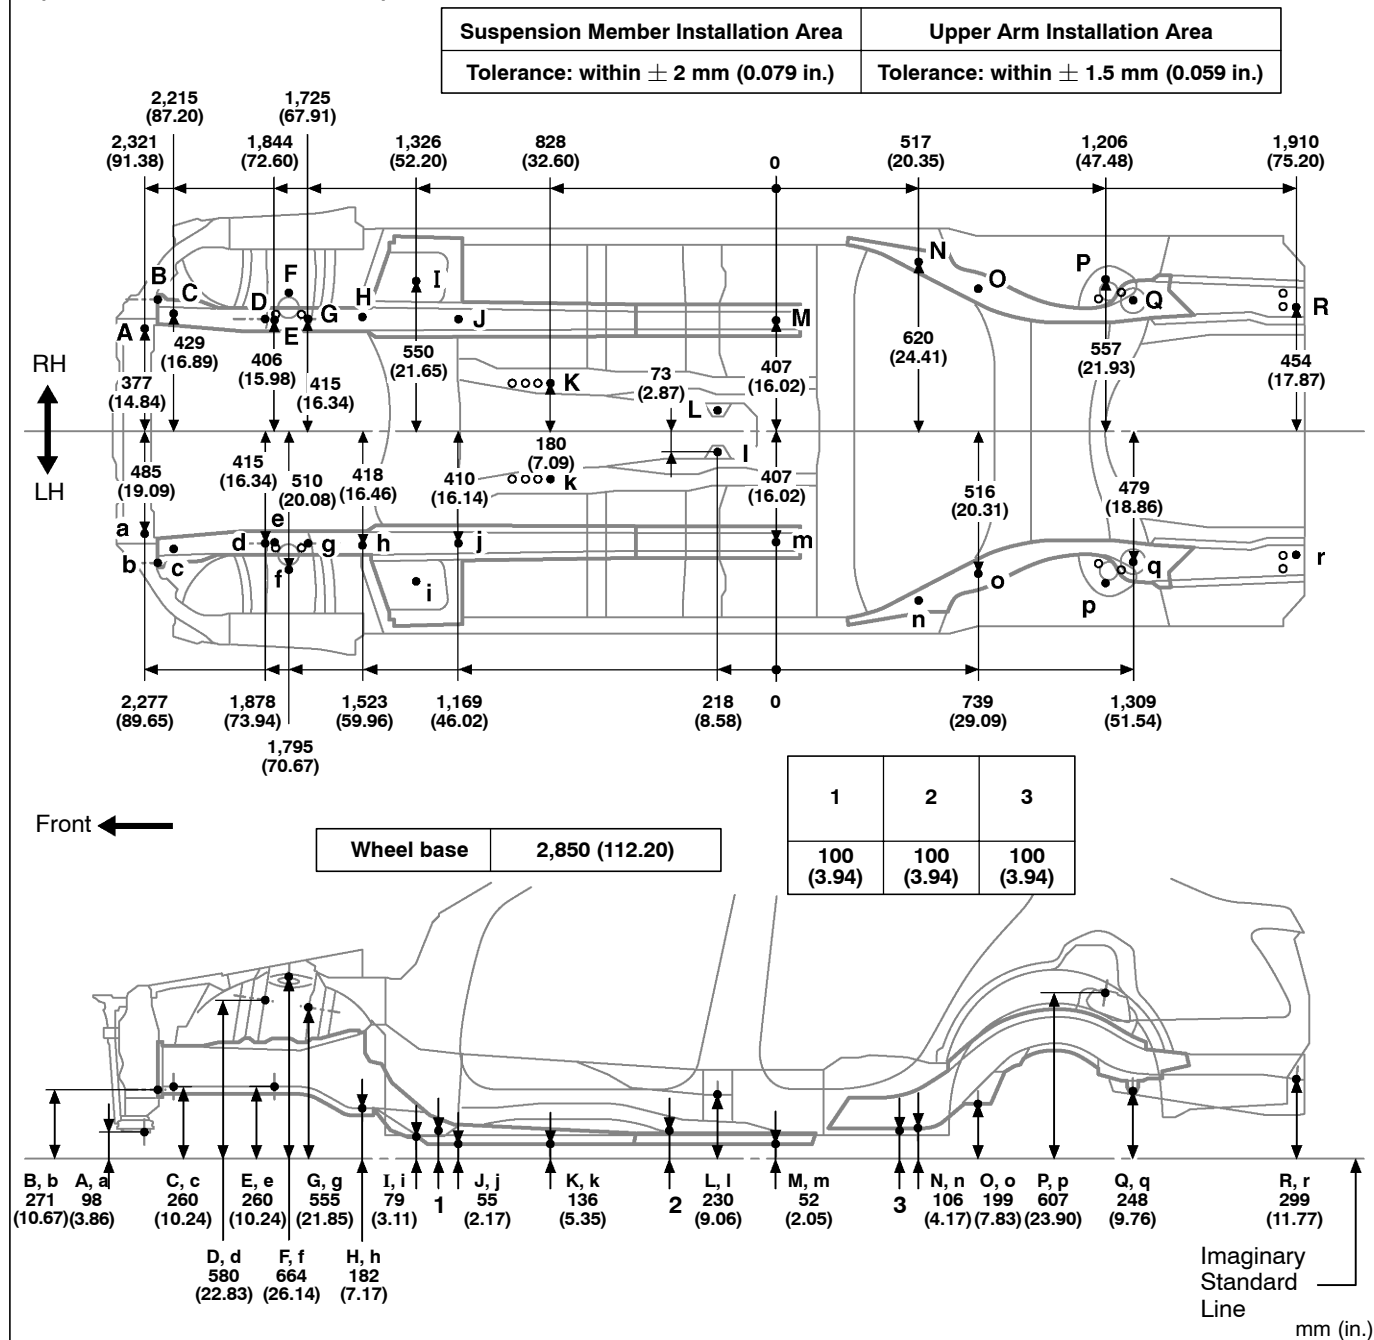


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember No.1 reinforcement standard hole	ø 10 (0.39)	J, j	Front sidemember standard hole	ø 25 (0.98)
B, b	Crush box installation nut	M10 (0.39)	K, k	Engine rear mounting member installation nut	M10 (0.39)
C, c	Front sidemember standard hole	ø 18 (0.71)	L, l	Propeller shaft center support bearing installation nut	M10 (0.39)
D, d	Front suspension upper arm installation hole front-rear	ø 12 (0.47)	M, m	Front floor under reinforcement standard hole	ø 15 (0.59)
E, e	Front suspension crossmember installation nut	M14 (0.55)	N, n	Rear floor sidemember standard hole	ø 18 (0.71)
F, f	Front spring support hole-outer	ø 13 (0.51)	O, o	Rear suspension member installation nut-front	M14 (0.55)
G, g	Front suspension upper arm installation hole rear-front	ø 12 (0.47)	P, p	Rear spring support hole-outer	ø 11 (0.43)
H, h	Front suspension croeemember installation nut	M16 (0.63)	Q, q	Rear suspension member installation nut-rear	M14 (0.55)
I, i	Torque box front standard hole	ø 25 (0.98)	R, r	Muffler support bracket installation nut	M12 (0.47)

UNDER BODY

4WD


(Two-Dimensional Distance)

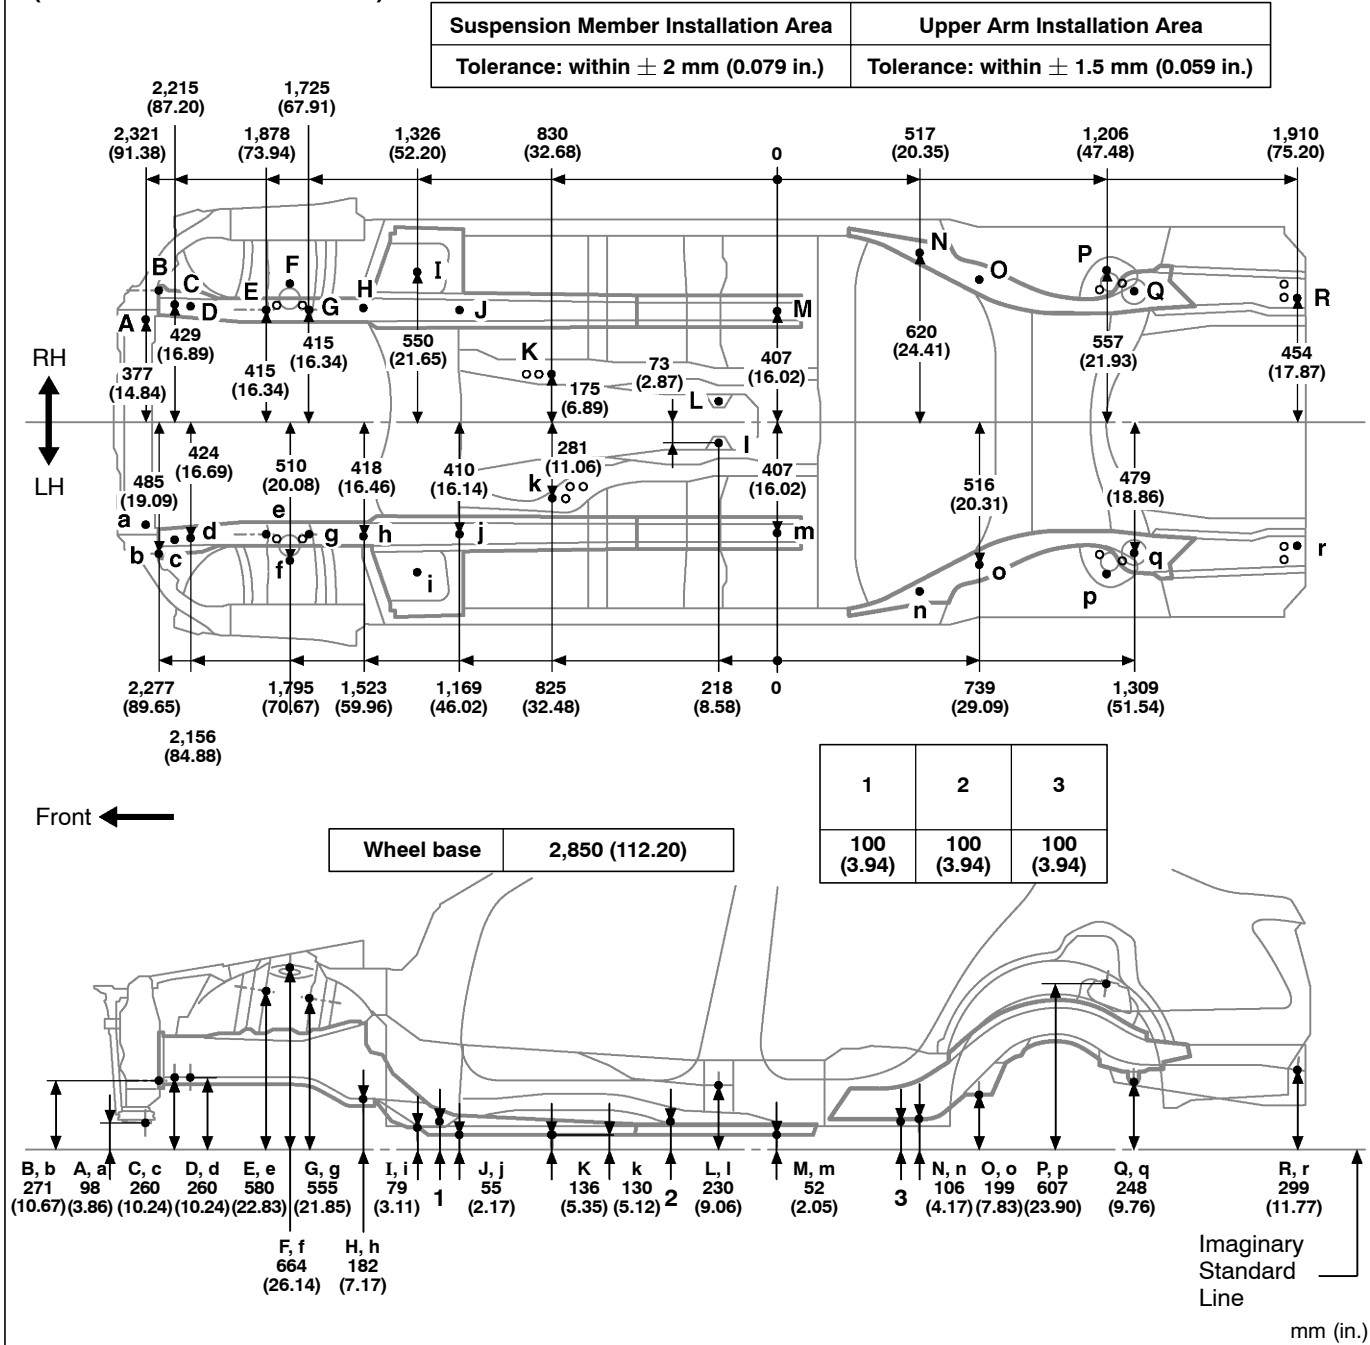

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front crossmember No.1 reinforcement standard hole	ø 10 (0.39)	J, j	Front sidemember hole	ø 25 (0.98)
B, b	Crush box installation nut	M10 (0.39)	K, k	Engine rear mounting member installation nut	M10 (0.39)
C, c	Front sidemember standard hole	ø 18 (0.71)	L, l	Propeller shaft center support bearing installation nut	M10 (0.39)
D, d	Front suspension crossmember installation nut	M14 (0.55)	M, m	Front floor under reinforcement standard hole	ø 15 (0.59)
E, e	Front suspension upper arm installation hole front-rear	ø 12 (0.47)	N, n	Rear floor sidemember standard hole	ø 18 (0.71)
F, f	Front spring support hole-outer	ø 13 (0.51)	O, o	Rear suspension member installation nut-front	M14 (0.55)
G, g	Front suspension upper arm installation hole rear-front	ø 12 (0.47)	P, p	Rear spring support hole-outer	ø 11 (0.43)
H, h	Front suspension crossmember installation nut	M16 (0.63)	Q, q	Rear suspension member installation nut-rear	M14 (0.55)
I, i	Torque box front standard hole	ø 25 (0.98)	R, r	Muffler support bracket installation nut	M12 (0.47)

FRONT SUSPENSION CROSSMEMBER 2WD

(Three-Dimensional Distance)

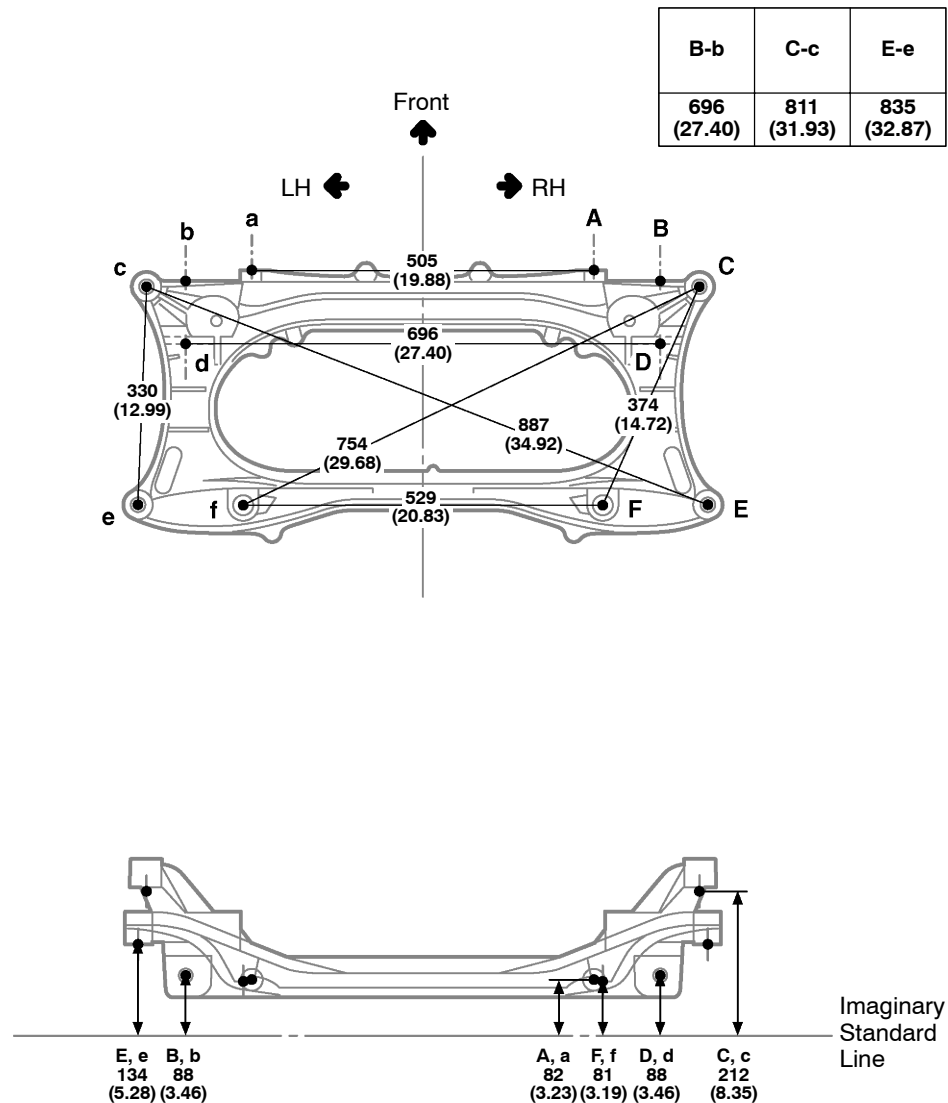

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Power steering gear box installation hole	ø 14.5 (0.571)	D, d	Lower arm installation hole	ø 14.5 (0.571)
B, b	Lower arm installation hole	ø 14.5 (0.571)	E, e	Front suspension crossmember installation hole-lower	ø 27 (1.06)
C, c	Front suspension crossmember installation hole-lower	RH: 22.1 × 22.5 (0.870 × 0.886) LH: 26.6 × 22.5 (1.047 × 0.886)	F, f	Lower arm installation hole	ø 12.3 (0.484)

FRONT SUSPENSION CROSSMEMBER
2WD

(Two-Dimensional Distance)

Suspension Member Installation Area	Lower Arm Installation Area
Tolerance: within ± 2 mm (0.079 in.)	Tolerance: within ± 1.5 mm (0.059 in.)

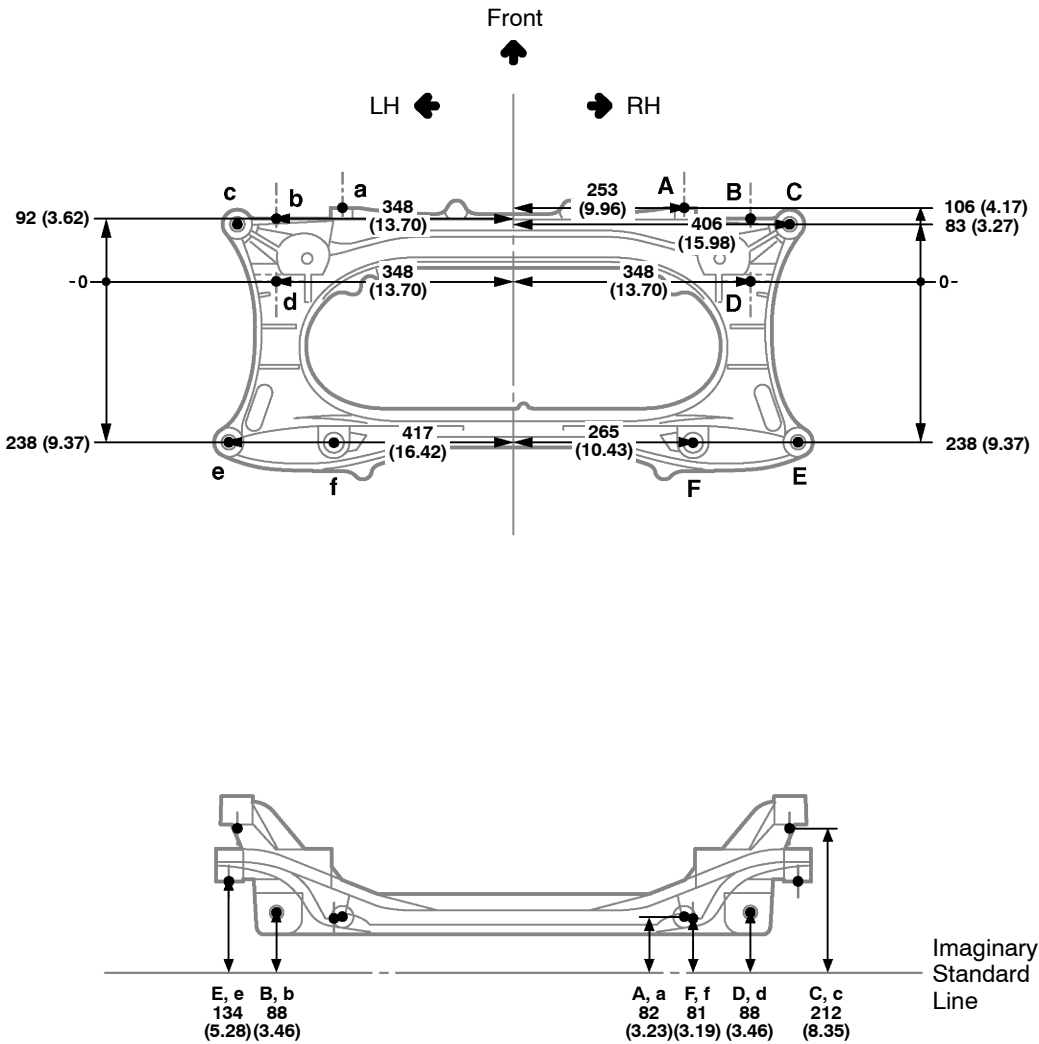


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Power steering gear box installation hole	ø 14.5 (0.571)	D, d	Lower arm installation hole	ø 14.5 (0.571)
B, b	Lower arm installation hole	ø 14.5 (0.571)	E, e	Front suspension crossmember installation hole-lower	ø 27.1 (1.06)
C, c	Front suspension crossmember installation hole-lower	RH: 22.1 × 22.5 (0.870 × 0.886) LH: 26.6 × 22.5 (1.047 × 0.886)	F, f	Lower arm installation hole	ø 12.3 (0.484)

FRONT SUSPENSION CROSSMEMBER 4WD

(Three-Dimensional Distance)

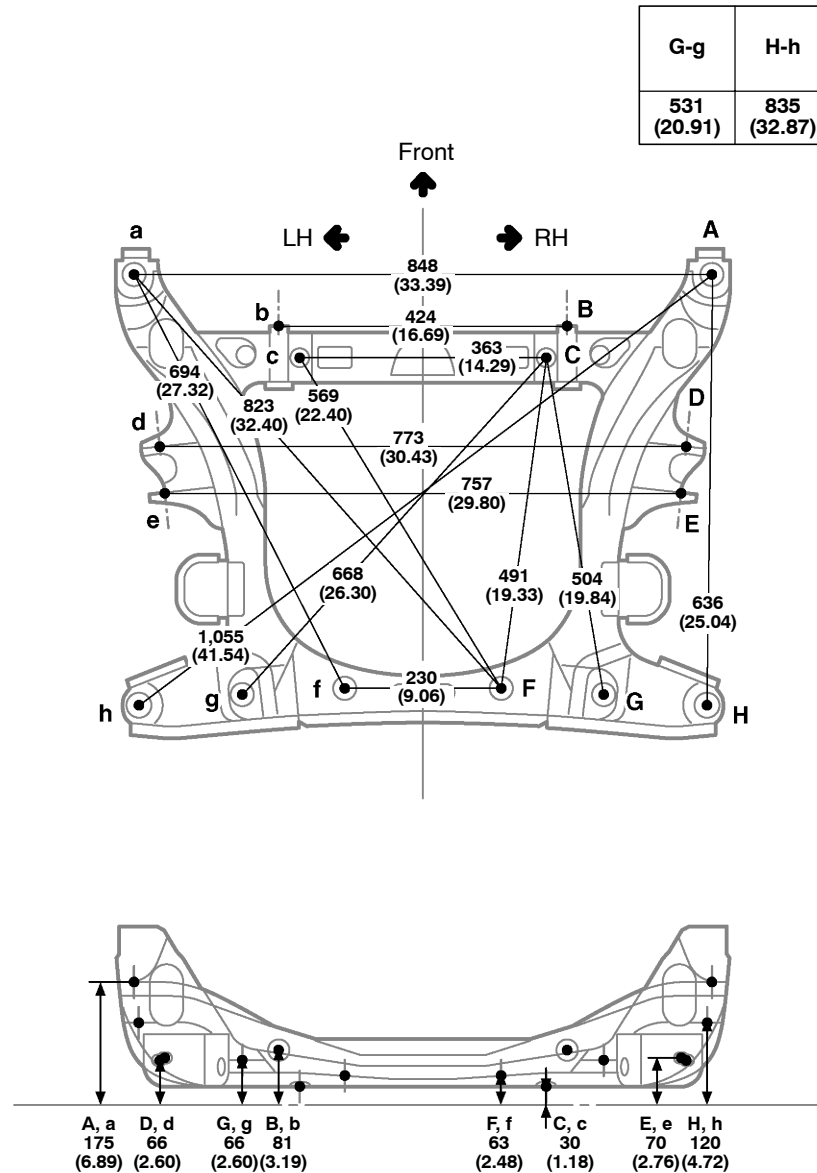

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front frame installation hole	ø 15.5 (0.610)	E, e	Lower arm installation hole	ø 23 × 14.5 (0.91 × 0.571)
B, b	Power steering gear box installation hole	ø 14.5 (0.571)	F, f	Front frame standard hole	ø 10 (0.39)
C, c	Front frame standard hole	ø 13 (0.51)	G, g	Lower arm installation hole	ø 15 (0.59)
D, d	Lower arm installation hole	ø 23 × 14.5 (0.91 × 0.571)	H, h	Lower arm installation hole	ø 24 (0.94)

FRONT SUSPENSION CROSSMEMBER
4WD

(Two-Dimensional Distance)

Suspension Member Installation Area	Each Linkage Arm Installation Area
Tolerance: within ± 2 mm (0.079 in.)	Tolerance: within ± 1.5 mm (0.059 in.)

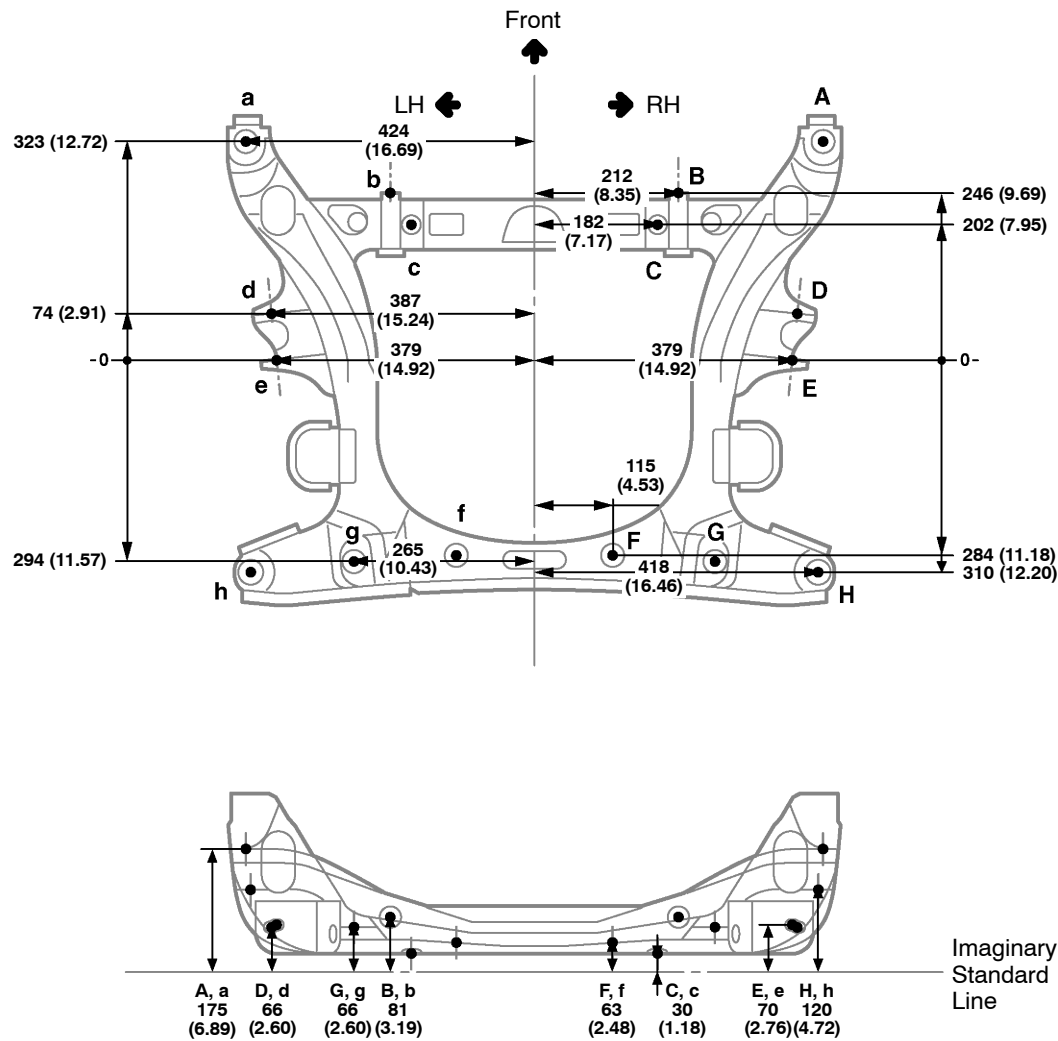


HINT: For symbols, capital letters indicate right side of vehicle,
small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front frame installation hole	ø 15.5 (0.610)	E, e	Lower arm installation hole	ø 23 × 14.5 (0.91 × 0.571)
B, b	Power steering gear box installation hole	ø 14.5 (0.571)	F, f	Front frame standard hole	ø 10 (0.39)
C, c	Front frame standard hole	ø 13 (0.51)	G, g	Lower arm installation hole	ø 15 (0.59)
D, d	Lower arm installation hole	ø 23 × 14.5 (0.91 × 0.571)	H, h	Lower arm installation hole	ø 24 (0.94)

REAR SUSPENSION CROSSMEMBER

(Three-Dimensional Distance)

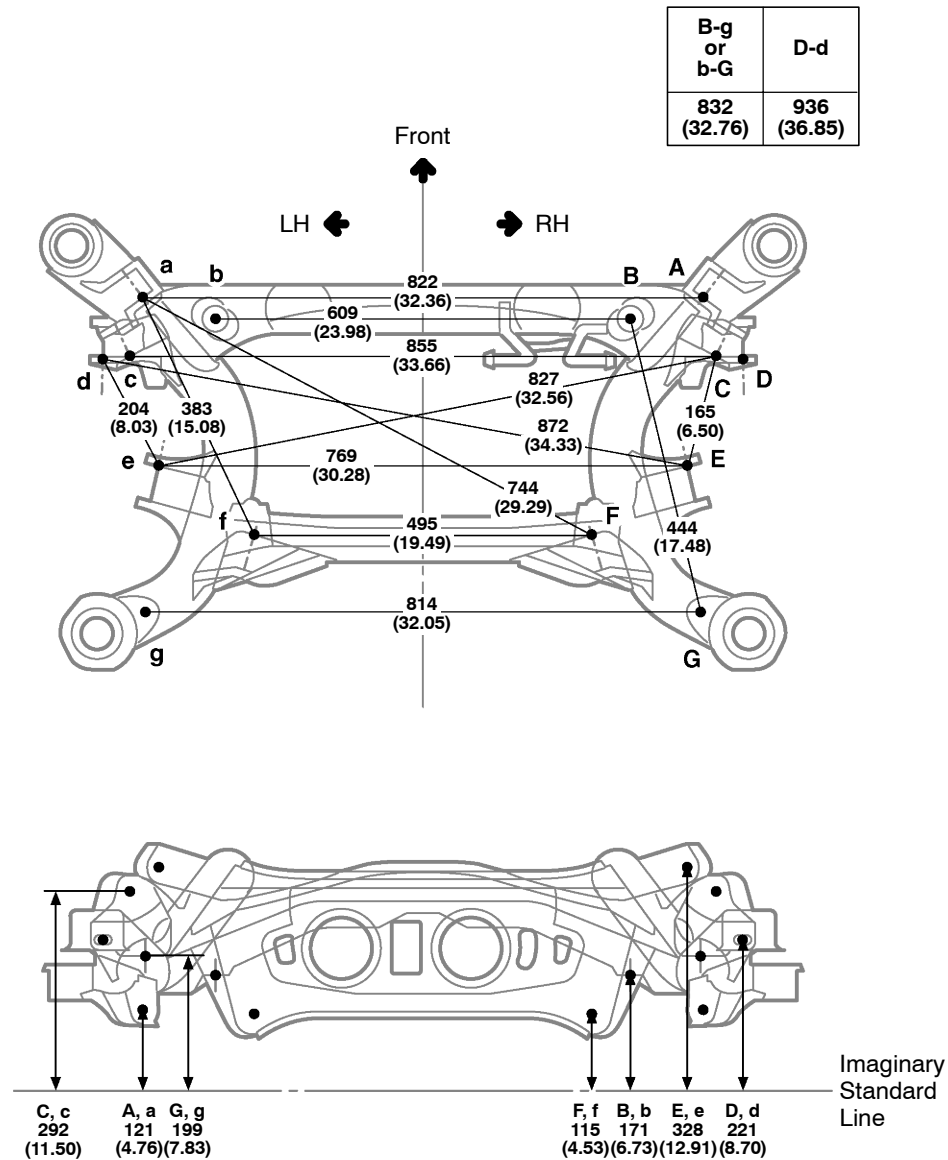

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Rear suspension arm installation hole front-rear	ø 12.2 (0.480)	E, e	Upper control arm installation hole rear-front	ø 14.2 (0.559)
B, b	Rear suspension member standard hole	ø 15 (0.59)	F, f	Rear suspension arm installation hole rear-front	ø 14.2 (0.559)
C, c	Upper control arm installation hole front-rear	ø 14.2 (0.559)	G, g	Rear suspension member standard hole	ø 15 (0.59)
D, d	Toe control arm installation hole-rear	ø 26 × 12.2 (1.02 × 0.480)	—	—	—

REAR SUSPENSION CROSSMEMBER

(Two-Dimensional Distance)

Suspension Member Installation Area	Each Linkage Arm Installation Area
Tolerance: within ± 2 mm (0.079 in.)	Tolerance: within ± 1.5 mm (0.059 in.)

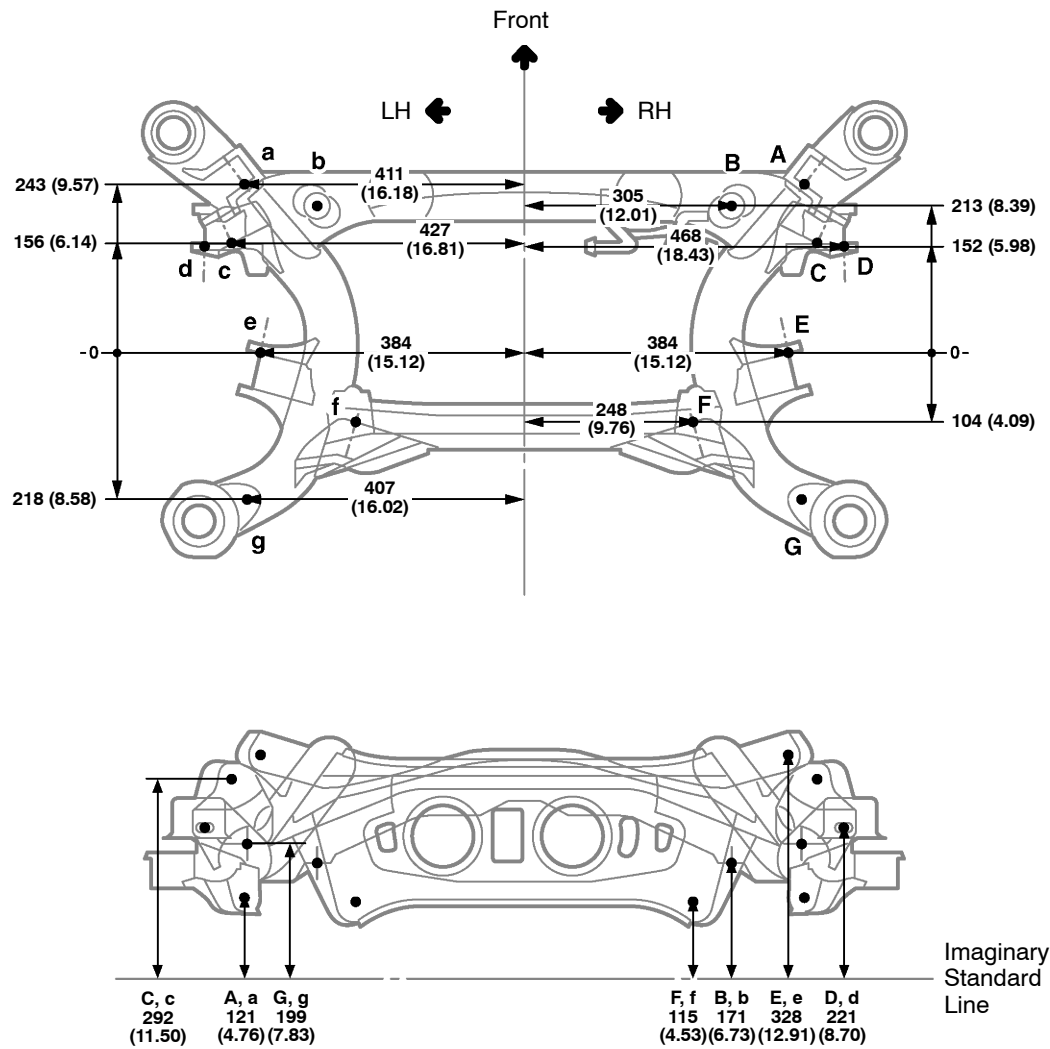

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Rear suspension arm installation hole front-rear	ø 12.2 (0.480)	E, e	Upper control arm installation hole rear-front	ø 14.2 (0.559)
B, b	Rear suspension member standard hole	ø 15 (0.59)	F, f	Rear suspension arm installation hole rear-front	ø 14.2 (0.559)
C, c	Upper control arm installation hole front-rear	ø 14.2 (0.559)	G, g	Rear suspension member standard hole	ø 15 (0.59)
D, d	Toe control arm installation hole-rear	ø 26 × 12.2 (1.02 × 0.480)	—	—	—