


BODY PANEL UNDERCOATING AREAS

HINT:


- 1) First wipe off any dirt, grease or oil with a rag soaked in silicone remover.
- 2) Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidentally coated, wipe off the coating immediately.
- 3) Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.
- 4) Do not coat parts which become hot, such as the tailpipe, or moving parts, such as the propeller shaft.
- 5) Besides the locations described below, apply undercoating to all weld points under the body to insure corrosion prevention.
- 6) Be sure to seal the edge of the flange of the member and bracket with undercoating.
- 7) If undercoat is damaged by peeling, cracks, etc., be sure to repair as necessary.
- 8) Before the undercoat apply sealer allowing rust prevention to be attained.

[2WD]

Ex. U.S.A., CANADA

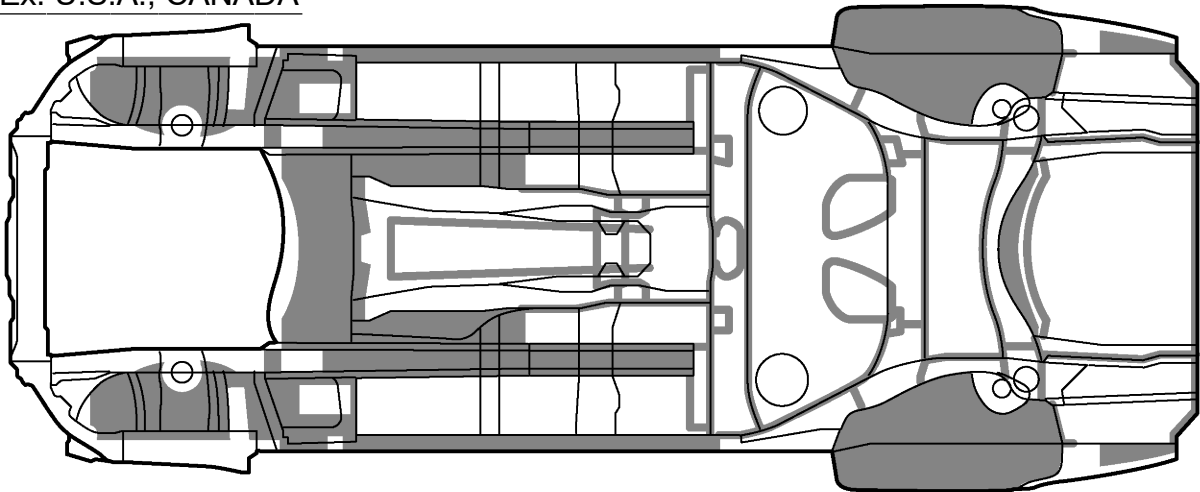

U.S.A., CANADA

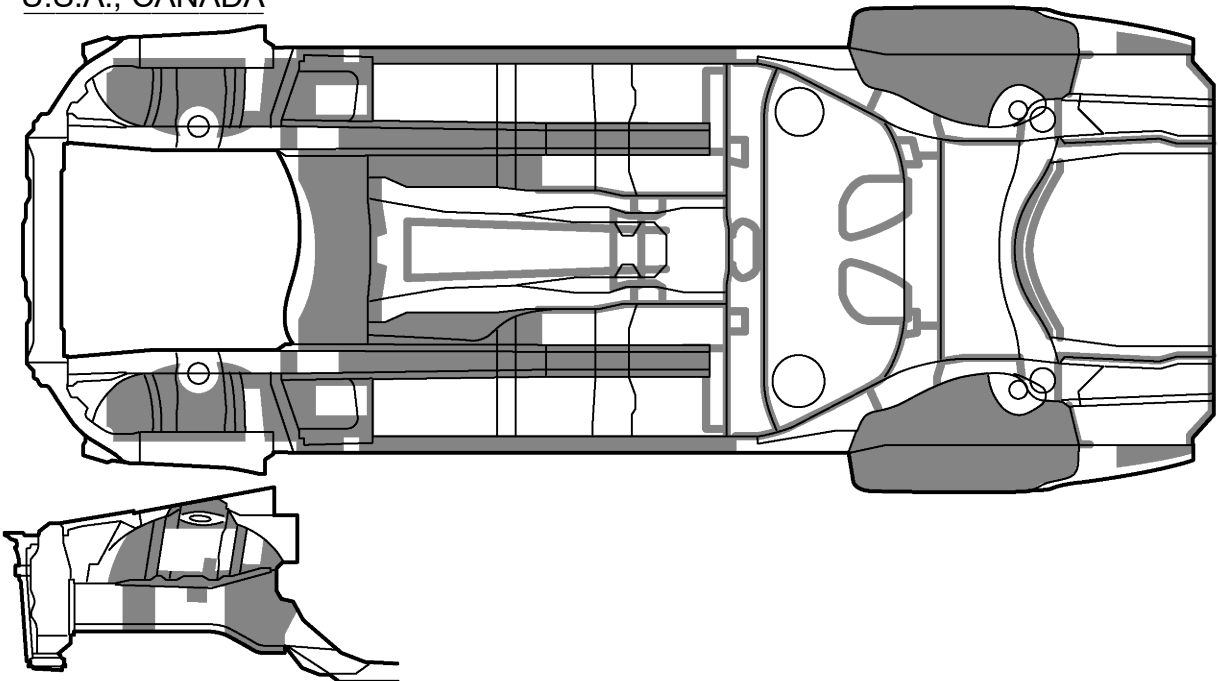


F22207

REFERENCE

Referring to the notes above, undercoating should be applied according to the specifications for your country.

[4WD]

Ex. U.S.A., CANADA

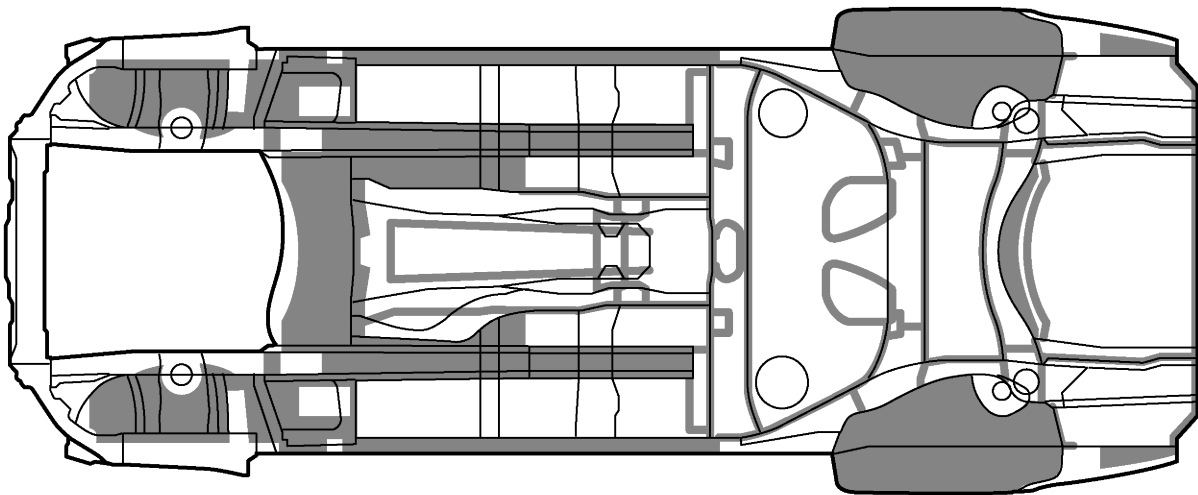

U.S.A., CANADA

