
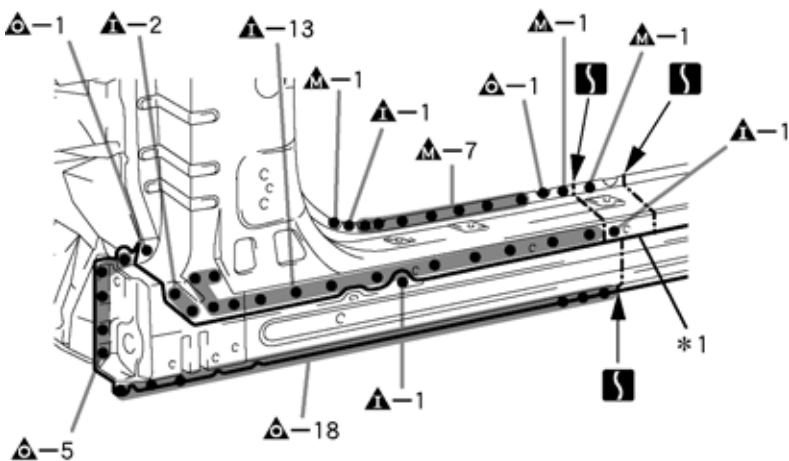
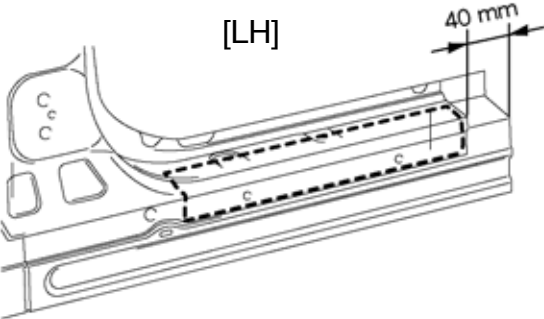
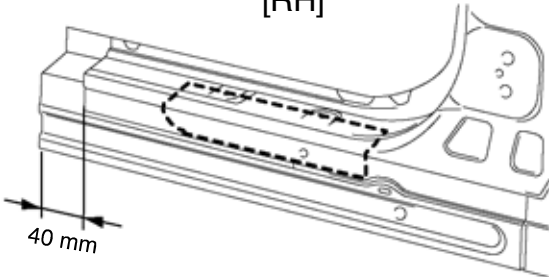
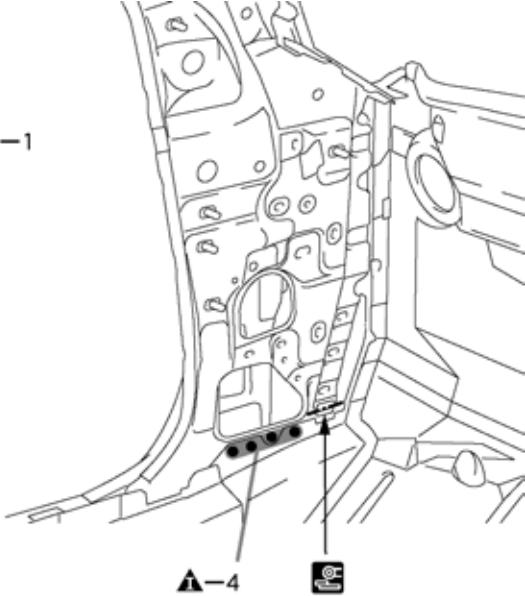
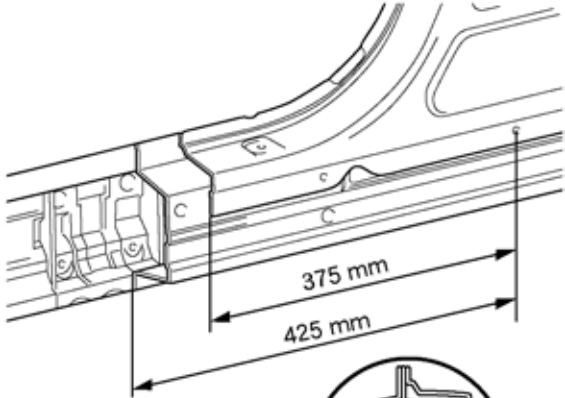
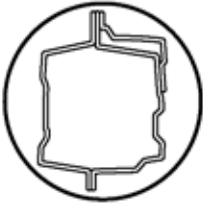


ROCKER OUTER PANEL (CUT-P)	
REPLACEMENT	 F24542A
REMOVAL	
 [LH]  40 mm [RH]  40 mm  A-4 *1  375 mm 425 mm 	
POINT 1 *1: Reuse. 2 Take care not to damage the internal reinforcement.	
40 mm (1.57 in.) 375 mm (14.76 in.) 425 mm (16.73 in.)	

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

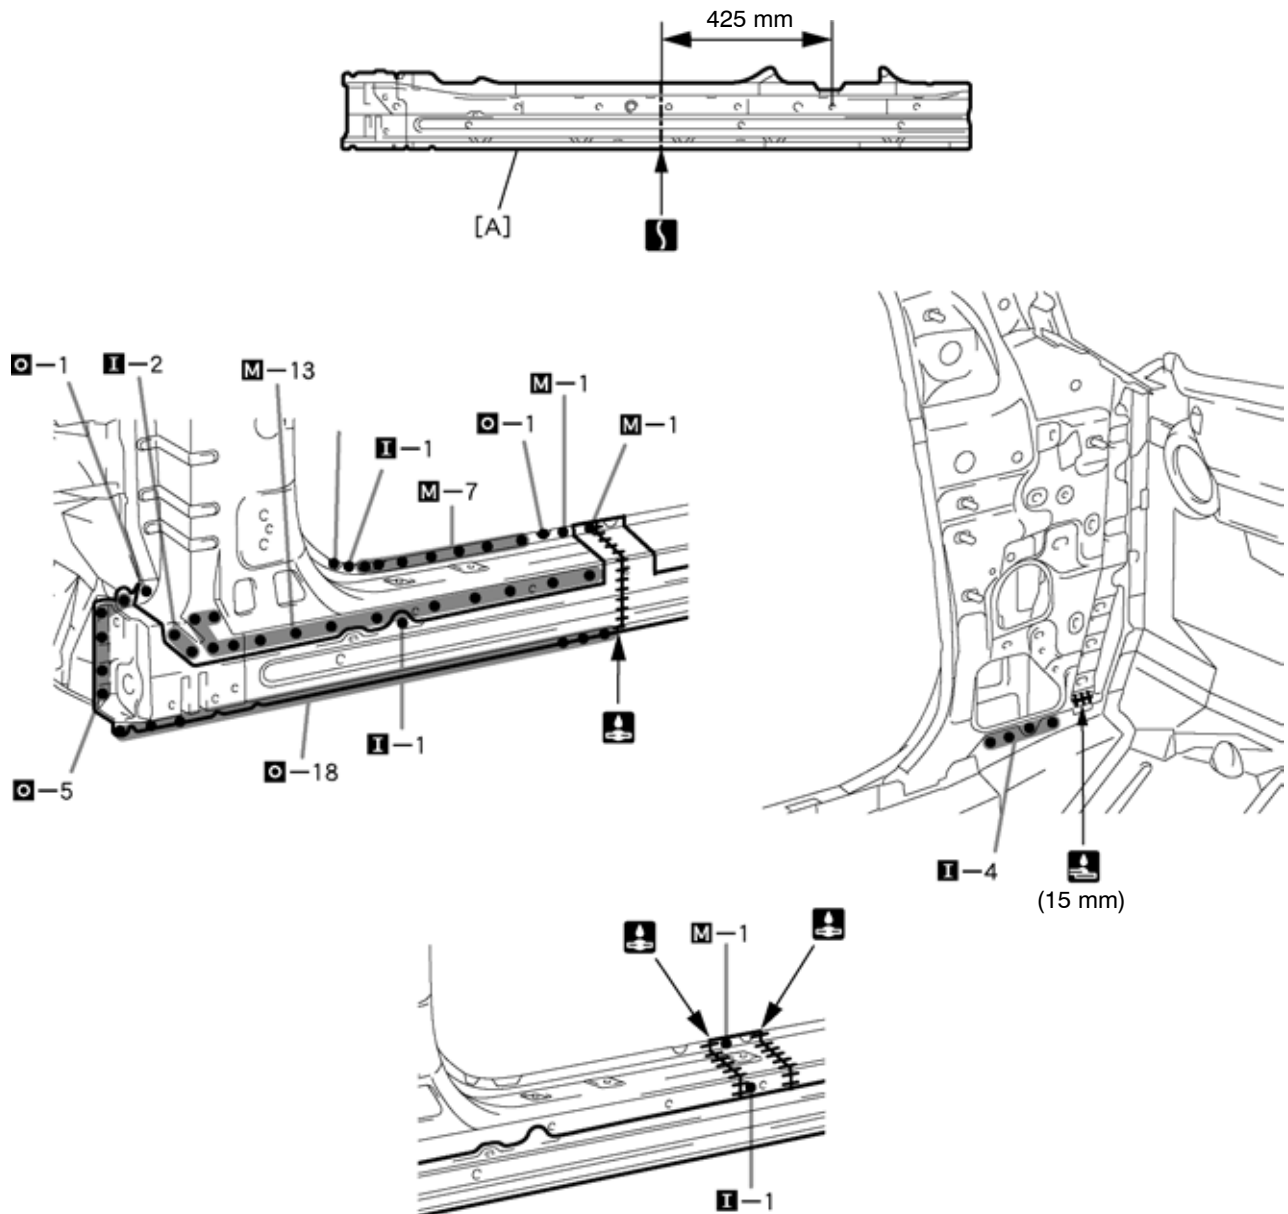

F24543

POINT

- 1 Inspect the fitting of the front door and other related parts before welding as this affects the appearance of the finish.
- 2 After welding the rocker outer panel to the vehicle side, install outer panel.

PART NAME

[A] Rocker Outer Panel

15 mm (0.59 in.)

425 mm (16.73 in.)