


BODY PANEL UNDERCOATING AREAS


HINT:

- 1) First wipe off any dirt, grease or oil with a rag soaked in silicone remover.
- 2) Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidentally coated, wipe off the coating immediately.
- 3) Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.
- 4) Do not coat parts which become hot such as the tailpipe, and moving parts such as the propeller shaft.
- 5) Apply under coating to all weld points under the body to ensure corrosion prevention at every location except the areas below.
- 6) Be sure to seal the edge of the flange of the member and bracket with undercoating.
- 7) Be sure to repair the under coating as necessary if there are signs of damage such as cracking or peeling.
- 8) Apply sealer before applying the under coat for rust prevention.

[2WD]

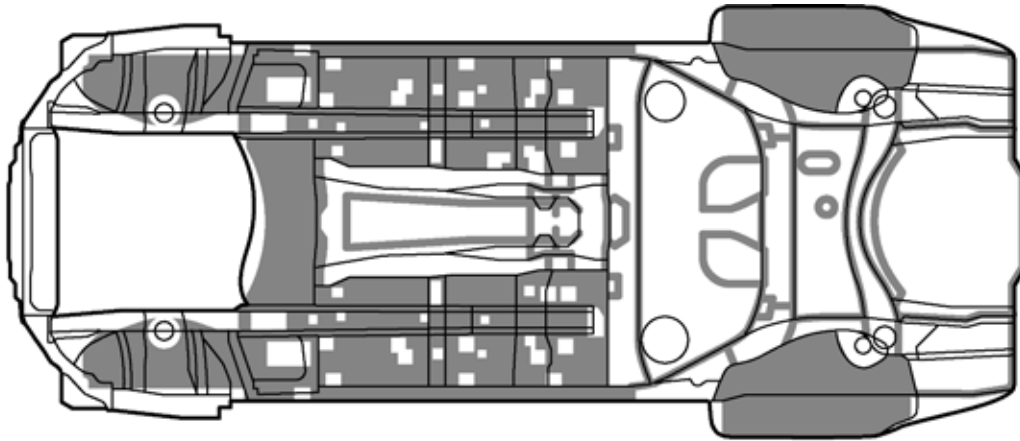

[4WD] USA only

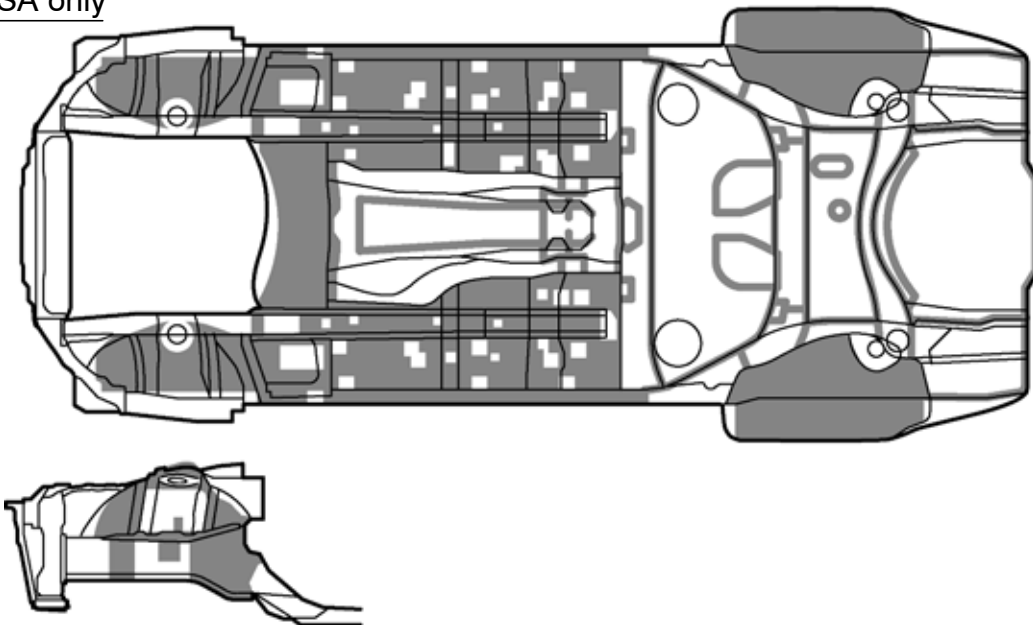

F24598

REFERENCE

The undercoating should be applied according to the specifications for your country while referring to the notes above.