





REAR FLOOR SIDE REAR MEMBER (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-63](#))
2. REMOVE REAR FLOOR SIDE REAR MEMBER
 - (a) Remove the rear floor pan to quarter panel extension at the same time.

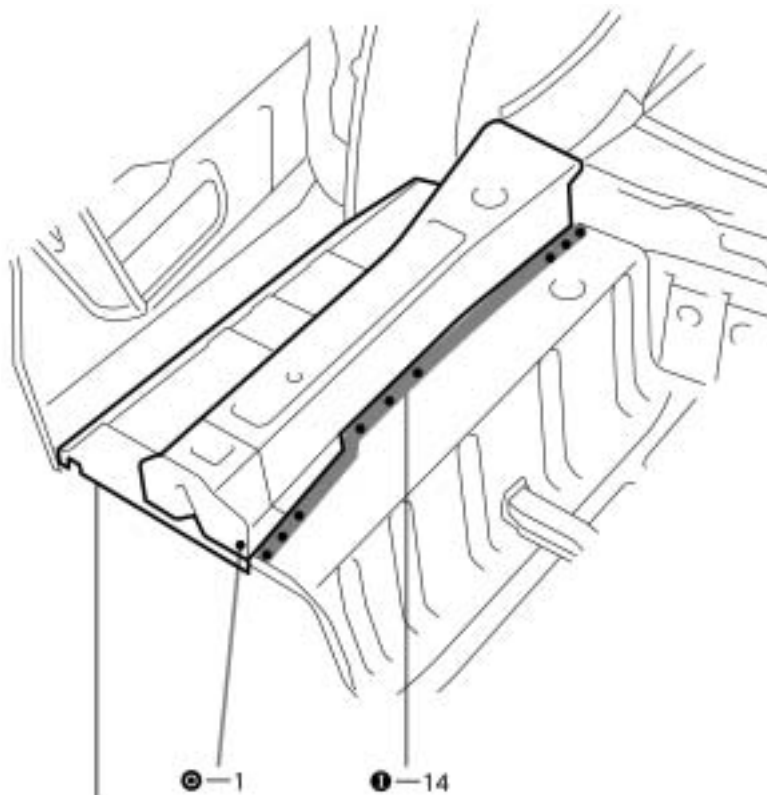


Rear Floor Pan to
Quarter Panel Extension


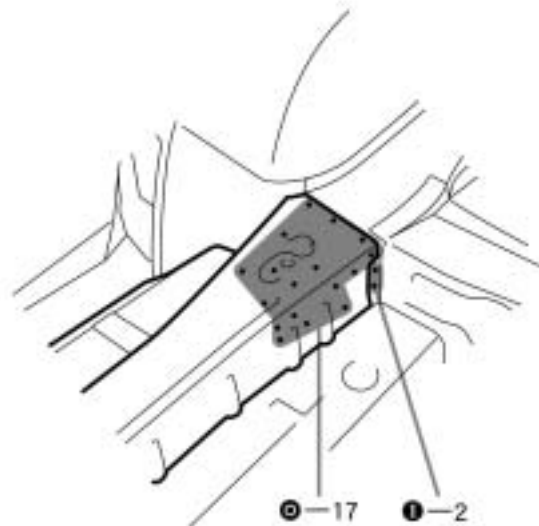


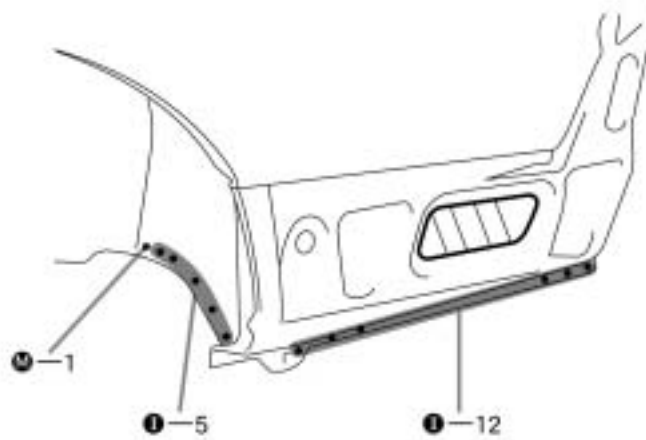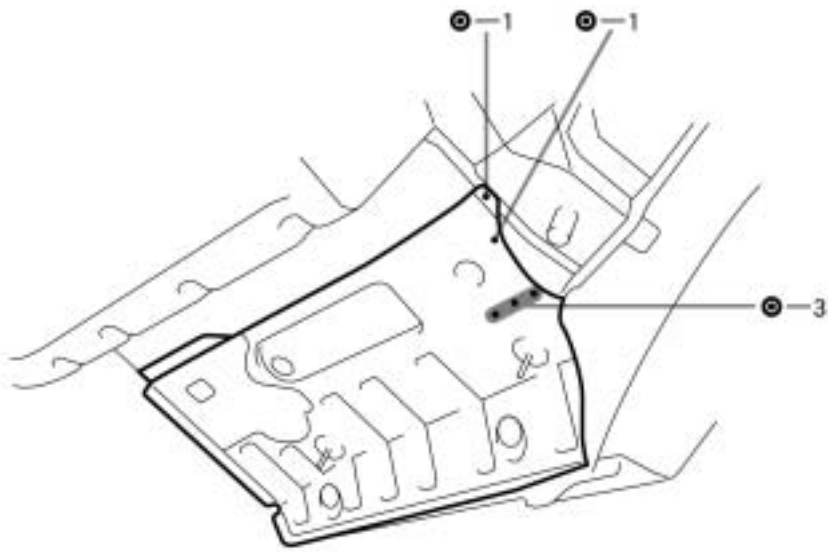

3. INSTALL REAR FLOOR SIDE REAR MEMBER

- (a) After welding the rear floor side rear member, install the rear floor pan to quarter panel extension.

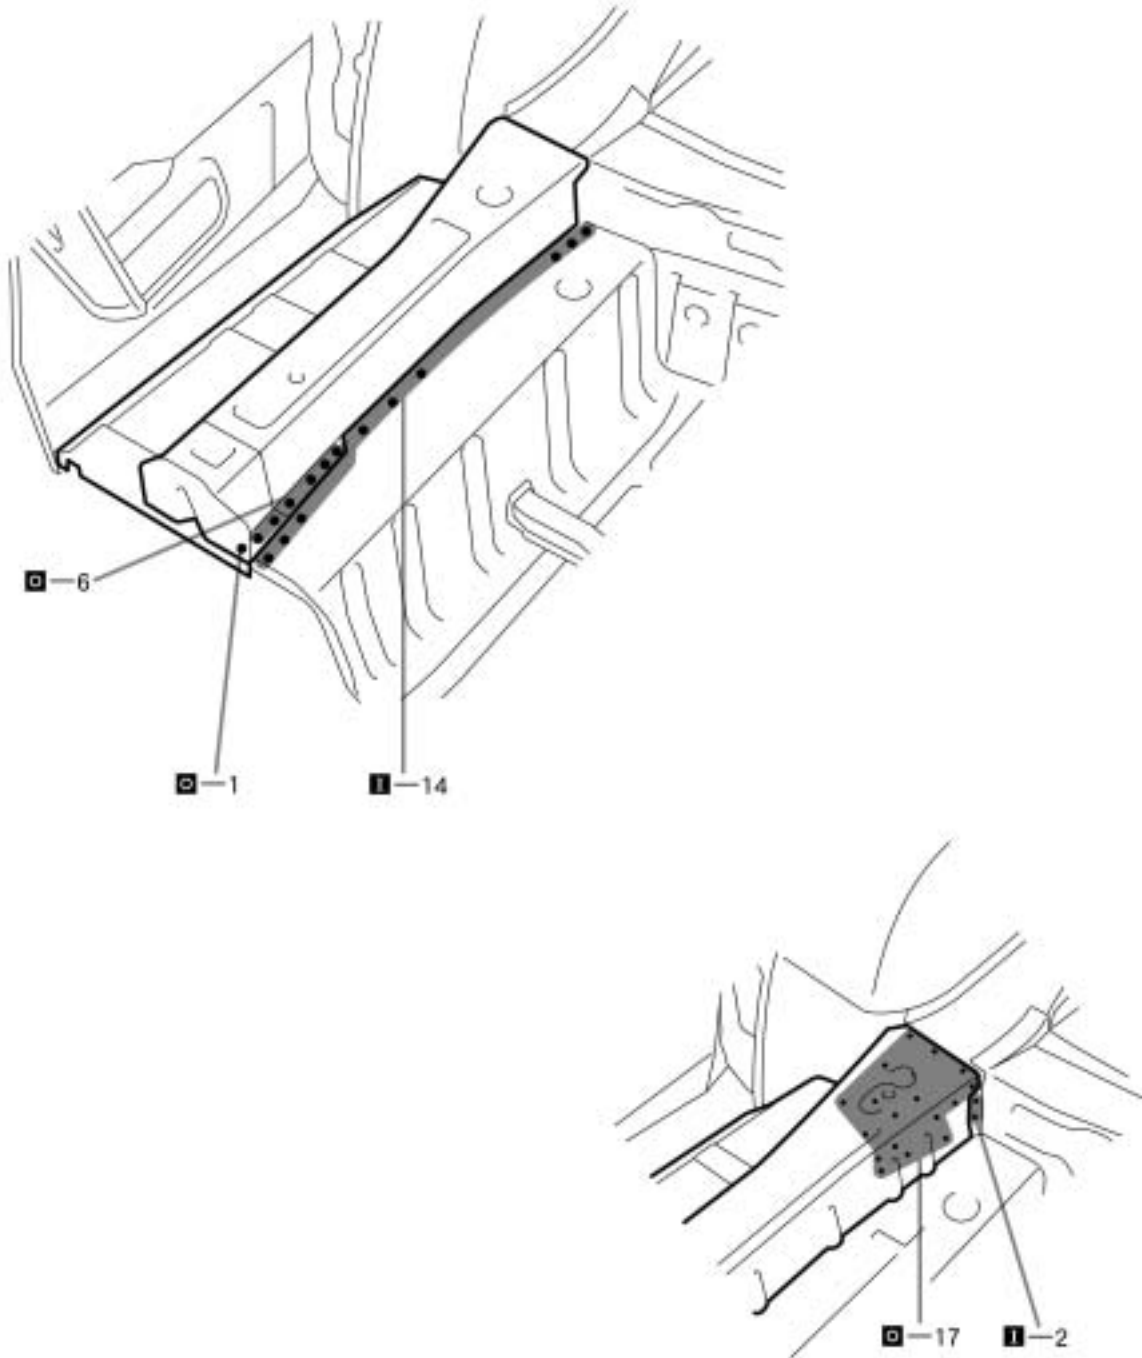

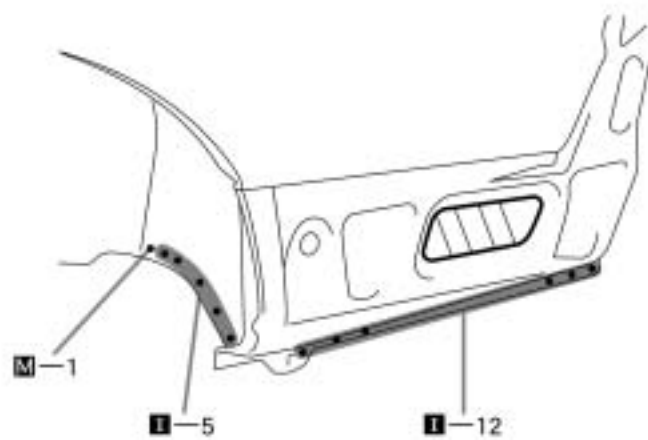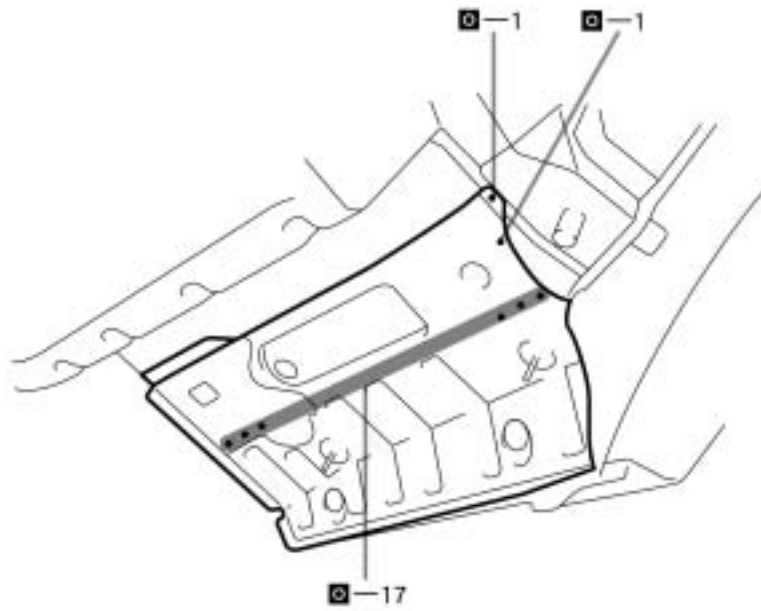

4. MEASURING THE UNDER BODY DIMENSIONS ([See page BP-88](#))
5. INSTALL BODY LOWER BACK PANEL ([See page BP-63](#))
6. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
7. APPLYING UNDER COATING ([See page PC-7](#))
8. INSTALL SILENCER SHEET ([See page PC-11](#))
9. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.