


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

*1 : Europe
*2 : Australia

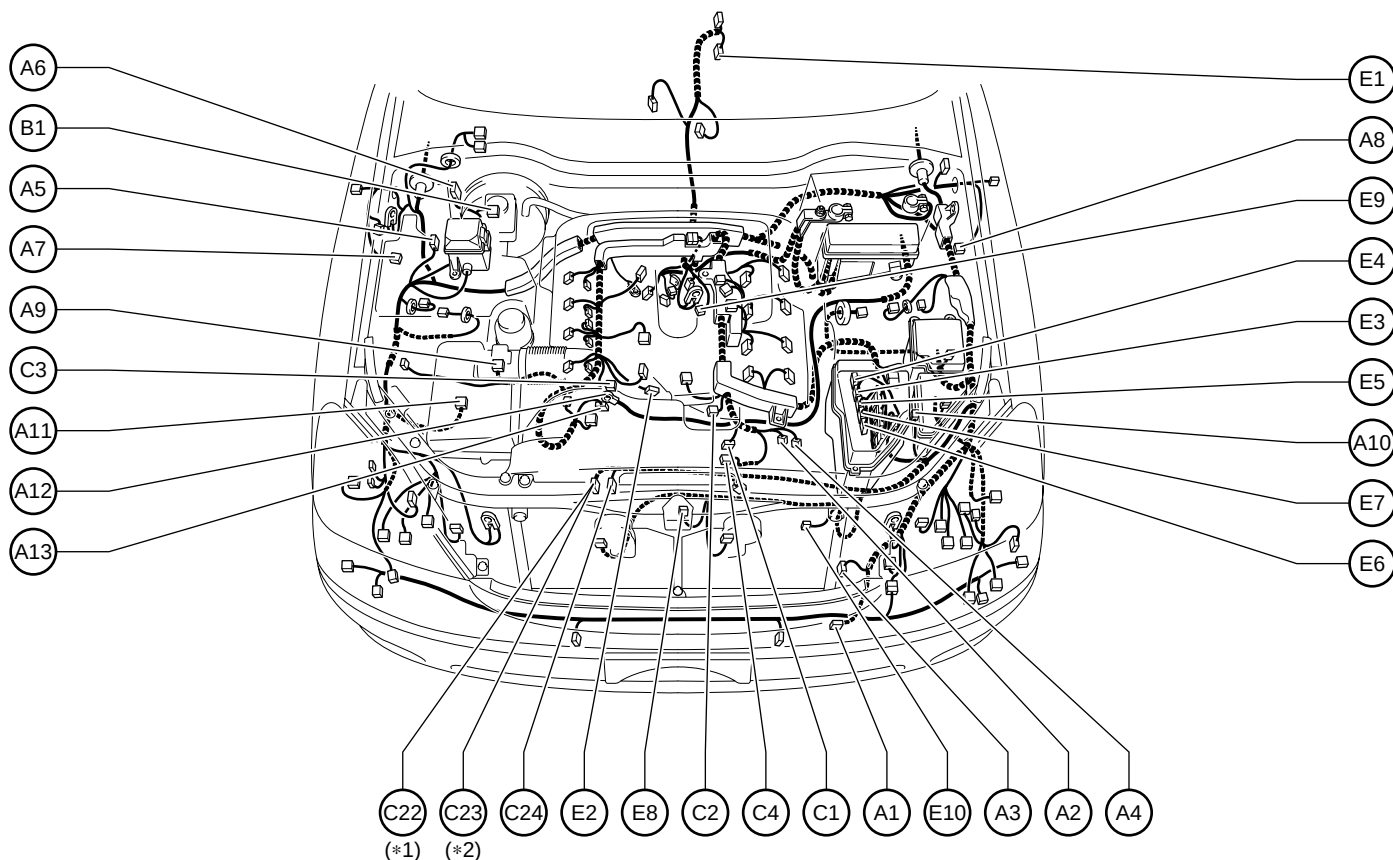

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Pressure Sensor
- A 4 A/C Solenoid
- A 5 ABS & TRC & VSC Actuator
- A 6 ABS & TRC & VSC Actuator
- A 7 ABS Speed Sensor and Pad Wear Indicator SW
Front RH
- A 8 ABS Speed Sensor Front LH
- A 9 Air Flow Meter
- A10 Airbag Sensor Front LH
- A11 Airbag Sensor Front RH
- A12 Alternator
- A13 Alternator

- B 1 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve LH
- C 3 Camshaft Timing Oil Control Valve RH
- C 4 Crankshaft Position Sensor
- C22 Cooling Fan ECU
- C23 Cooling Fan ECU
- C24 Cooling Fan ECU

- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 Engine and ECT ECU
- E 4 Engine and ECT ECU
- E 5 Engine and ECT ECU
- E 6 Engine and ECT ECU
- E 7 Engine and ECT ECU
- E 8 Engine Hood Courtesy SW
- E 9 Engine Oil Level Sensor
- E10 Exhaust Gas Sensor