


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

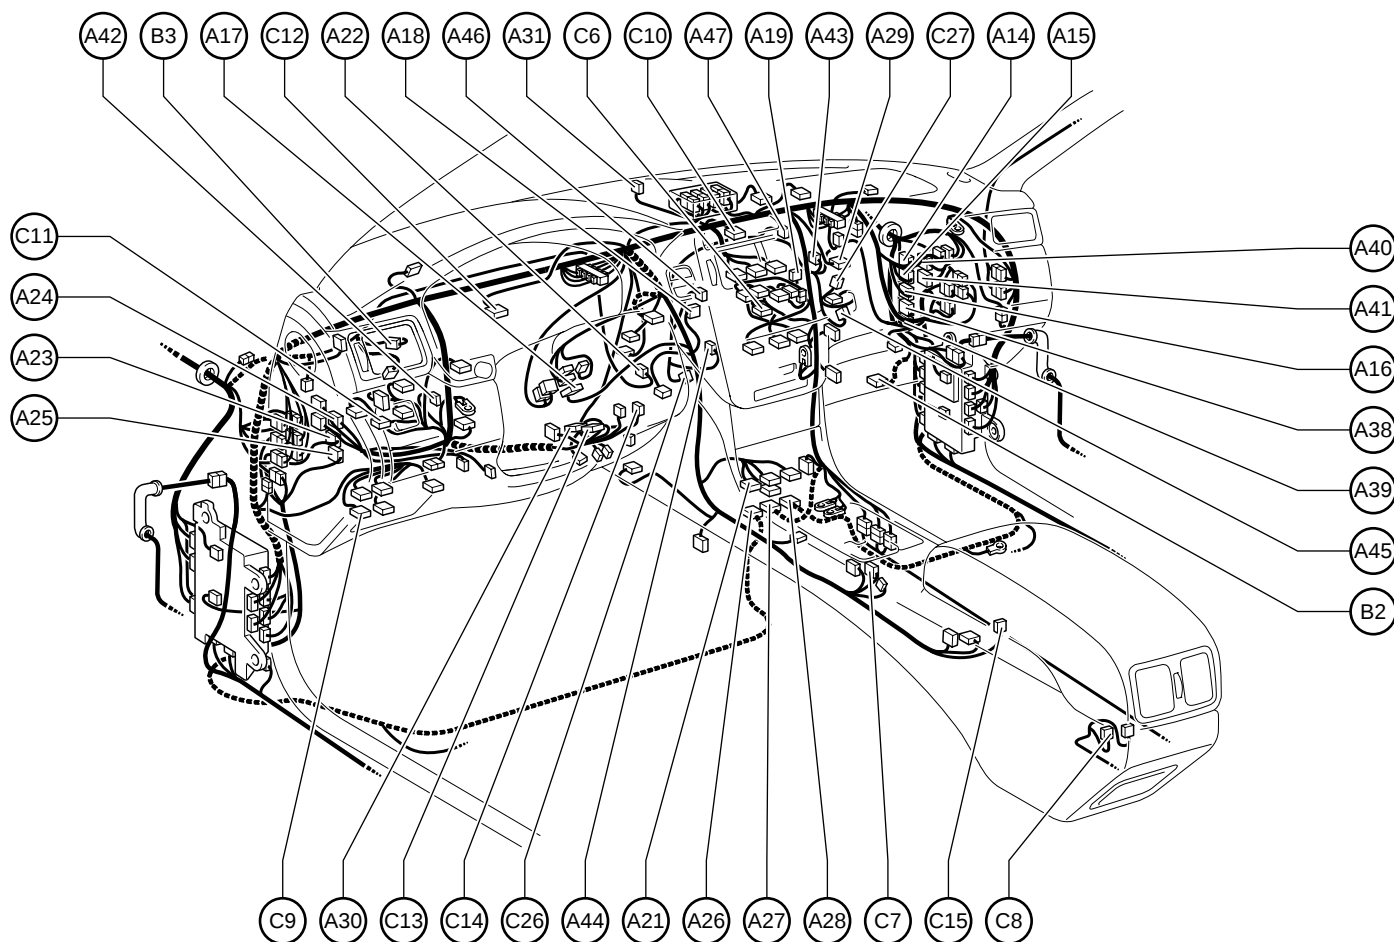

A14 A/C Control Assembly
 A15 A/C Control Assembly
 A16 A/C Control Assembly
 A17 A/C Room Temp. Sensor
 A18 A/C Room Temp. SW (Driver's Side)
 A19 A/C Room Temp. SW (Front Passenger's Side)
 A21 Absorber Control SW
 A22 Accel Position Sensor
 A23 Air Suspension ECU
 A24 Air Suspension ECU
 A25 Air Suspension ECU
 A26 Airbag Sensor Assembly
 A27 Airbag Sensor Assembly
 A28 Airbag Sensor Assembly
 A29 Airbag Squib (Front Passenger Airbag Assembly)
 A30 Airbag Squib (Steering Wheel Pad)
 A31 A/C Solar Sensor (Front)
 Automatic Light Control Sensor
 A38 A/C Control Assembly
 A39 A/C Control Assembly
 A40 AFS ECU
 A41 AFS ECU
 A42 AFS Off SW
 A43 Air Inlet Control Servo Motor
 A44 Air Mix Control Servo Motor (Driver Side)
 A45 Air Mix Control Servo Motor (Front Passenger Side)
 A46 Air Vent Mode Control Servo Motor (Driver Side)
 A47 Air Vent Mode Control Servo Motor
 (Front Passenger Side)

B 2 Blower Motor
 B 3 Brake Pedal Load Sensing SW
 C 6 Center Cluster Integration Panel
 C 7 Cigarette Lighter (Front)
 C 8 Cigarette Lighter (Rear)
 C 9 Clearance Sonar Buzzer (Front)
 C10 Clock
 C11 Coin Box Illumination
 C12 Combination Meter
 C13 Combination SW
 C14 Combination SW
 C15 Console Box Illumination
 C26 Cool Air Bypass Servo Motor (Driver Side)
 C27 Cool Air Bypass Servo Motor (Front Passenger Side)