


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

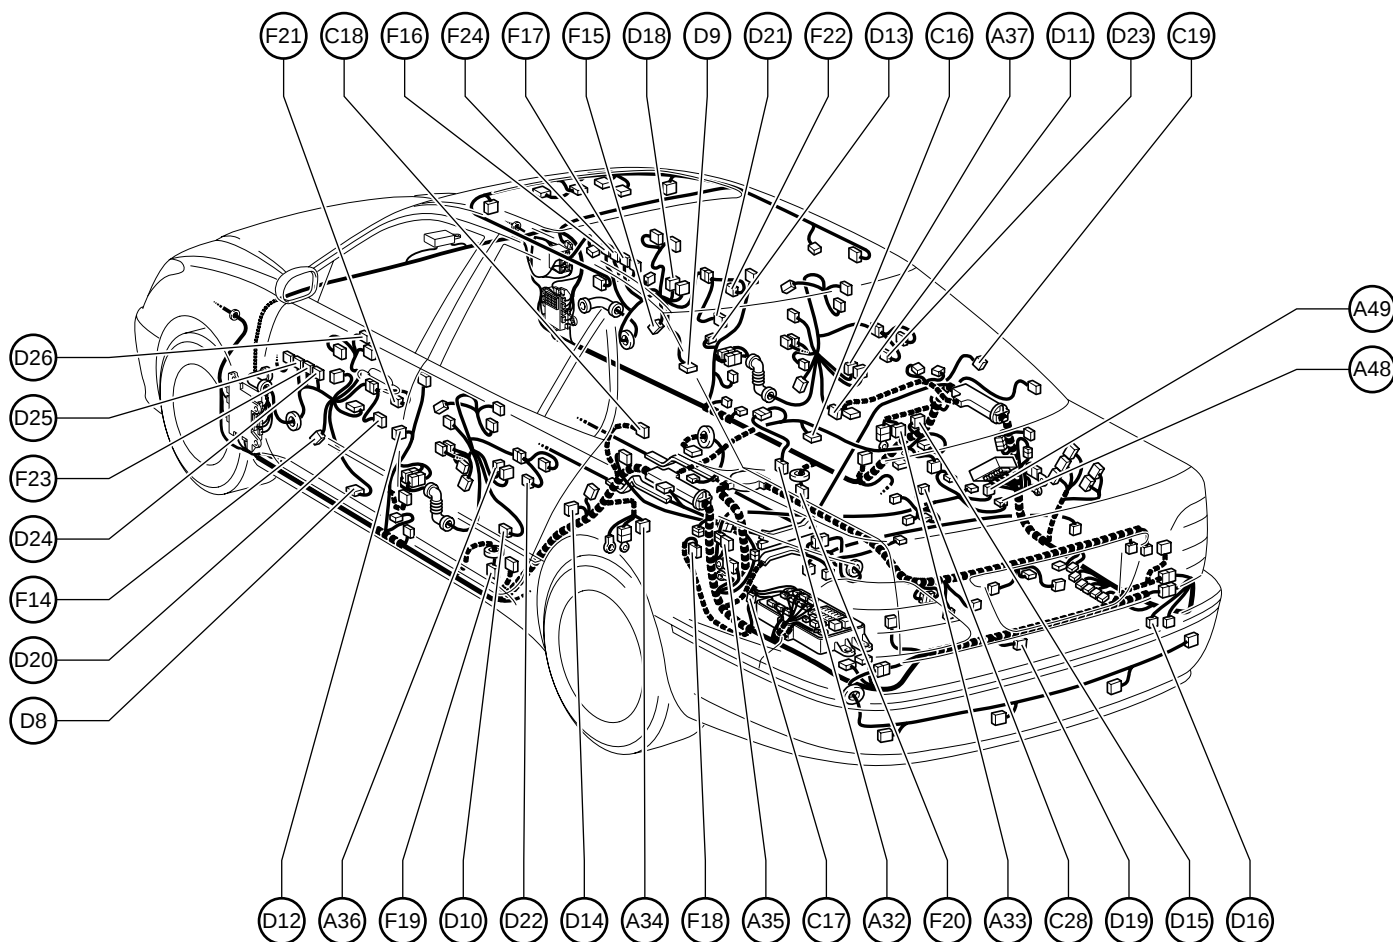

A32 A/C Solar Sensor (Rear)
 A33 ABS Speed Sensor Rear RH
 Pad Wear Indicator SW Rear RH
 A34 ABS Speed Sensor Rear LH
 A35 Acceleration Sensor
 A36 Ashtray Illumination Rear LH
 A37 Ashtray Illumination Rear RH
 A48 A/C Amplifier
 A49 Air Purifier Light

C16 Clearance Sonar Buzzer (Rear)
 C17 Clearance Sonar ECU
 C18 Curtain Shield Airbag Squib LH
 C19 Curtain Shield Airbag Squib RH
 C28 Cool Box Illumination

D 8 Door Courtesy Light Front LH
 D 9 Door Courtesy Light Front RH
 D10 Door Courtesy Light Rear LH
 D11 Door Courtesy Light Rear RH
 D12 Door Courtesy SW Front LH
 D13 Door Courtesy SW Front RH
 D14 Door Courtesy SW Rear LH
 D15 Door Courtesy SW Rear RH

D16 Door Lock Control Receiver
 D18 Door Lock Control SW Front RH
 D19 Door Lock SW (Luggage)
 D20 Door Oscillator Front LH
 D21 Door Oscillator Front RH
 D22 Door Oscillator Rear LH
 D23 Door Oscillator Rear RH
 D24 Driver Door ECU
 D25 Driver Door ECU
 D26 Driving Position Memory SW

F 14 Front Door Speaker LH
 F 15 Front Door Speaker RH
 F 16 Front Passenger Door ECU
 F 17 Front Passenger Door ECU
 F 18 Fuel Lid Opener Motor
 F 19 Fuel Pump
 Fuel Sender (Main)
 F 20 Fuel Sender (Sub)
 F 21 Front Door Outside Handle LH
 F 22 Front Door Outside Handle RH
 F 23 Front Door with Motor Lock Assembly LH
 F 24 Front Door with Motor Lock Assembly RH