


VEHICLE LIFT AND SUPPORT LOCATIONS

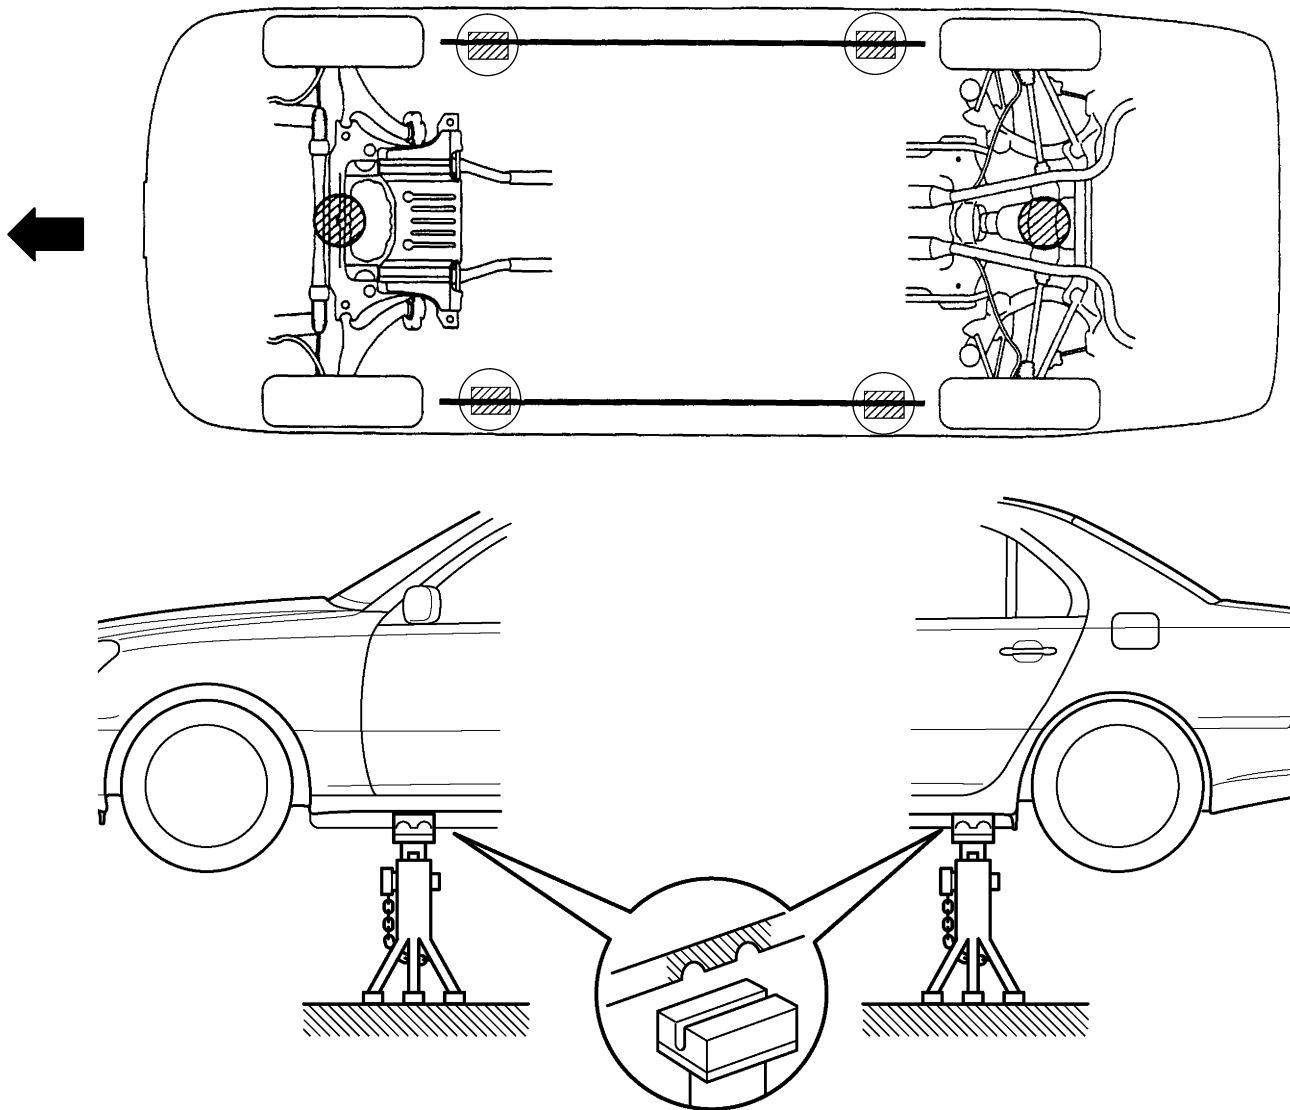

JACK POSITION

Front - - - - - Front frame
 Rear - - - - - Rear suspension member

CAUTION :


When jacking up the front and rear, make sure the **vehicle** is not carrying any extra weight.

PANTOGRAPH JACK POSITION

SUPPORT POSITION

Safety stand and swing arm type lift - - - - -

Plate Type Lift

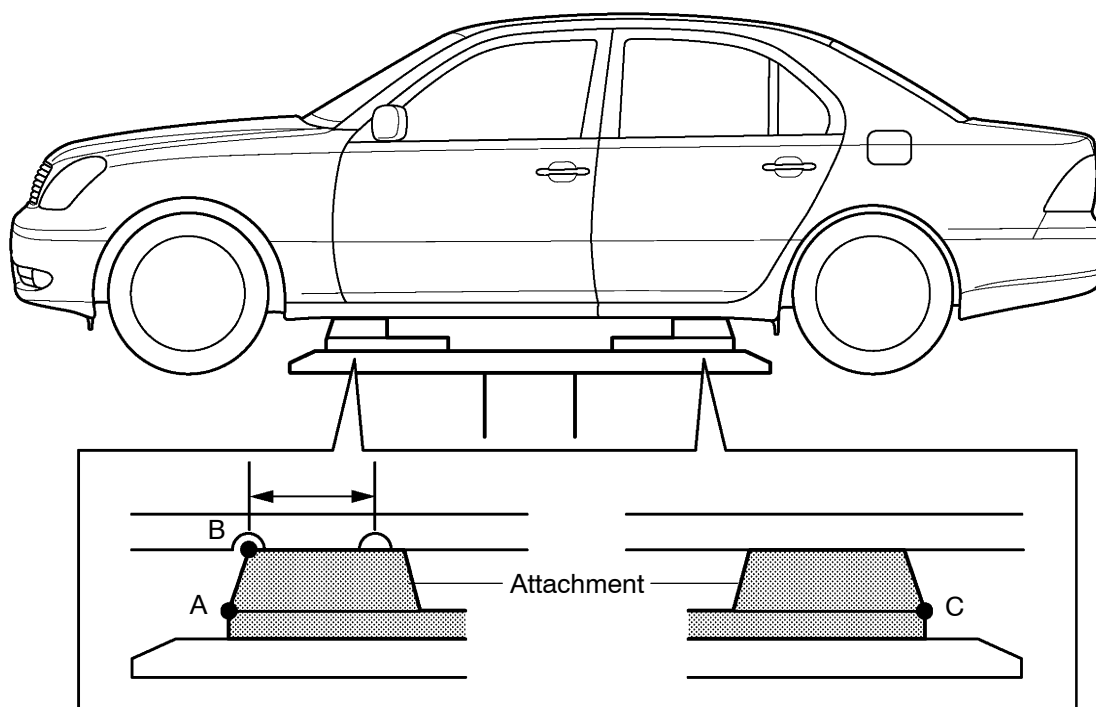

NOTICE :

Do not set an attachment onto any areas other than area (C) of the body rocker panel moulding indicated in the illustration.

HINT:

Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Place the attachments at the ends of the rubber plate surface, under the vehicle lift pad (A and C in the illustration)
- Raise the plate slightly and reposition the car so the top of the attachment (B in the illustration) is aligned with the front side notch in the vehicle rocker flange.

Attachment dimensions

