

CD CANNOT BE EJECTED**INSPECTION PROCEDURE****1 CHECK RADIO RECEIVER ASSY**

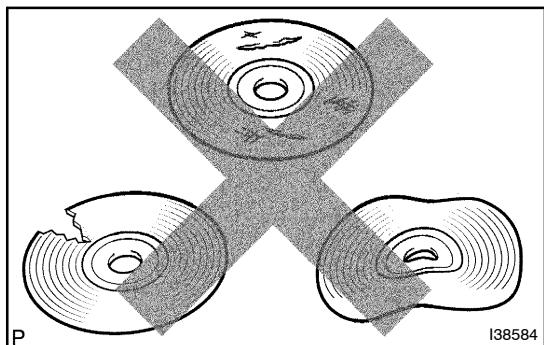
- (a) Turn the ignition switch to the ACC position.
(b) Press the eject switch for 5 seconds, and check if the disc is ejected.

OK: The disc is ejected.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1660)**

OK

2 CHECK THE CD

- (a) Check that the CD is not deformed or cracked.

OK: No deformations or cracks appear on the CD.

NG

REPLACE THE CD

OK

3 CHECK RADIO RECEIVER ASSY

- (a) Insert another CD and check if it is ejected.

OK: The disc is ejected.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PAGE 67-5)**

OK

NORMAL OPERATION