


CD SOUND SKIPS

INSPECTION PROCEDURE

1 CHECK THE CD

- (a) Check the CD.

OK: The CD is clean.

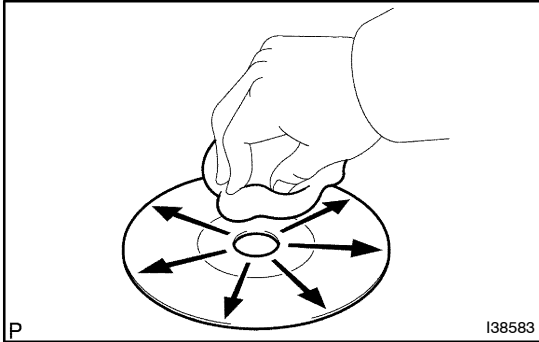

HINT:

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:


Do not use conventional record cleaner or anti-static preservative.

NG

CLEAN THE CD

OK

2 CHECK THE CD

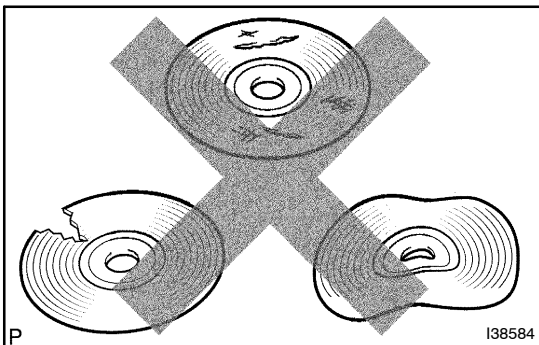

- (a) Check that the CD is not deformed or cracked.

OK: No deformations or cracks appear on the CD.

NG

REPLACE THE CD

OK

3 CHECK USING ANOTHER CD

- (a) Check using another CD.

- (1) Check if the problem recurs using another CD.

OK: The problem does not recur.

NG

REPLACE THE CD

OK

4 CHECK RADIO RECEIVER ASSY

(a) Check the radio receiver assy installation condition.

(1) Check that the radio receiver assy is properly installed ([see page 67-5](#)).

OK: Radio receiver assy is properly installed.

NG

REINSTALL THE RADIO RECEIVER ASSY PROPERLY

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
([SEE PAGE 05-1560](#))**