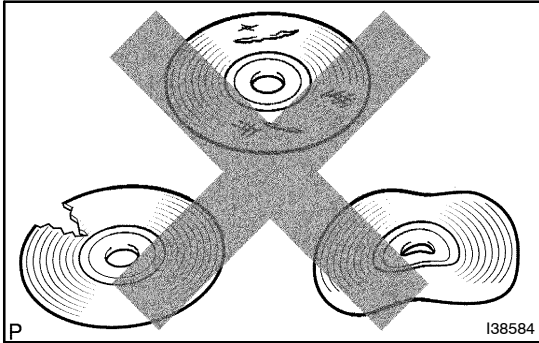


CURRENT POSITION DISPLAY DOES NOT APPEAR**INSPECTION PROCEDURE****1 CHECK THE MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG**REPLACE THE MAP DISC****OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1771)**