




LOCATION

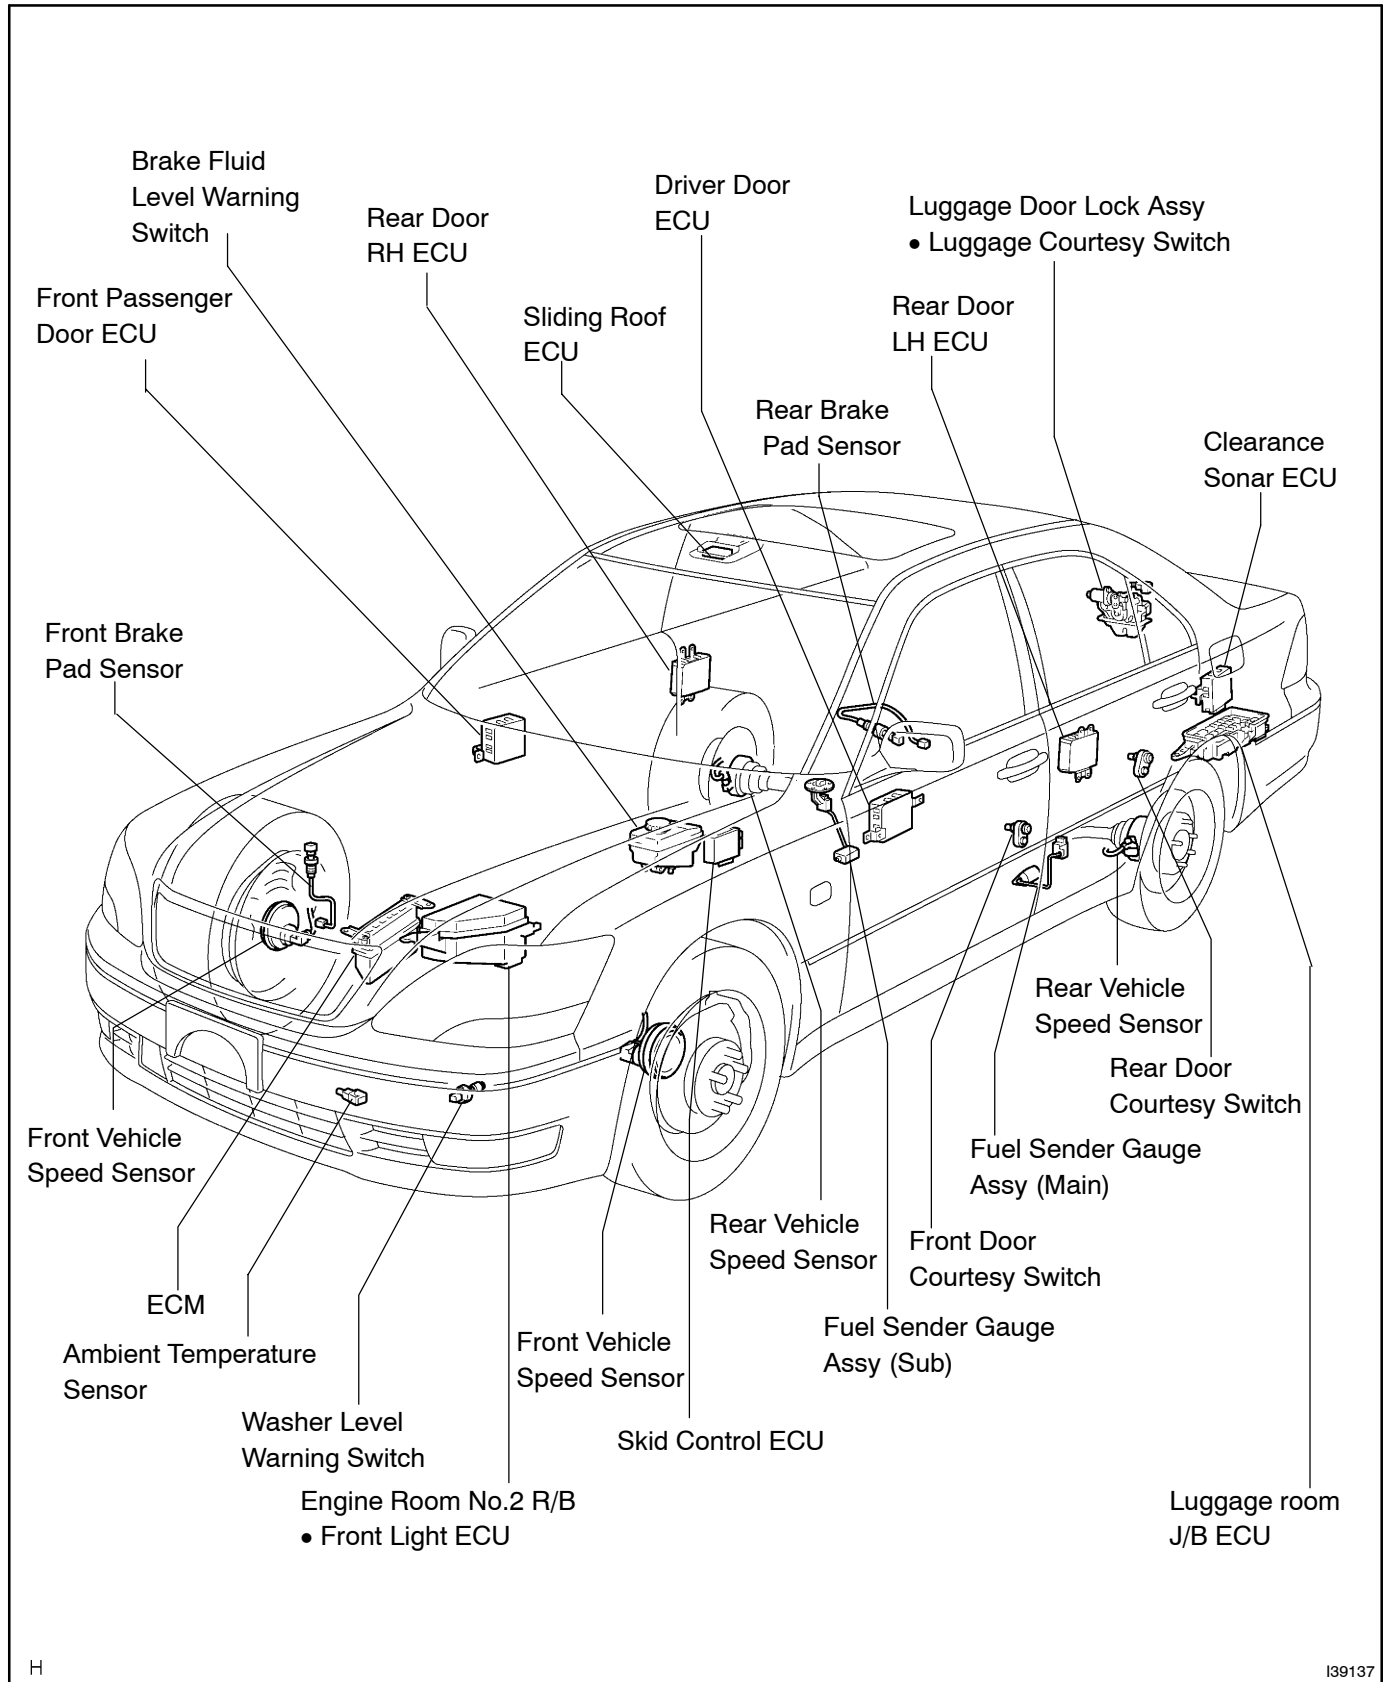

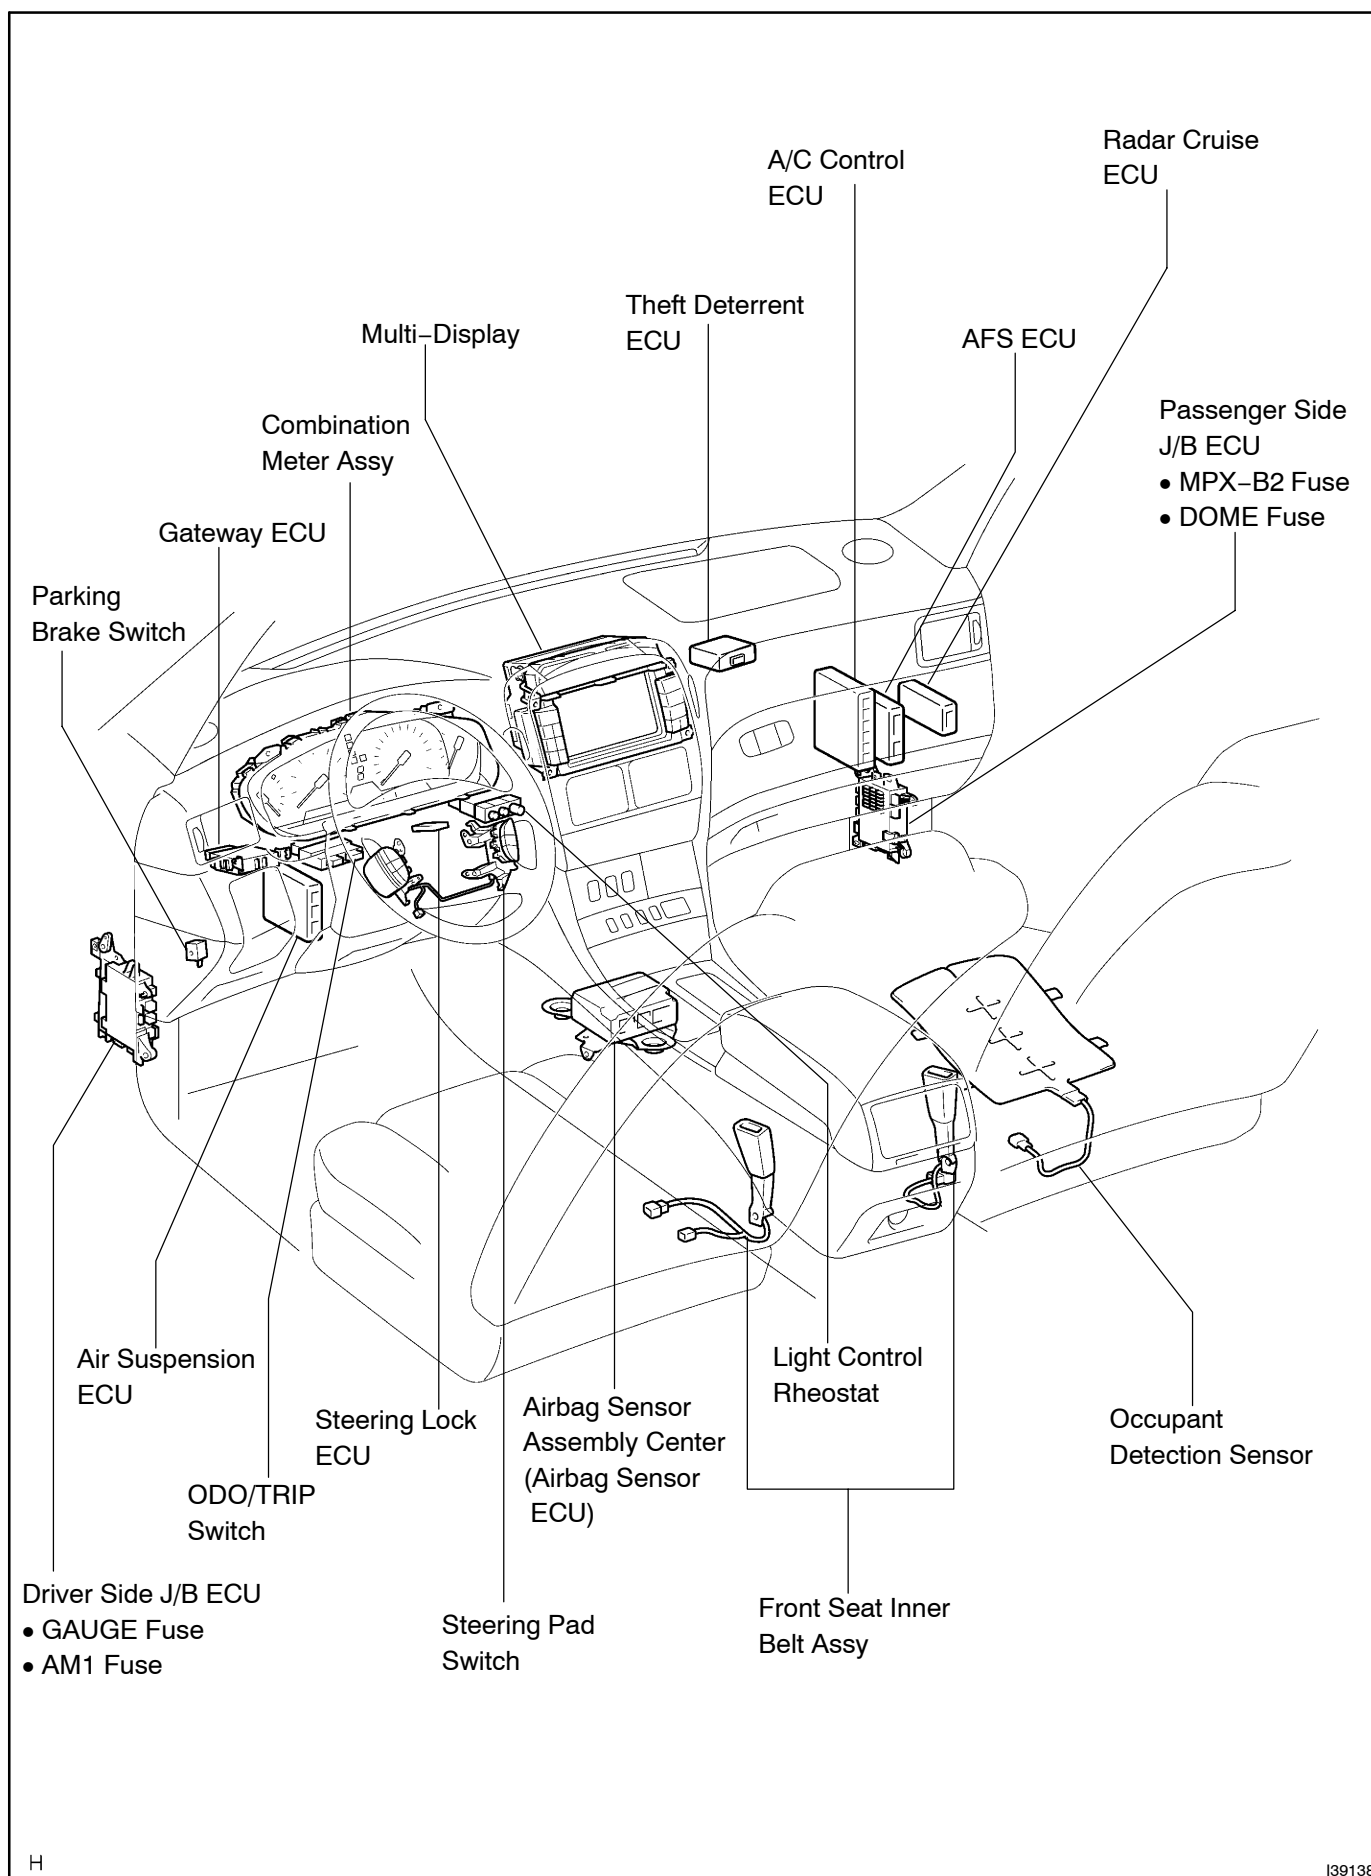

E.F.I Engine Coolant
Temperature Sensor

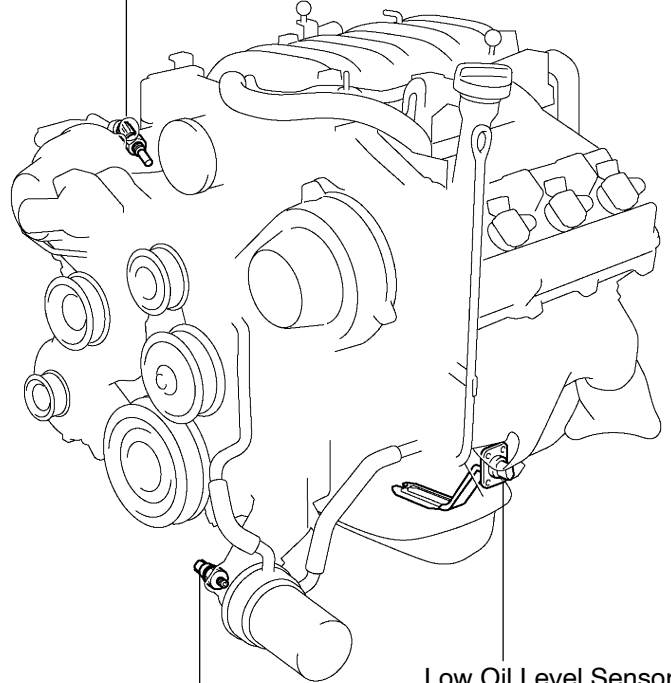

Low Oil Pressure Switch

Low Oil Level Sensor