

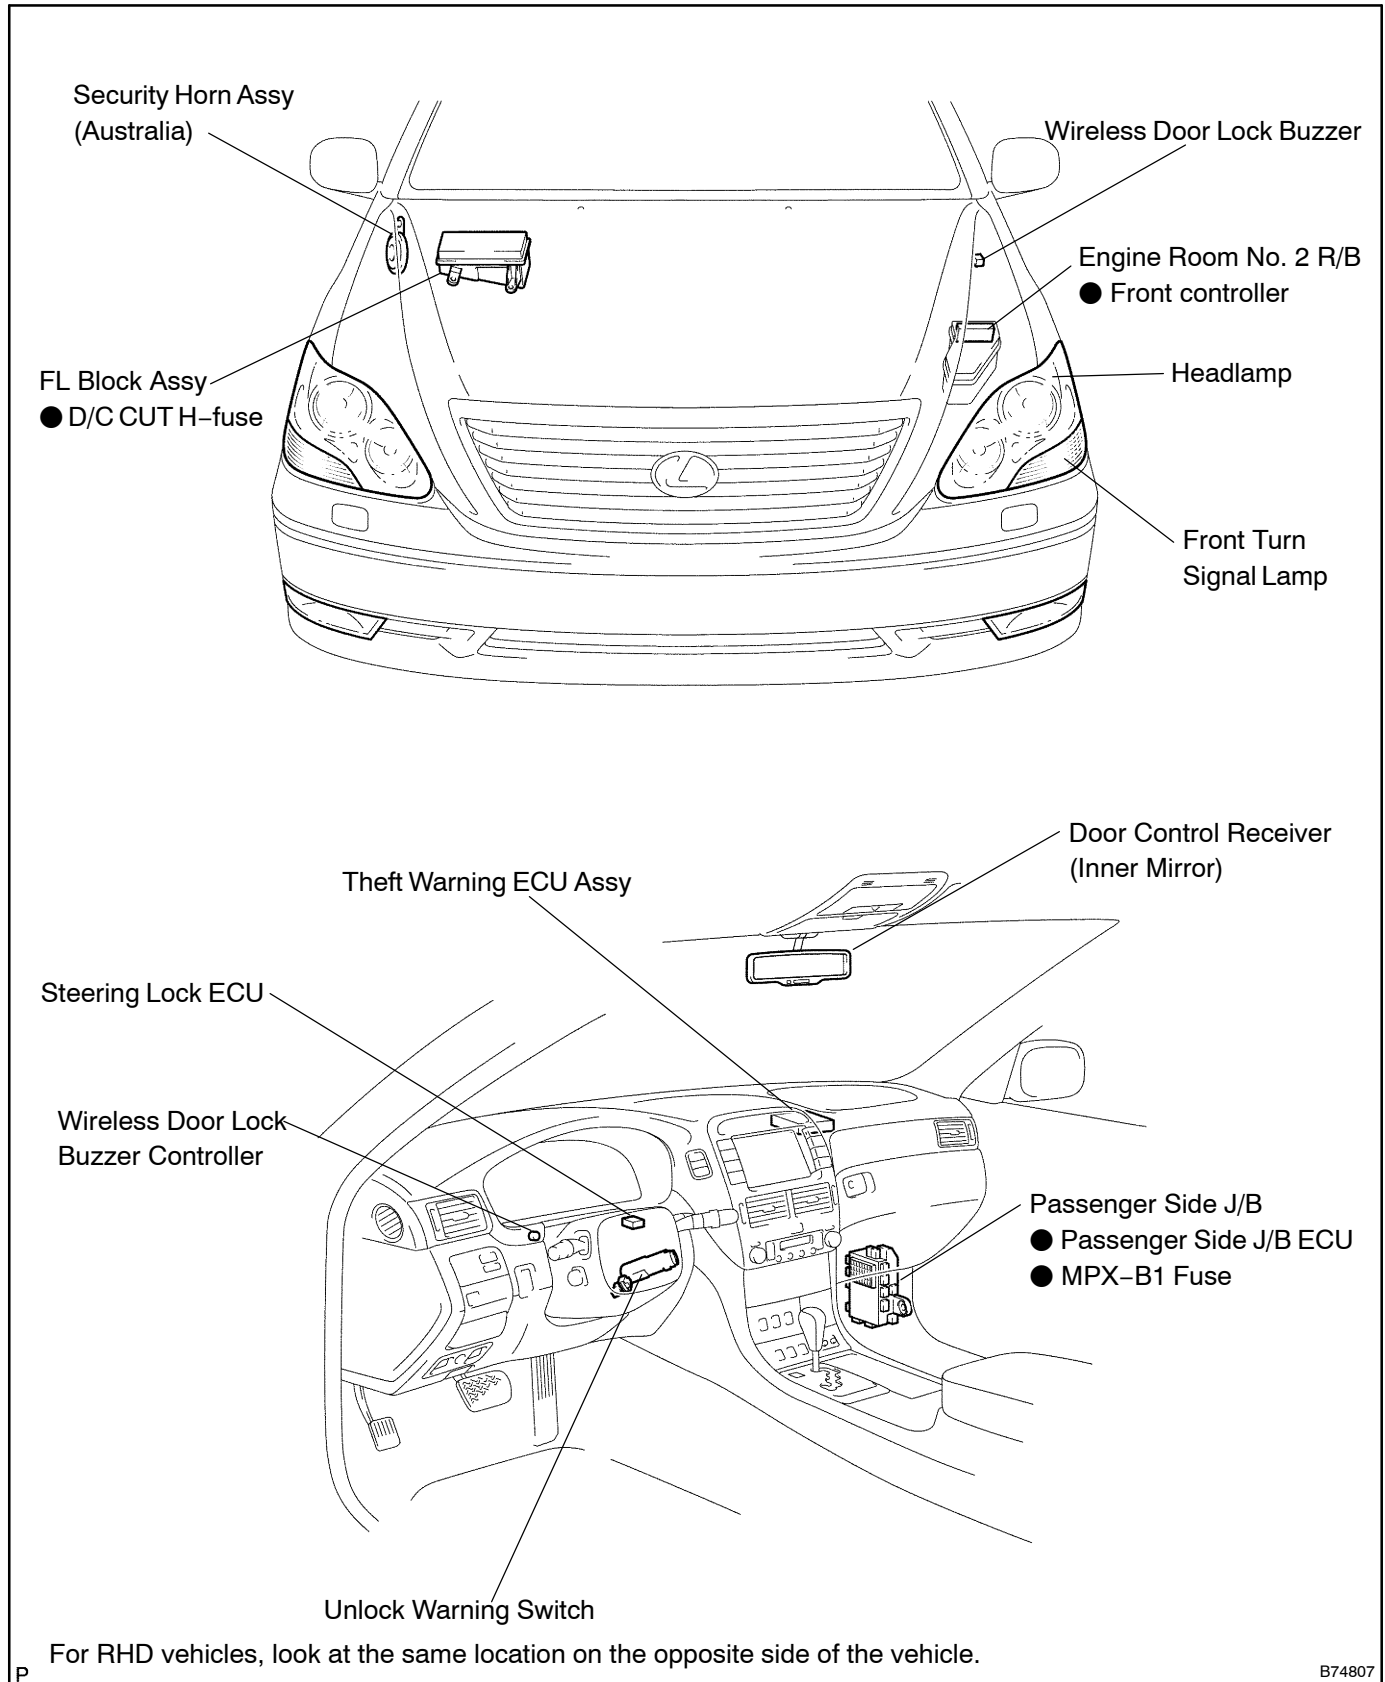


LOCATION

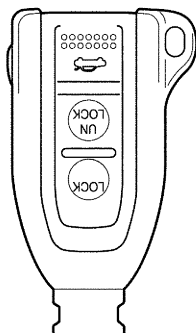


Australia

Except Australia

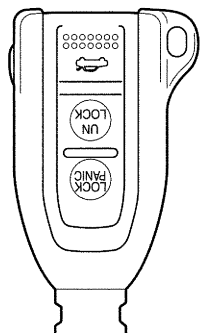

Door Control Transmitter

- Transmitter Battery
- Transmitter Sub-assy Module

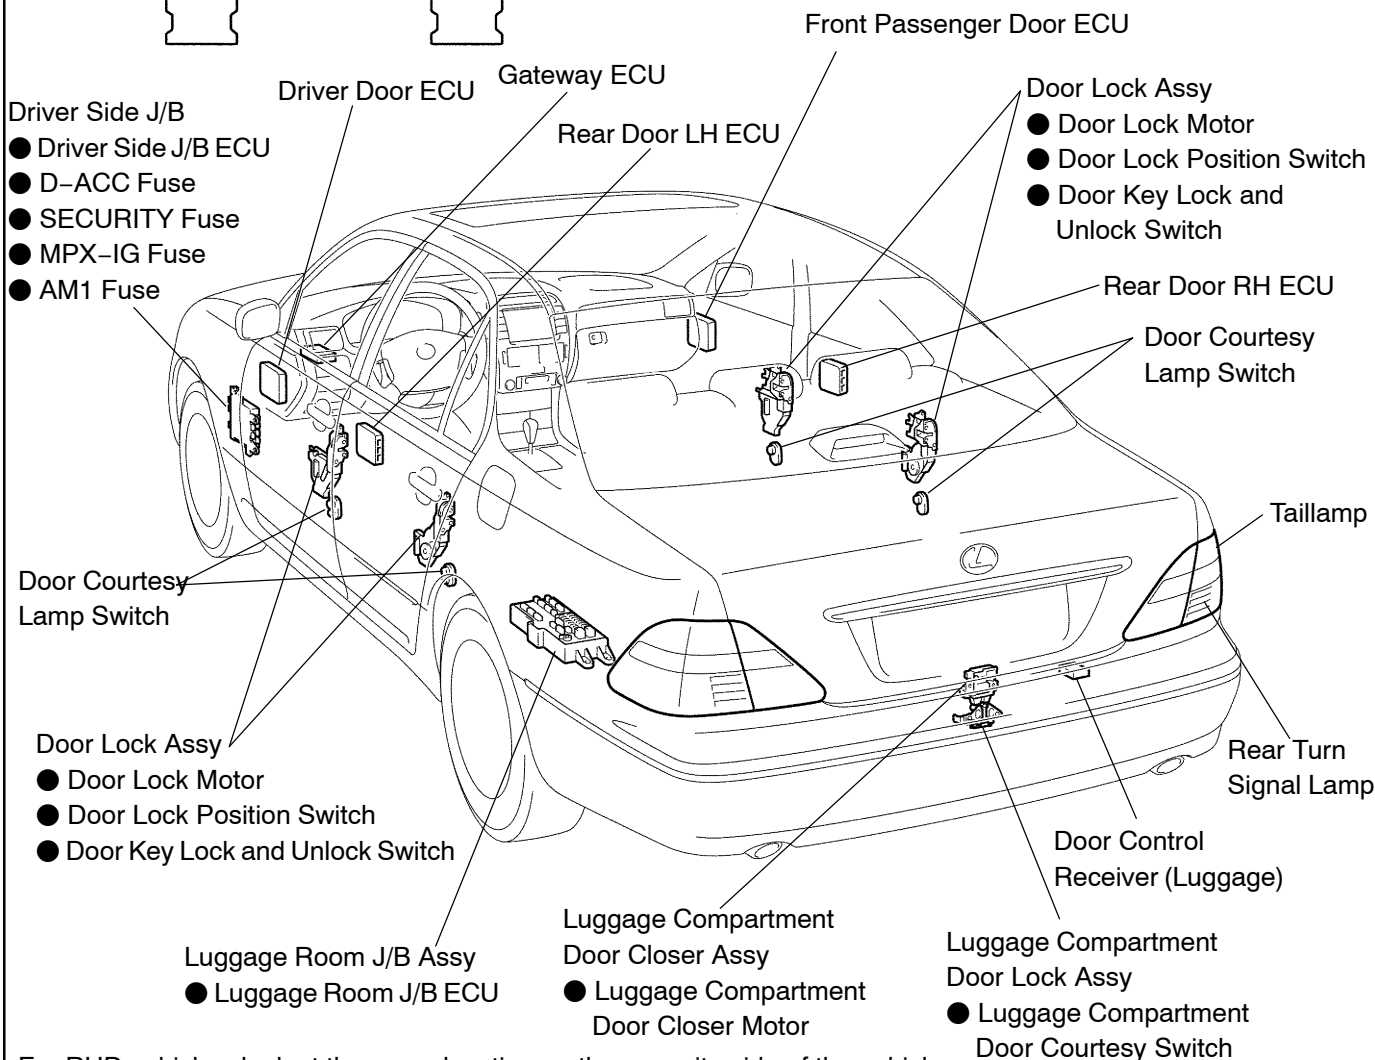

For RHD vehicles, look at the same location on the opposite side of the vehicle.