

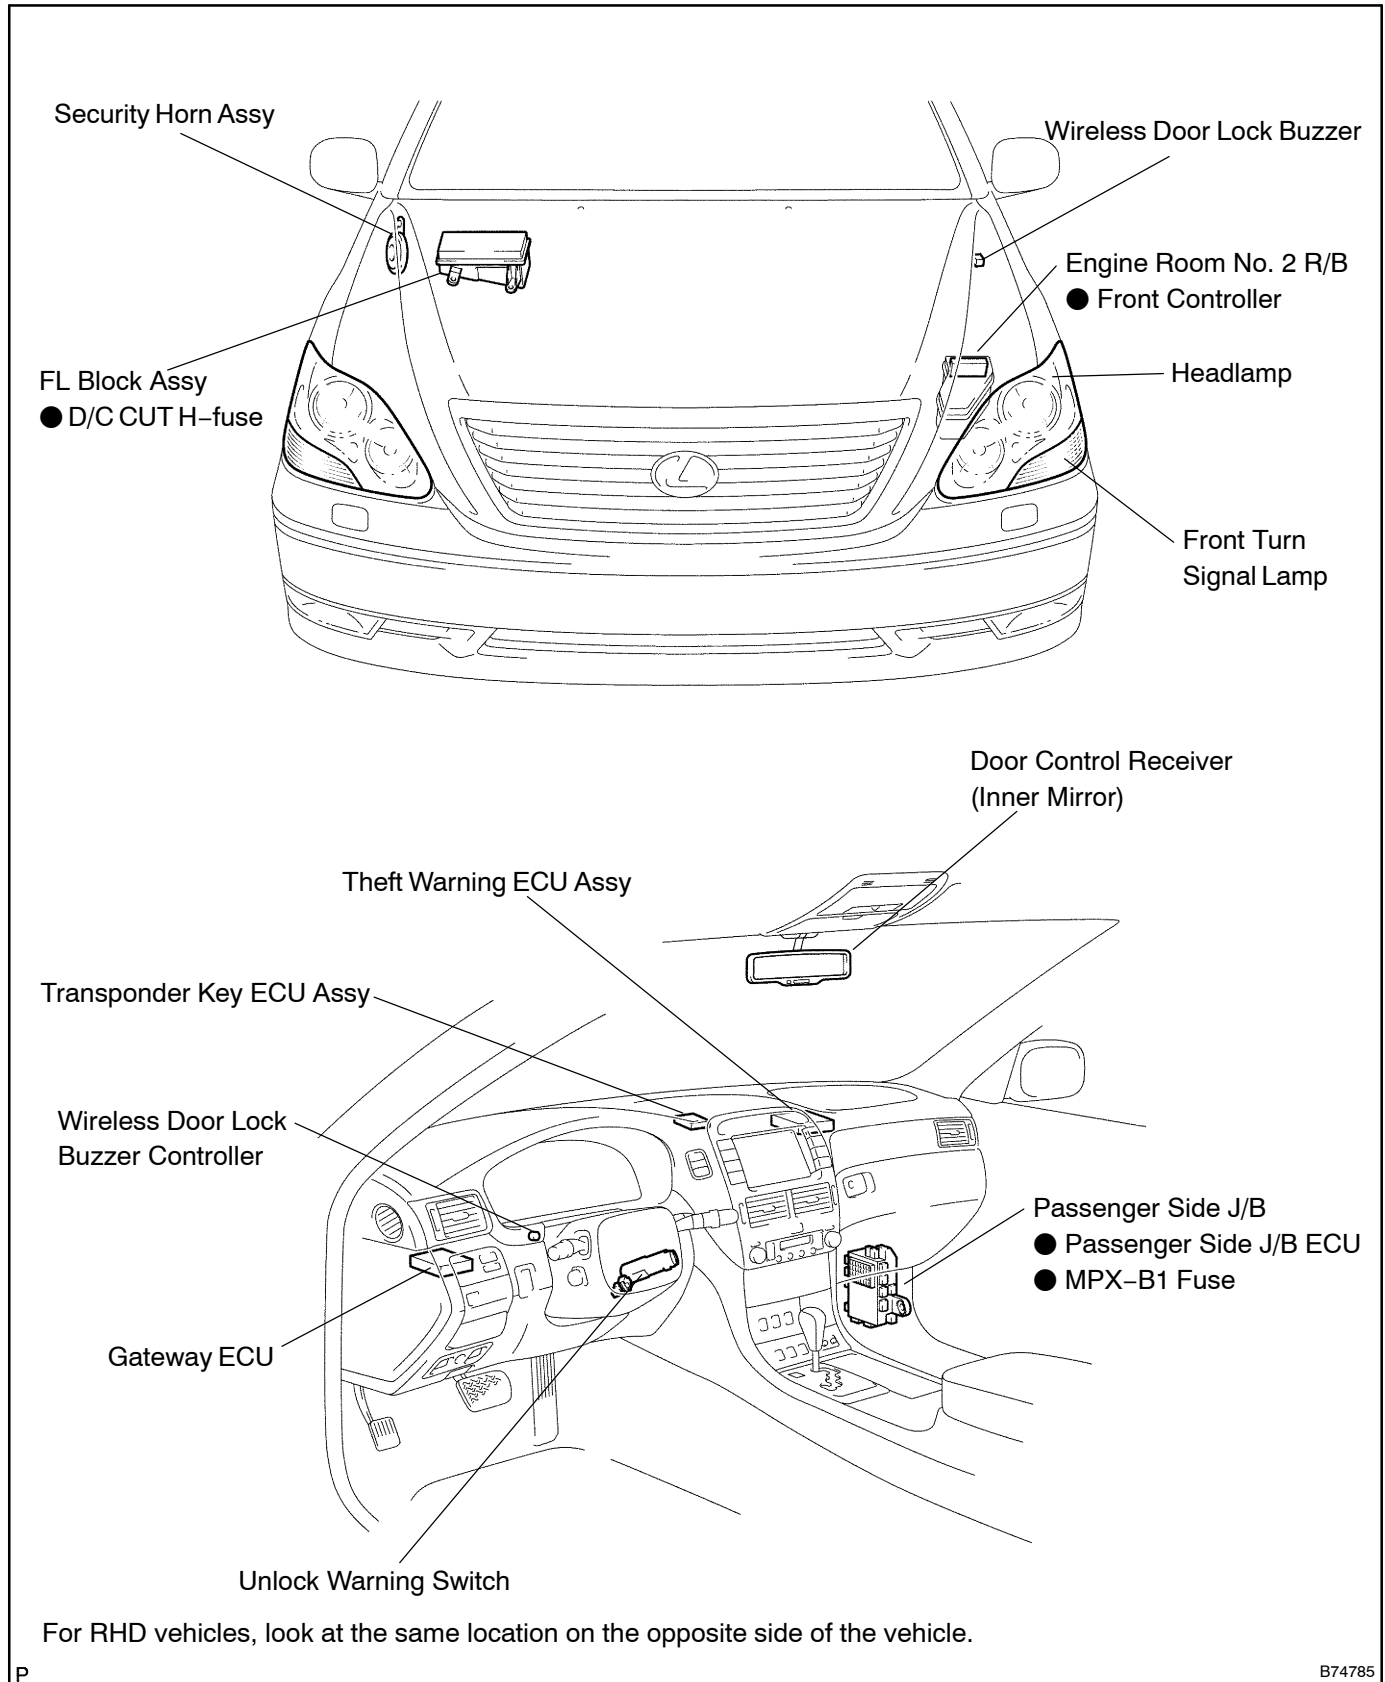



LOCATION

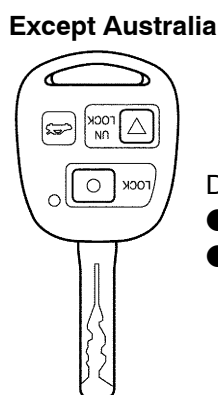

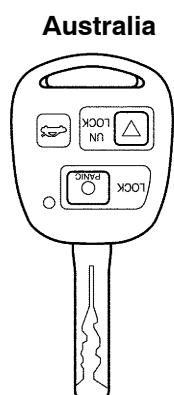

Door Control Transmitter

- Transmitter Battery
- Transmitter Sub-assy Module

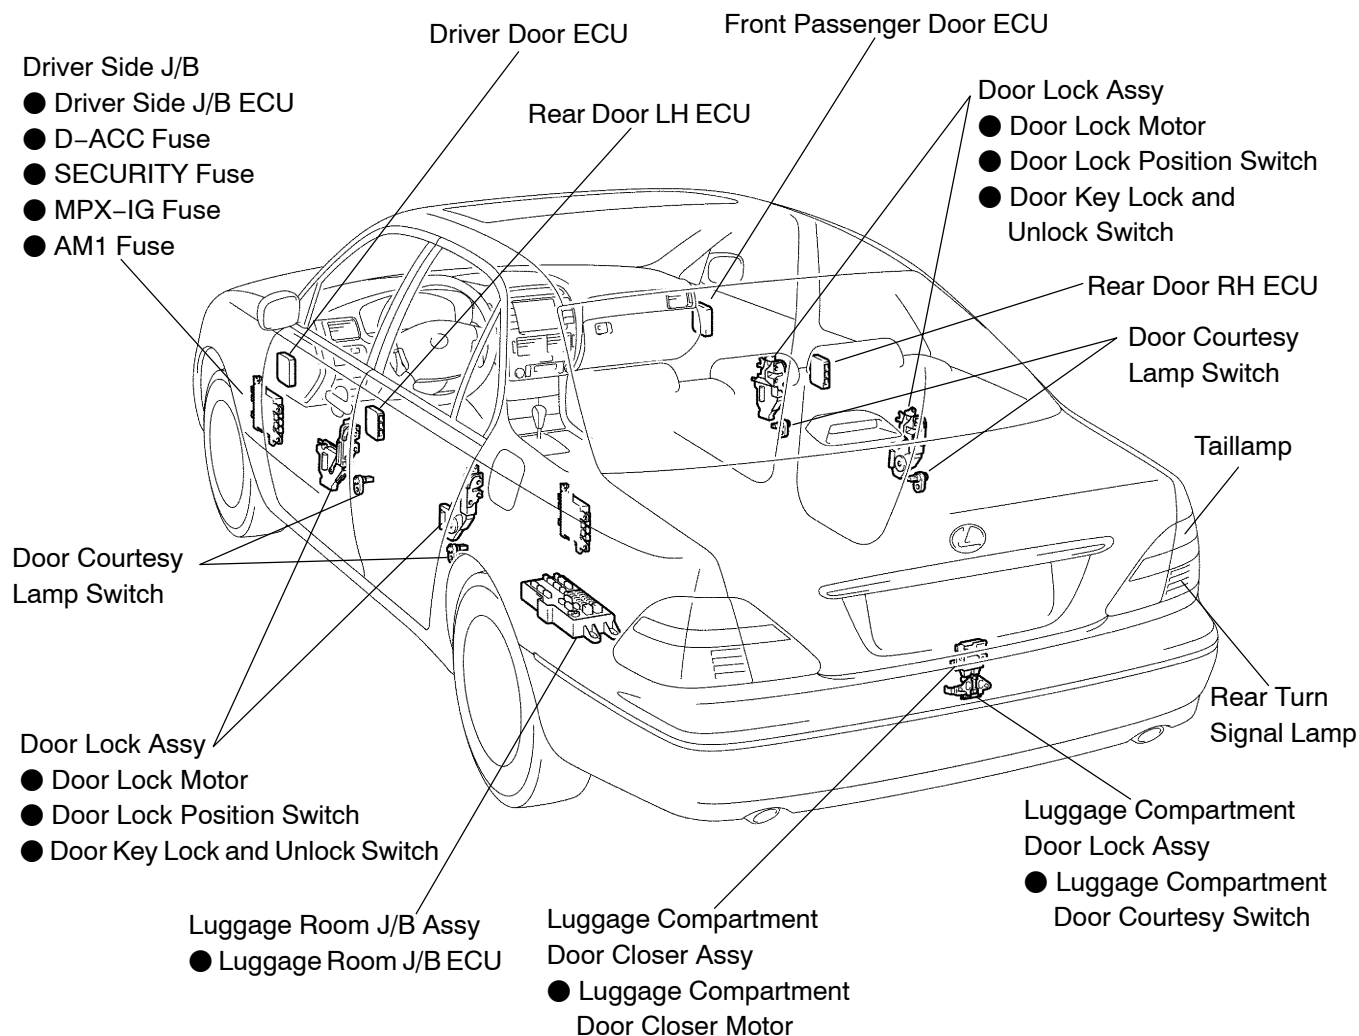

*: For RHD vehicles, look at the same location on the opposite side of the vehicle.