



LOCATION

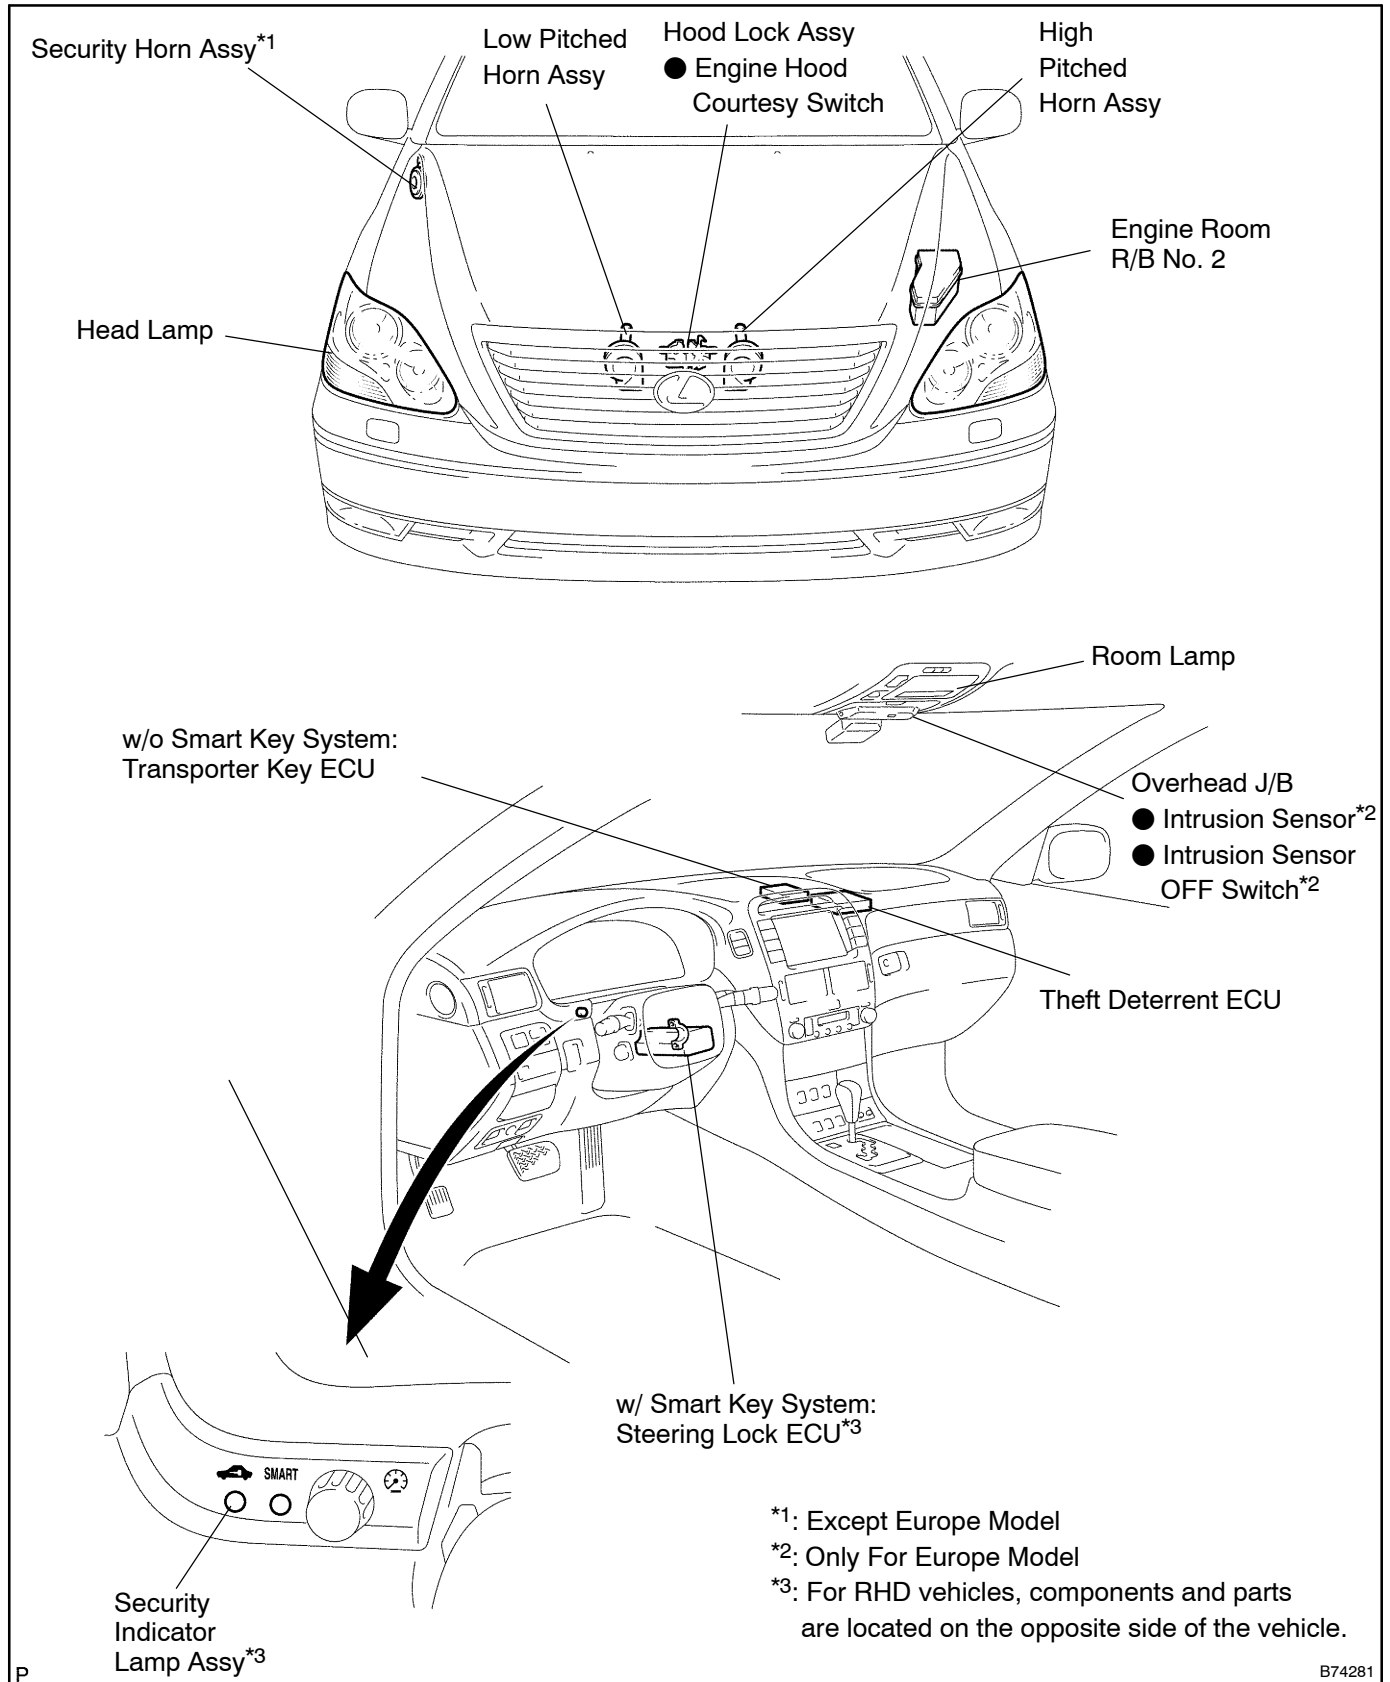

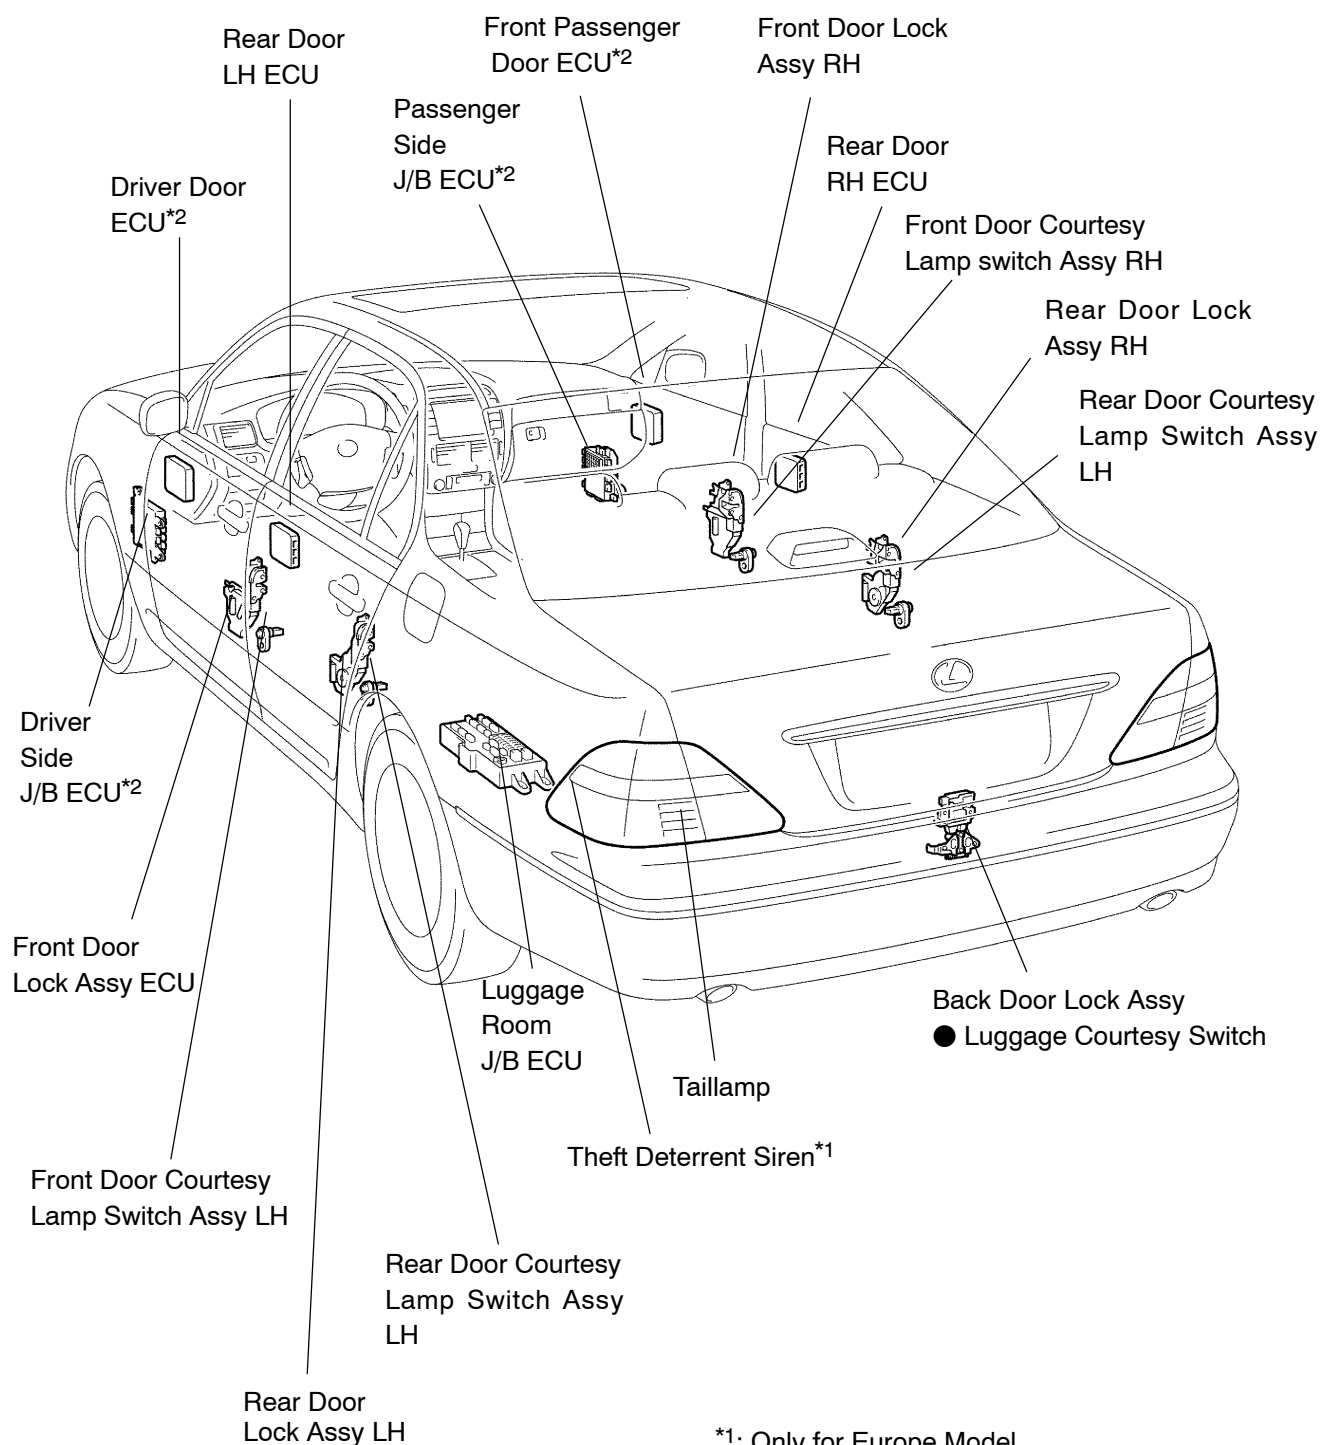

*1: Only for Europe Model

*2: For RHD vehicles, components and parts are located on the opposite side of the vehicle.