



FUEL PUMP ASSY COMPONENTS

1110V-01

Rear Seat Cushion Assy (Fixed Type)

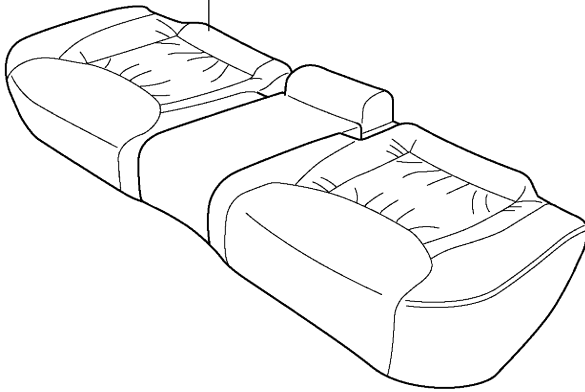

Rear Seat Cushion Assy (Power Adjust Type)

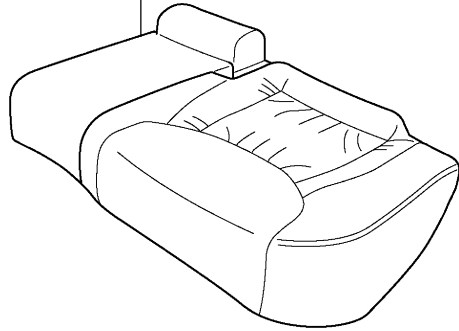

Rear Floor Service Hole Cover No. 2

Fuel Pump & Sender Gauge Connector

6.0 (61, 52 in.-lbf)

Fuel Tank Vent Tube Set Plate


Fuel Tank Main Tube Sub-assy

Tube Joint Clip

Fuel Pump and Sender Gauge Assy


◆ Gasket

Fuel Sub-suction Hose

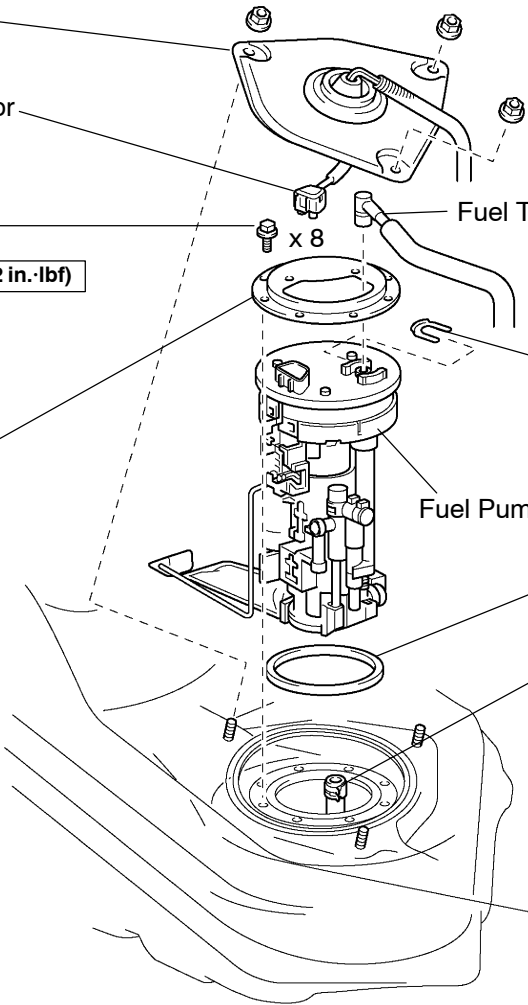

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

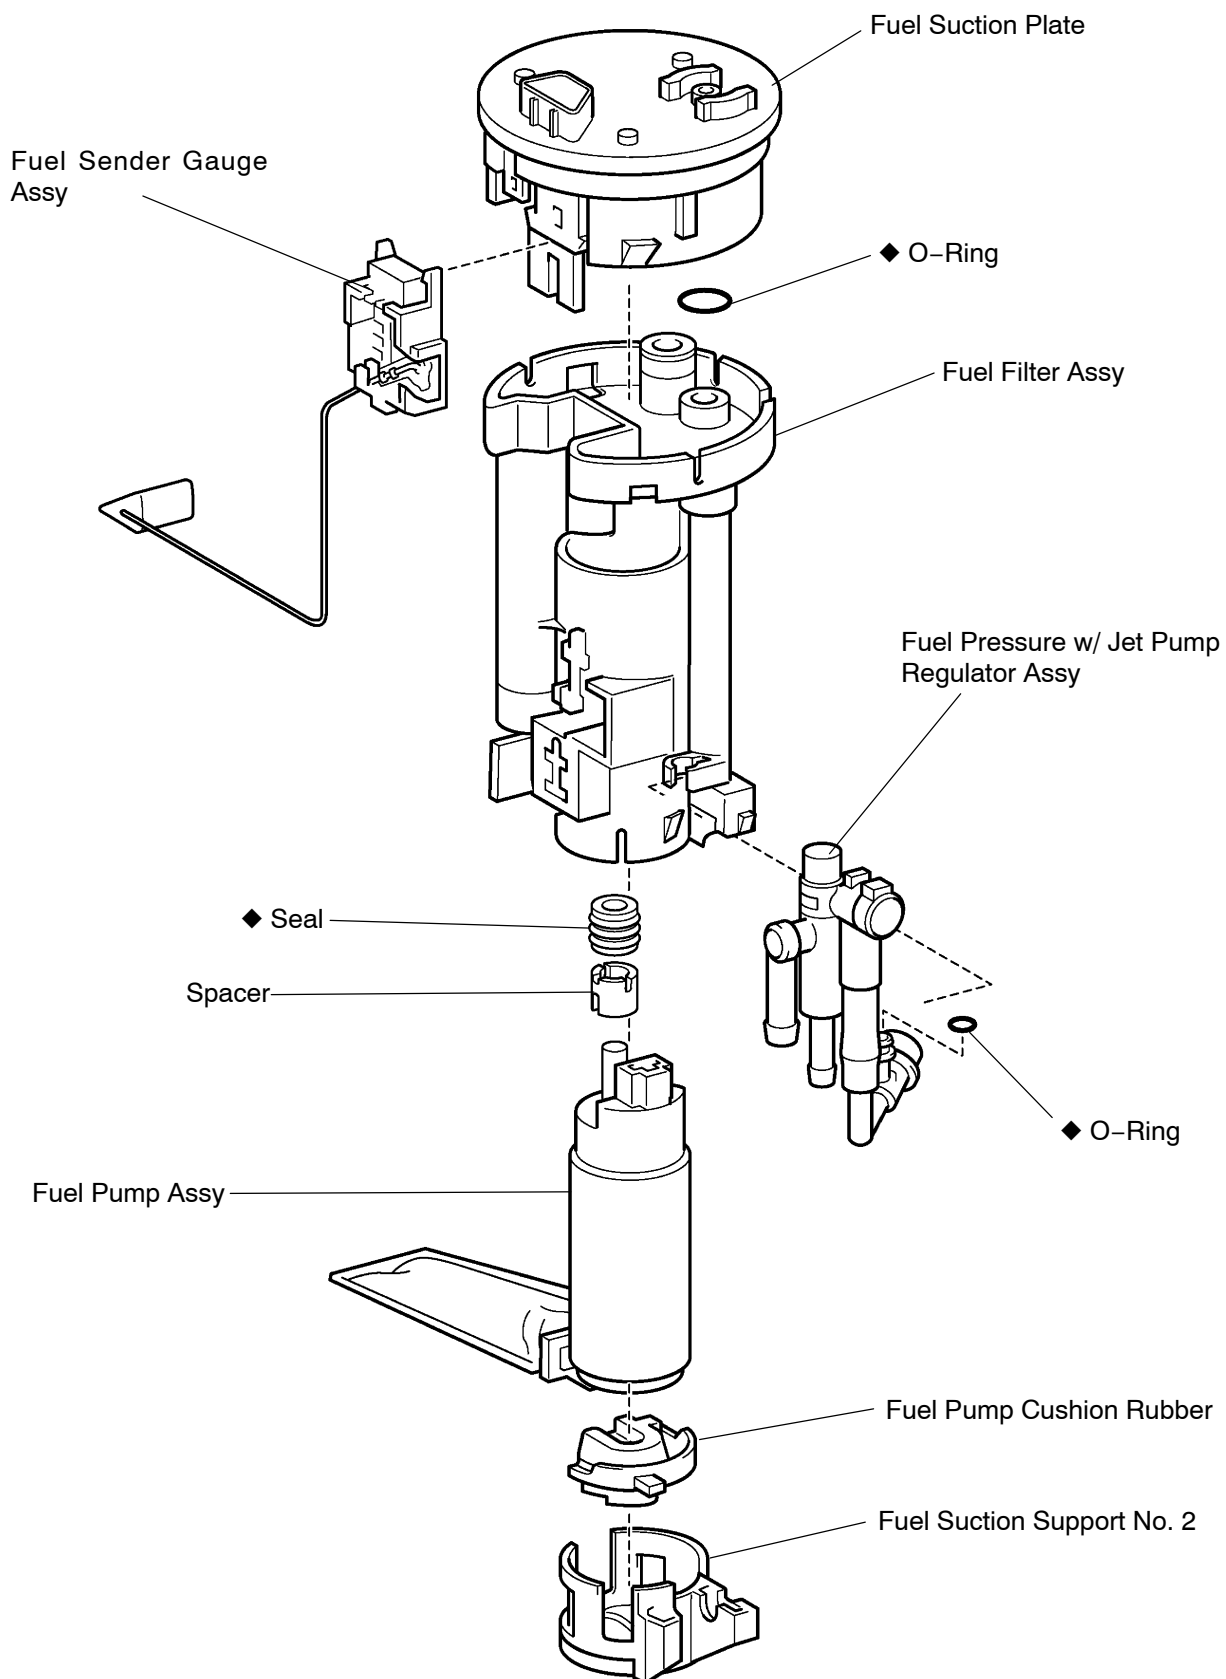

T

◆ Non-reusable part