

SEAT BELT WARNING SYSTEM

LOCATION

610IT-01


LHD Models

Combination Meter Assy

● Driver Side Seat Belt Warning Lamp

Multi-display (w/ LEXUS Navigation)
Clock (w/o LEXUS Navigation)

● Passenger Side Seat Warning Lamp



Driver Side J/B

● Driver Side J/B ECU

● D-IG1 Relay

● GAUGE Fuse

Airbag Sensor Assy

Passenger Side J/B

● P-IG1 Relay

● P-IG Fuse

● DOME Fuse

● MPX-B2 Fuse

Occupant Detection Sensor


Front Seat Inner Belt Assy LH

Front Seat Inner Belt Assy RH

RHD Models

Multi-display (w/ LEXUS Navigation)
 Clock (w/o LEXUS Navigation)
 ● Passenger Side Seat Warning Lamp

Combination Meter Assy
 ● Driver Side Seat Belt Warning Lamp

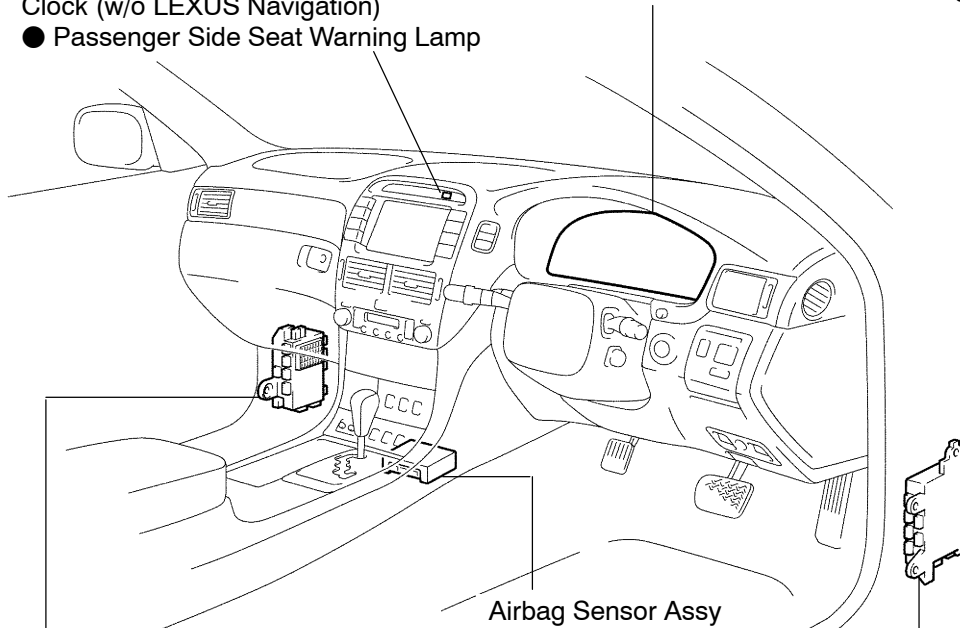

Passenger Side J/B and Passenger Side J/B ECU


- P-IG1 Relay
- P-IG Fuse
- DOME Fuse
- MPX-B2 Fuse

Driver Side J/B and Driver Side J/B ECU

- Driver Side J/B ECU
- D-IG1 Relay
- GAUGE Fuse

Occupant Detection Sensor

Front Seat Inner Belt Assy LH

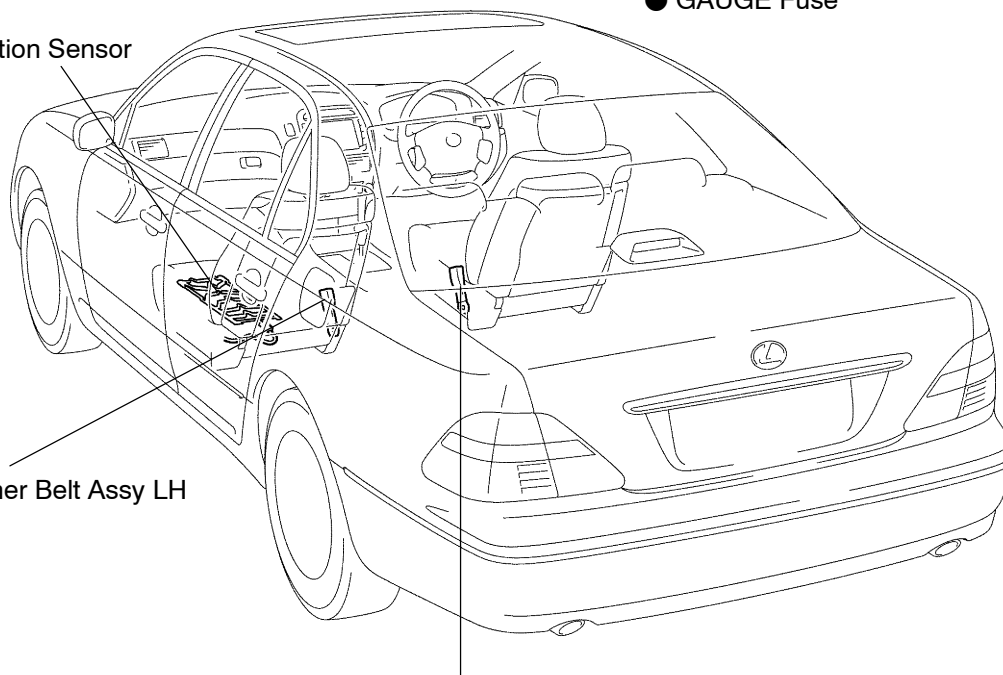

Front Seat Inner Belt Assy RH