

POWER SHOULDER BELT ANCHORAGE SYSTEM

LOCATION

610IX-01

LHD Models

Driver Side:


Height Adjustable Anchor Switch

Driver Door ECU

Passenger Side:

Height Adjustable Anchor Switch RH

Passenger Door ECU

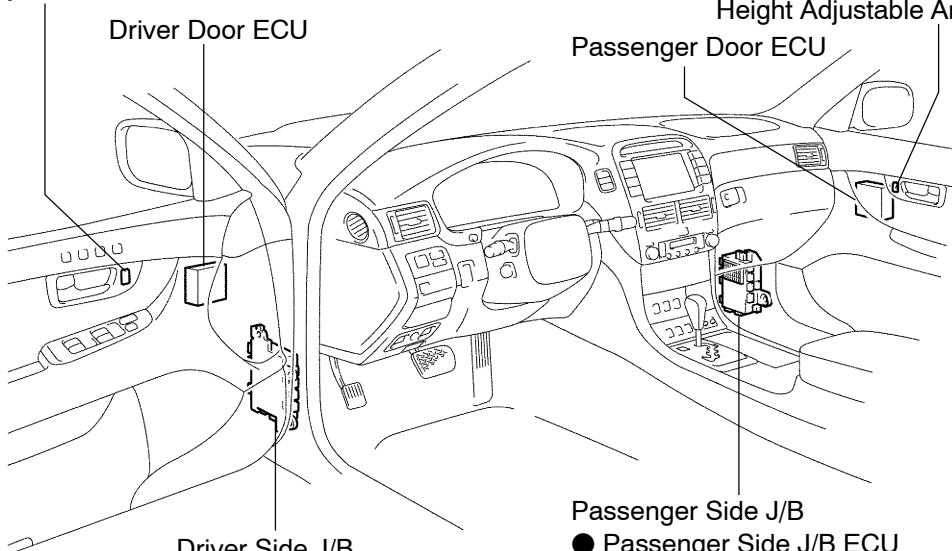

Driver Side J/B

- Driver Side J/B ECU
- D-IG1 Relay
- D B/ANC Fuse
- MPX IG Fuse

Passenger Side J/B

- Passenger Side J/B ECU
- P DOOR Fuse
- P B/ANC Fuse
- D DOOR Fuse
- MPX-B1 Fuse

Driver Side:


Front Shoulder Belt Anchor Adjuster Assy

- Height Adjustable Anchor Motor

Passenger Side:

Front Shoulder Belt Anchor Adjuster Assy RH

- Height Adjustable Anchor Motor

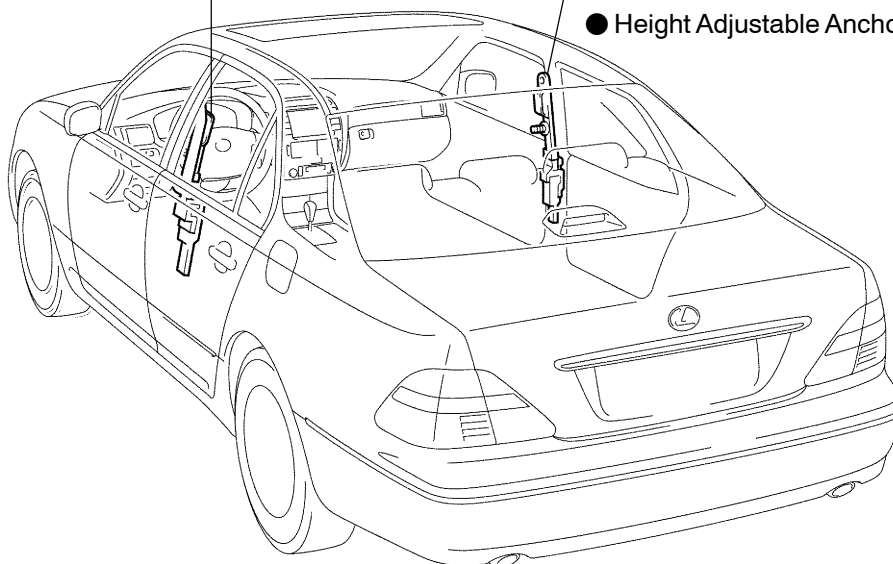

RHD Models

Passenger Side:
Height Adjustable Anchor Switch

Driver Side:
Height Adjustable Anchor Switch RH

Passenger Door ECU

Driver Door ECU

Passenger Side J/B

- Passenger Side J/B ECU
- P DOOR Fuse
- P B/ANC Fuse
- D DOOR Fuse
- MPX-B1 Fuse

Driver Side J/B

- Driver Side J/B ECU
- D-IG1 Relay
- D B/ANC Fuse
- MPX IG Fuse

Passenger Side:

Front Shoulder Belt Anchor Adjuster Assy RH

- Height Adjustable Anchor Motor

Driver Side:

Front Shoulder Belt Anchor Adjuster Assy

- Height Adjustable Anchor Motor

