


RETAINER, HEADLAMP PROTECTOR

REPLACEMENT

650TV-02

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - To minimize damage to the headlamp unit in case of a collision, the stays for the headlamp unit have been constructed to break off. The stays are available as supply parts for low-cost repair.
1. **REMOVE ENGINE UNDER COVER NO.1 (SEE PAGE 76-3)**
 2. **REMOVE FRONT FENDER LINER LH (SEE PAGE 76-3)**
 3. **REMOVE FRONT FENDER LINER RH (SEE PAGE 76-3)**
 4. **REMOVE FRONT BUMPER COVER (SEE PAGE 76-3)**
 5. **REMOVE LH HEADLAMP ASSY (SEE PAGE 65-9)**

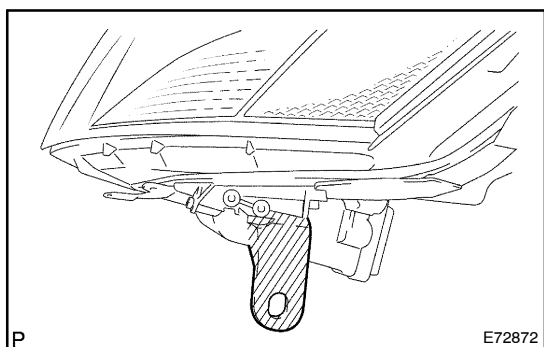


6. INSTALL HEADLAMP LH BRACKET


- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp LH bracket against the bosses and gradually file away until installation is possible.

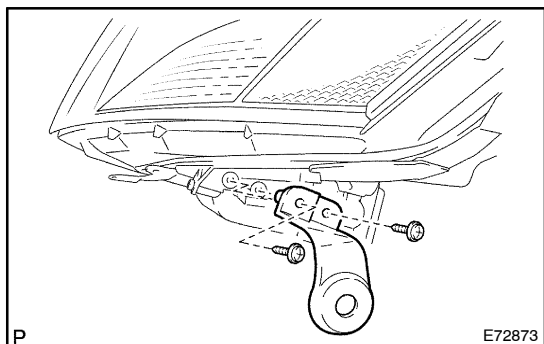

- (b) Install the headlamp LH bracket with the 2 screws.

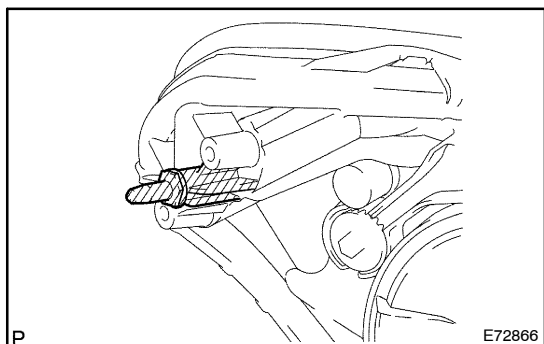


7. INSTALL HEADLAMP RH BRACKET


- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp RH bracket against the bosses and gradually file away until installation is possible.

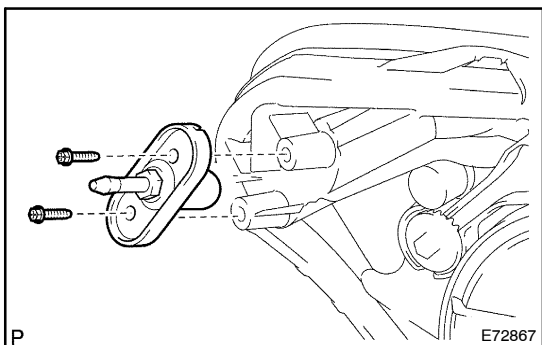

- (b) Install the headlamp RH bracket with the 2 screws.

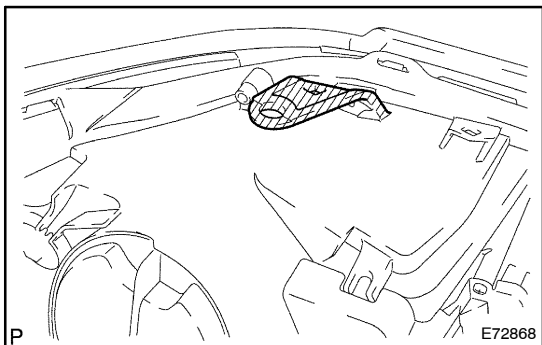


8. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH


- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp protector retainer UPPER LH against the bosses and gradually file away until installation is possible.

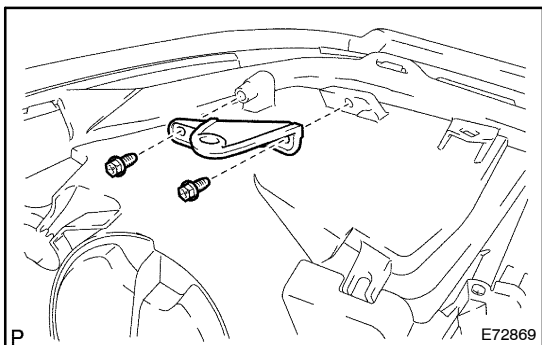

- (b) Install the headlamp protector retainer UPPER LH with the 2 screws.

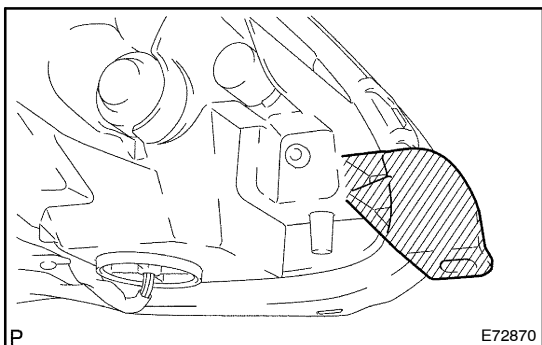


9. INSTALL HEADLAMP PROTECTOR RETAINER LWR LH

- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp protector retainer LWR LH against the bosses and gradually file away until installation is possible.

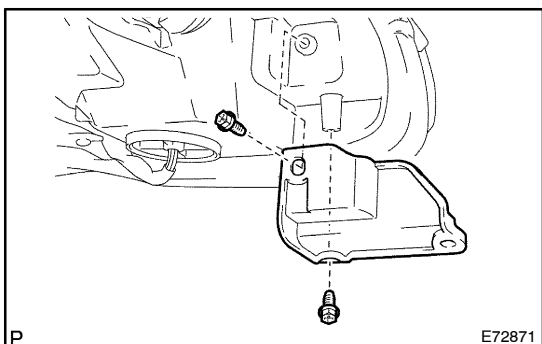

- (b) Install the headlamp protector retainer LWR LH with the 2 screws.

- 10. HEADLIGHT AIM ONLY (SEE PAGE 65-12)
- 11. ADJUST FOG LIGHT AIM (SEE PAGE 65-19)