


OVERHAUL

HINT:

- When removing the rear seat, lift the headrest up to the highest position.
- Slide the rear seat assy to the frontmost position.
- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without torque specifications is shown in the standard bolt chart (see page 03-2).

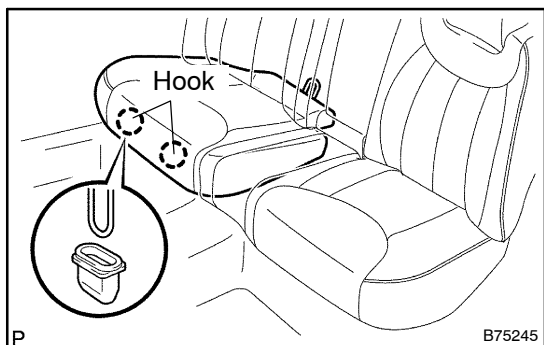


1. REMOVE REAR SEAT CUSHION ASSY RH

- (a) Pull up the 2 front portions of the seat cushion, then remove it.

NOTICE:

The cushion frame deforms easily. To avoid deforming the seat cushion, place your hands near the hook and on both sides of the hook, and then pull up on the seat cushion. Do the same for all the hooks.

- (b) w/ Seat heater or climate control seat system:
Disconnect the connector.

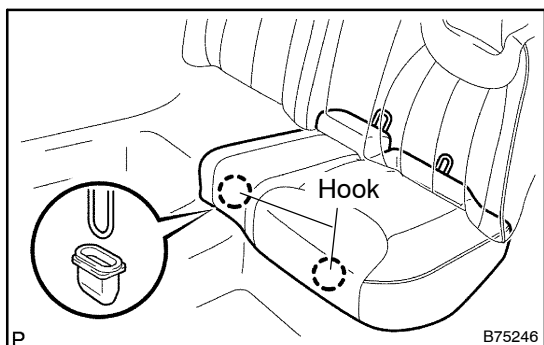


2. REMOVE REAR SEAT CUSHION ASSY LH

- (a) Pull up the 2 front portions of the seat cushion, then remove it.

NOTICE:

The cushion frame deforms easily. To avoid deforming the seat cushion, place your hands near the hook and on both sides of the hook, and then pull up on the seat cushion. Do the same for all the hooks.

- (b) w/ Seat heater or climate control seat system:
Disconnect the connector.

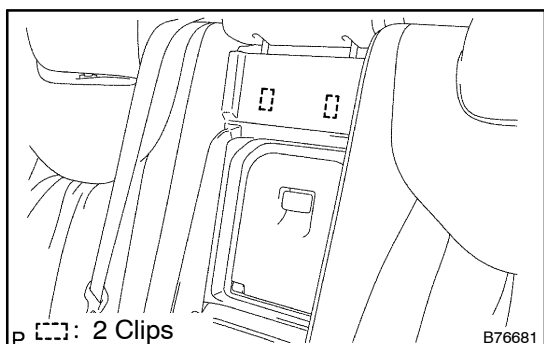


3. REMOVE REAR SEATBACK ASSY RH


- (a) Using a screwdriver, disengage the 2 clips and fold the center armrest door.

HINT:

Tape the screwdriver tip before use.

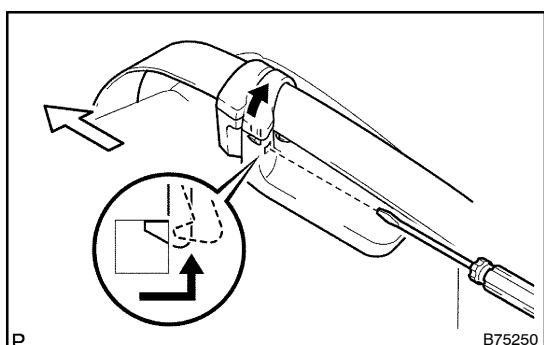

- (b) Using a screwdriver, disengage the claws and remove the 2 rear seat belts from the 2 belt guides as shown in the illustration.

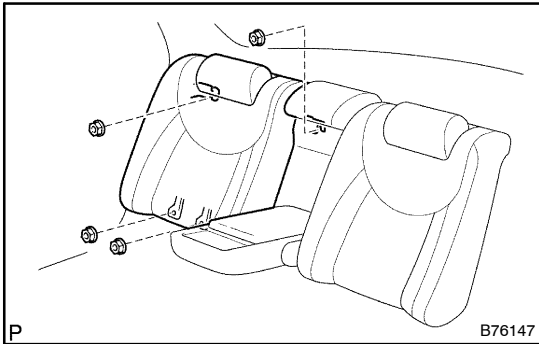


- (c) Remove the 4 nuts and seatback, and then disconnect the connectors.

NOTICE:


Be careful not to damage the vehicle body.

- (d) w/ Seat heater or climate control seat system:
Disconnect the connector.

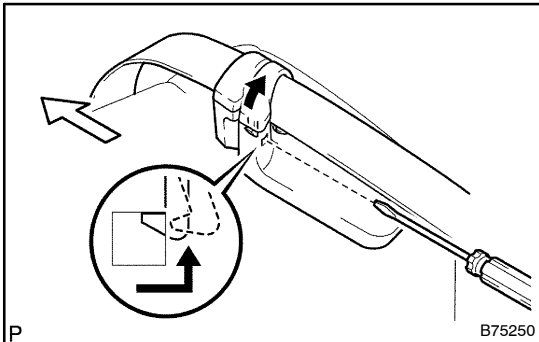

4. REMOVE REAR SEATBACK ASSY LH

- (a) Using a screwdriver, disengage the claw and remove the rear seat belt from the belt guide as shown in the illustration.

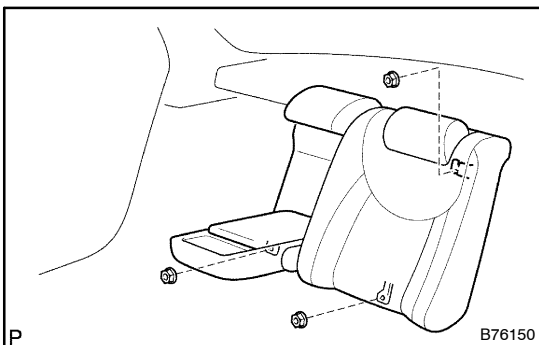


- (b) Remove the 3 nuts and seatback, and then disconnect the connectors.

NOTICE:

Be careful not to damage the vehicle body.

- (c) w/ Seat heater or climate control seat system:
Disconnect the connector.

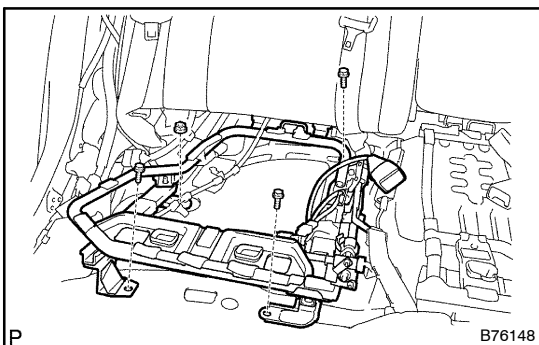


5. REMOVE REAR NO.1 SEAT ADJUSTER ASSY

- (a) Disconnect the connector.
(b) Remove the 3 bolts, nut and seat adjuster.

NOTICE:

Be careful not to damage the vehicle body.

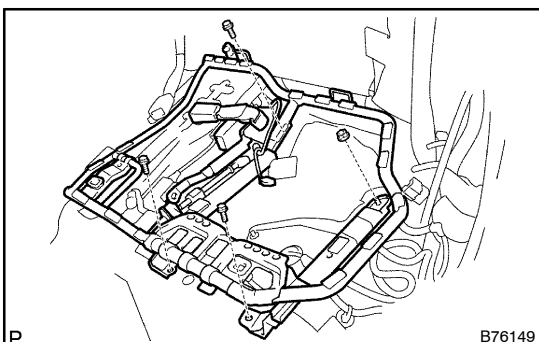


6. REMOVE REAR NO.2 SEAT ADJUSTER ASSY

- (a) Disconnect the connector.
(b) Remove the 3 bolts, nut and seat adjuster.

NOTICE:

Be careful not to damage the vehicle body.

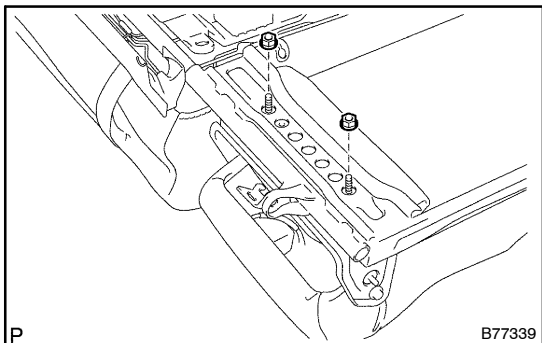**7. REMOVE REAR SEAT CENTER ARMREST ASSY**

- (a) Using a screwdriver, disengage the wire harness clamp.
- (b) Remove the 2 nuts and armrest.

8. REMOVE CENTER ARMREST HINGE COVER RH


- (a) Remove the nut and hinge cover.

9. REMOVE CENTER ARMREST HINGE COVER LH

- (a) Remove the nut and hinge cover.

10. REMOVE REAR SEAT CENTER ARMREST HINGE

- (a) Remove the 2 nuts, 2 bushes and hinge.

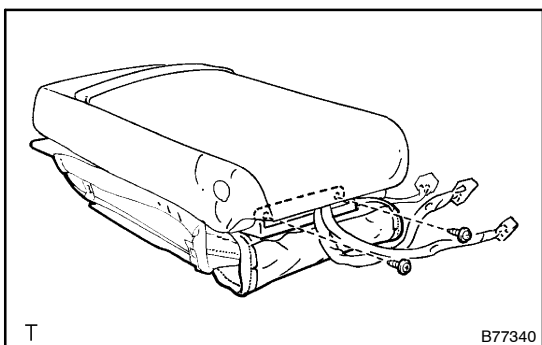**11. REMOVE REAR SEAT CENTER ARMREST DOOR SUB-ASSY**

- (a) Remove the 2 screws and armrest door.

12. REMOVE CENTER ARMREST PLATE

- (a) Remove the screw.
- (b) Using a screwdriver, pry out the center armrest plate.

HINT:

Tape the screwdriver tip before use.

13. REMOVE REAR POWER SEAT SWITCH

- (a) Remove the 4 screws and power seat switch.


14. REMOVE RADIO SWITCH AND VOLUME ASSY

- (a) Remove the 2 screws and radio switch and volume.

15. REMOVE SEAT HEATER (REAR) SWITCH**16. REMOVE REAR SUN SHADE SWITCH ASSY****17. REMOVE REAR SEAT HEADREST ASSY CENTER**

- (a) Remove the 3 bolts and headrest assy.

18. REMOVE REAR ARMREST HOLDER COVER

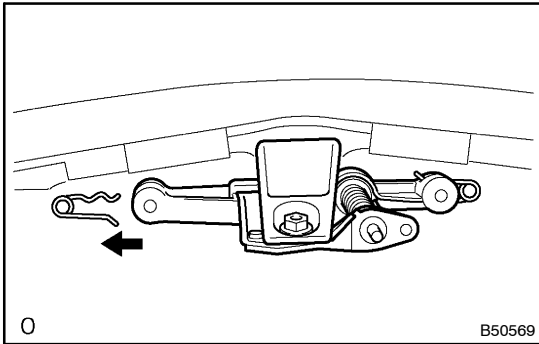**19. REMOVE REAR SEATBACK COVER RH**

- (a) Remove the 3 screws and belt guide RH.
- (b) Remove the 2 screws and belt guide center.
- (c) Remove the 2 pins and headrest.
- (d) Remove the 2 headrest supports.
- (e) Remove the hog rings and seatback cover together with the pad.
- (f) Remove the hog rings and seatback cover.

20. REMOVE REAR SEATBACK COVER LH

- (a) Remove the 3 screws and belt guide lh.
- (b) Remove the 2 pins and headrest.
- (c) Remove the 2 headrest supports.
- (d) Remove the hog rings and seatback cover together with the pad.
- (e) Remove the hog rings and seatback cover.

21. REMOVE REAR SEAT HEADREST SUPPORT ASSY RH

- (a) Disengage the clamp.
- (b) Remove the 4 nuts and headrest support.

22. REMOVE REAR SEAT HEADREST SUPPORT ASSY LH

- (a) Disengage the clamp.
- (b) Remove the 4 nuts and headrest support.

23. REMOVE SEAT VIBRATOR ASSY RH

- (a) Disengage the clamp and disconnect the connector.
- (b) Remove the 4 nuts and vibrator.

24. REMOVE SEAT VIBRATOR ASSY LH

- (a) Disengage the clamp and disconnect the connector.
- (b) Remove the 4 nuts and vibrator.

25. REMOVE VIBRATION SEAT ECU ASSY RH

- (a) Disconnect the connector.
- (b) Remove the nut and ECU.

26. REMOVE VIBRATION SEAT ECU ASSY LH

- (a) Disconnect the connector.
- (b) Remove the nut and ECU.

27. REMOVE POSITION CONTROL ECU ASSY RH

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and ECU.

28. REMOVE POSITION CONTROL ECU ASSYLH


- (a) Disconnect the connector.
- (b) Remove the 2 bolts and ECU.

29. w/ Climate control seat system:**REMOVE SEAT CLIMATE CONTROL ECU ASSY**

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and ECU.

30. w/ Climate control seat system:**REMOVE SEAT CLIMATE CONTROL ECU ASSY**

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and ECU.

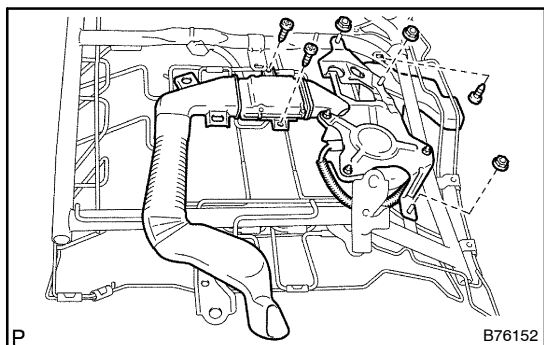

**31. w/ Climate control seat system:
REMOVE CLIMATE CONTROL ASSY RH (SEATBACK SIDE)**

- (a) Remove the 3 nuts, 3 screws, and climate control.
- (b) Remove the blower, controller and 2 ducts.

**32. w/ Climate control seat system:
REMOVE CLIMATE CONTROL ASSY LH (SEATBACK SIDE)**


- (a) Remove the 3 nuts, 3 screws, and climate control.
- (b) Remove the blower, controller and 2 ducts.

33. REMOVE REAR SEAT CUSHION COVER RH

- (a) Remove the hog rings and cushion cover together with the pad.
- (b) Remove the hog rings and cushion cover.

34. REMOVE REAR SEAT CUSHION COVER LH

- (a) Remove the hog rings and cushion cover together with the pad.
- (b) Remove the hog rings and cushion cover.

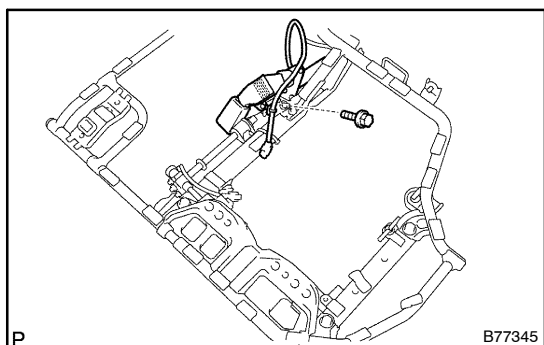


35. REMOVE REAR SEAT INNER BELT ASSY RH

- (a) Disengage the clamp.
- (b) Remove the bolt and inner belt.

36. REMOVE REAR SEAT INNER BELT ASSY LH

- (a) Disengage the clamp.
- (b) Remove the bolt and inner belt.

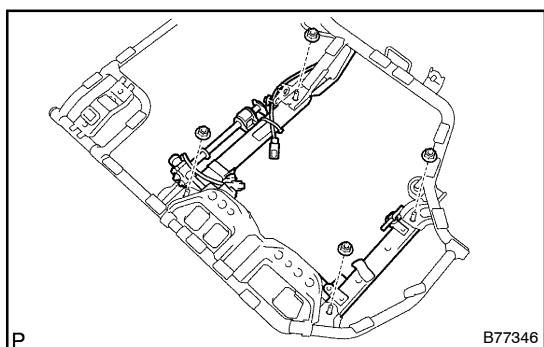

37. REMOVE REAR SEAT TRACK ASSY OUTER RH

- (a) Remove the 2 nuts and track.

38. REMOVE REAR SEAT TRACK ASSY OUTER LH

- (a) Remove the 2 nuts and track.

39. REMOVE REAR SEAT TRACK ASSY INNER RH

- (a) Remove the 2 nuts and track.

40. REMOVE REAR SEAT TRACK ASSY INNER LH

- (a) Remove the 2 nuts and track.

**41. w/ Climate control seat system:
REMOVE CLIMATE CONTROL ASSY RH (CUSHION SIDE)**

- (a) Remove the 3 nuts, 3 screws, and climate control.
- (b) Remove the blower, controller and 2 ducts.

**42. w/ Climate control seat system:
REMOVE CLIMATE CONTROL ASSY LH (CUSHION SIDE)**

- (a) Remove the 3 nuts, 3 screws and climate control.
- (b) Remove the blower, controller and 2 ducts.

43. INSTALL REAR SEAT TRACK ASSY INNER LH

- (a) Install the track assy to the rear seat support bracket with the 2 nuts.

Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)

44. INSTALL REAR SEAT TRACK ASSY INNER RH

- (a) Install the track to the rear seat support bracket with the 2 nuts.

Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)

45. INSTALL REAR SEAT TRACK ASSY OUTER LH

- (a) Install the track to the rear seat support bracket with the 2 nuts.

Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)

46. INSTALL REAR SEAT TRACK ASSY OUTER RH

- (a) Install the track to the rear seat support bracket with the 2 nuts.

Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)

47. INSTALL REAR SEAT INNER BELT ASSY LH

- (a) Install the inner belt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)


- (b) Engage the clamp.

48. INSTALL REAR SEAT INNER BELT ASSY RH

- (a) Install the inner belt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

- (b) Engage the clamp.

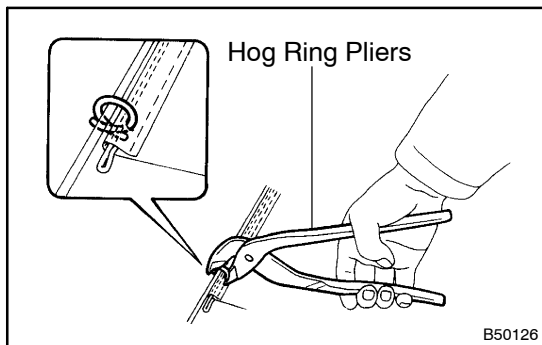**49. INSTALL REAR SEAT CUSHION COVER LH**


- (a) Install the seat cushion.
 (b) Using hog ring pliers, install the cushion cover to the cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to minimize wrinkles as much as possible.**

50. INSTALL REAR SEAT CUSHION COVER RH**HINT:**

Use the same procedures described for the LH side.

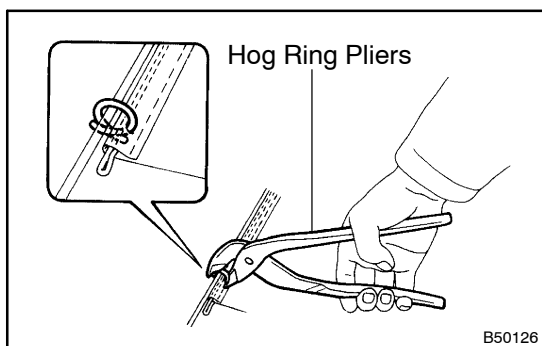**51. INSTALL REAR SEATBACK COVER LH**

- (a) Install the seatback pad.
 (b) Cover the top of the seatback pad with the seatback cover.
 (c) Using hog ring pliers, completely install the seatback cover with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to minimize wrinkles as much as possible.**


52. INSTALL REAR SEATBACK COVER RH

HINT:


Use the same procedures described for the LH side.

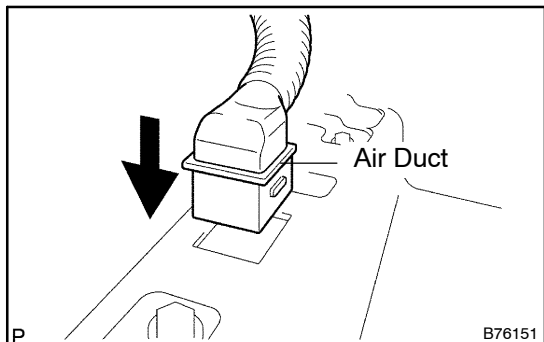**53. INSTALL REAR NO.2 SEAT ADJUSTER ASSY**

- (a) w/ Climate control seat system:
Connect the air duct to the vehicle body's duct.

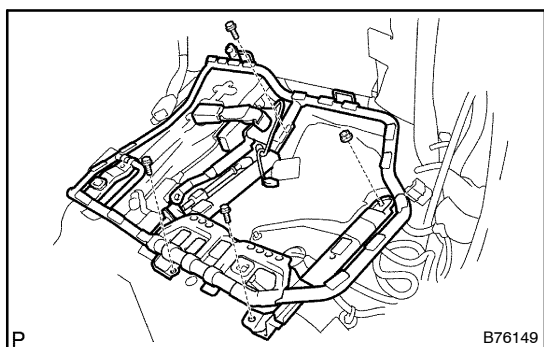


- (b) Install the seat adjuster with the 3 bolts and nut.

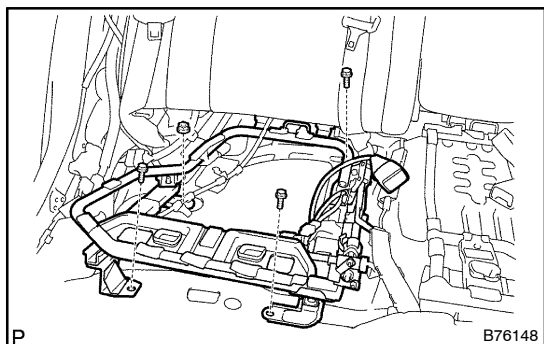
Torque:**18 N·m (185 kgf·cm, 13 ft·lbf) for bolt****18 N·m (185 kgf·cm, 13 ft·lbf) for nut****54. INSTALL REAR NO.1 SEAT ADJUSTER ASSY**

HINT:


Use the same procedures described for the No. 2 seat.adjuster.

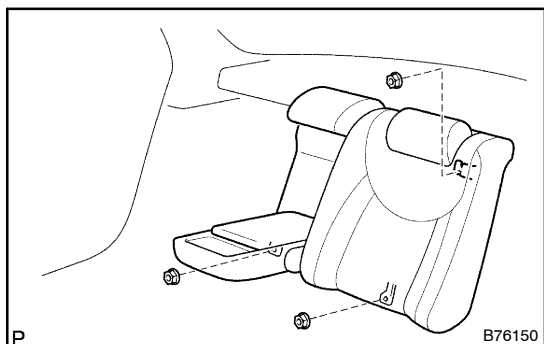Torque:**18 N·m (185 kgf·cm, 13 ft·lbf) for bolt****18 N·m (185 kgf·cm, 13 ft·lbf) for nut****55. INSTALL REAR SEATBACK ASSY LH**

- (a) w/ Seat heater or climate control seat system:
Connect the connector.
- (b) Install the seatback with the 3 nuts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

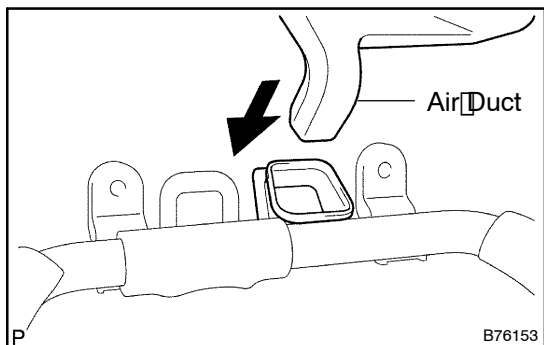


- (c) w/ Climate control seat system:
Connect the air duct to the vehicle body's duct.

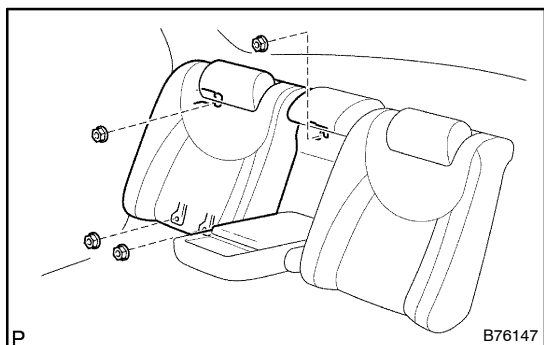


56. INSTALL REAR SEAT BACK ASSY RH

- (a) w/ Seat heater or climate control seat system:
Connect the connector.
- (b) Install the seatback with the 4 nuts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (c) w/ Climate control seat:
Connect the air duct to the vehicle body's duct.

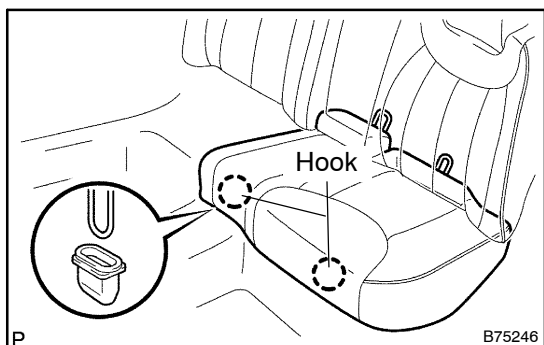

57. INSTALL REAR SEAT CUSHION ASSY LH

- (a) w/ Seat heater or climate control seat system:
Connect the connector.
- (b) Place the 2 hooks in the body firmly.
- (c) Insert the frame into the 2 hooks.

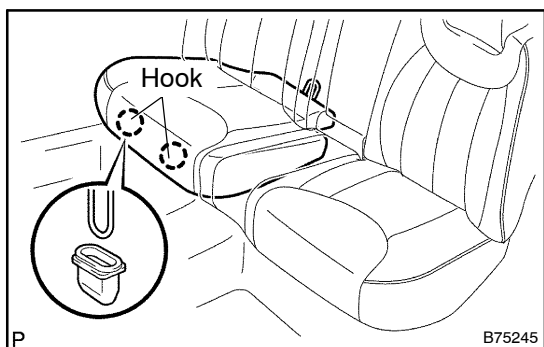

58. INSTALL REAR SEAT CUSHION ASSY RH

- (a) w/ Seat heater or climate control seat system:
Connect the connector.
- (b) Place the 2 hooks in the body firmly.
- (c) Insert the frame into the 2 hooks.

59. INSPECT POWER SEAT OPERATION (See page 05-2432)

60. w/ Seat heater:

INSPECT SEAT HEATER OPERATION

61. w/ Climate control seat system :

INSPECT CLIMATE CONTROL SEAT OPERATION