

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

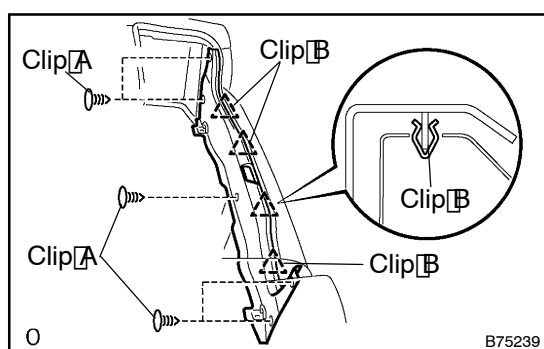
1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT

2. REMOVE ROPE HOOK ASSY

- (a) Remove the 4 bolts and 4 hooks.

3. REMOVE DECK TRIM SIDE BOARD LH

4. REMOVE DECK TRIM SIDE BOARD RH



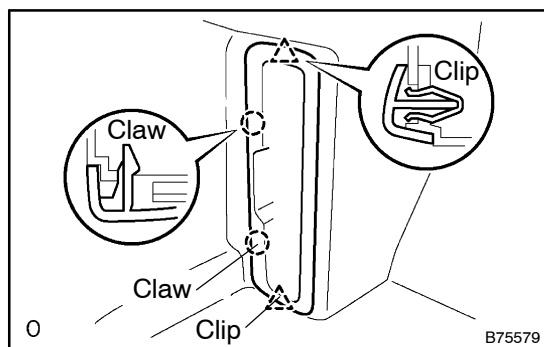
5. REMOVE REAR FLOOR FINISH PLATE

- (a) Using a clip remover, remove the 5 clips labeled A.
- (b) Using a screwdriver, disengage the 4 clips labeled B and remove the finish plate.

HINT:

Tape the screwdriver tip before use.

6. REMOVE TOOL CASE



7. REMOVE SIDE TRIM TOOL BAG COVER

- (a) Using a screwdriver, disengage the 2 claws and 2 clips and remove the cover.

HINT:

Tape the screwdriver tip before use.

8. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY LH (See page 75-54)

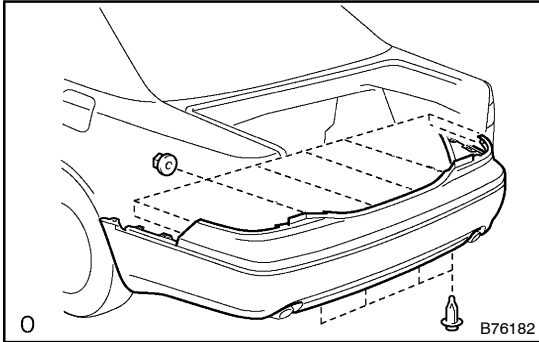
9. REMOVE LUGGAGE COMPARTMENT TRIM COVER ASSY RH (See page 75-54)

10. REMOVE QUARTER PANEL MUDGUARD SUB-ASSY REAR LH (W/ MUDGUARD)

- (a) Remove the 4 screws and mudguard.

11. REMOVE QUARTER PANEL MUDGUARD SUB-ASSY REAR RH (W/ MUDGUARD)

- (a) Remove the 4 screws and mudguard.

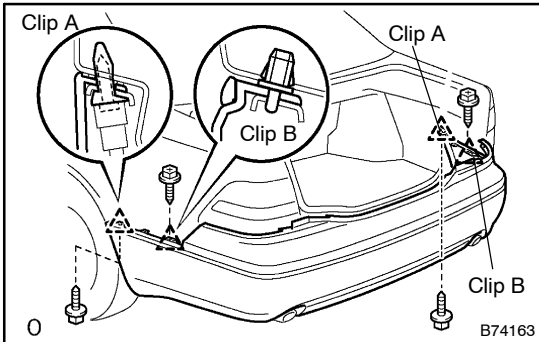
**12. REMOVE REAR BUMPER COVER**

- (a) Using a screwdriver, remove the 4 clips.

HINT:

Tape the screwdriver tip before use.

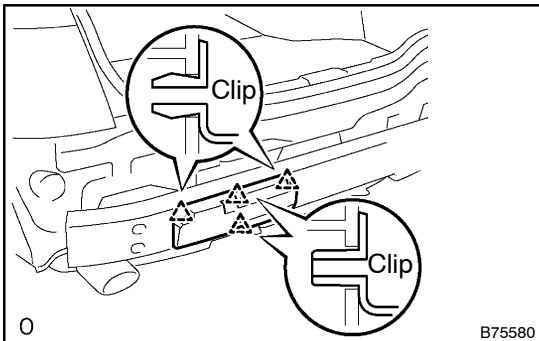
- (b) Remove the 8 nuts.



- (c) Remove the 2 bolts and 2 screws.

- (d) Using a screwdriver, disengage the 2 clips labeled A and 2 clips labeled B. Then remove the bumper cover.

- (e) w/ Clearance sonar system:
Disconnect the 4 sensor connectors.

13. REMOVE REAR BUMPER ENERGY ABSORBER**14. REMOVE REAR BUMPER BAR****15. REMOVE REAR BUMPER ARM REINFORCEMENT LH**

- (a) Using a screwdriver, disengage the 4 clips and remove the arm reinforcement.

HINT:

Tape the screwdriver tip before use.

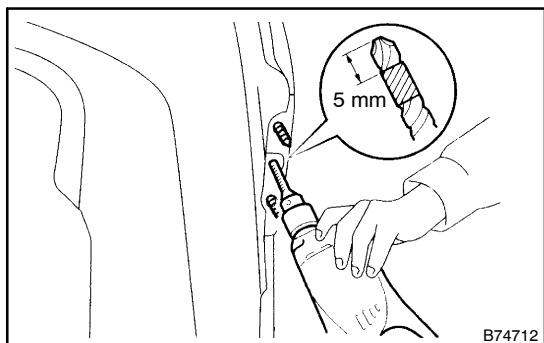
16. REMOVE REAR BUMPER ARM REINFORCEMENT RH

HINT:

Use the same procedures described for the LH side.

17. REMOVE REAR BUMPER REINFORCEMENT SUB-ASSY

- (a) Remove the 6 bolts and reinforcement.

**18. REMOVE REAR BUMPER SIDE RETAINER LH**

- (a) Use a drill that has a tip of less than ϕ 4 mm (0.16 in.).
- (b) Tape the drill tip as shown in the illustration.

Dimension: 5 mm (0.20 in.)

HINT:

Taping the drill tip is done to prevent excessive drilling.

- (c) Gently place the drill tip onto the rivet, cut the rivet flanges and then remove the rivet.

NOTICE:

- Pressing the drill tip onto the rivet strongly will cause the rivet to turn with the drill and the rivet will not be cut.
- Do not prize the rivet hole with the drill. Doing so may damage the rivet hole and/or the drill.
- Be careful as the cut rivet will be very hot.
- (d) Remove the retainer from the bumper cover.

19. REMOVE REAR BUMPER SIDE RETAINER RH**HINT:**

Use the same procedures described for the LH side.

20. REMOVE REAR BUMPER SIDE MOUNTING BRACKET LH

- (a) Remove the screw and bracket.

21. REMOVE REAR BUMPER SIDE MOUNTING BRACKET RH

- (a) Remove the screw and bracket.

22. REMOVE REAR BUMPER ARM SUPPORT REINFORCE SUB-ASSY LH

- (a) Remove the 2 bolts, nut and arm support.

23. REMOVE REAR BUMPER ARM SUPPORT REINFORCE SUB-ASSY RH

- (a) Remove the 2 bolts, nut and arm support.

24. REMOVE REAR BUMPER RETAINER LOWER LH

- (a) Remove the 3 screws and retainer lower.

25. REMOVE REAR BUMPER RETAINER LOWER RH

- (a) Remove the 3 screws and retainer lower.

26. REMOVE ULTRASONIC SENSOR NO.1 (w CLEARANCE SONAR SYSTEM)

- (a) Remove the 4 retainers and 4 sensors.

27. REMOVE REAR BUMPER MOULDING**HINT:**

Remove the double-sided tape completely from the bumper. Double-sided tape interferes with the installation of the moulding to the bumper.

28. REMOVE REAR BUMPER SIDE RETAINER NO.3 LH

- (a) Remove the 2 clips and side retainer.

29. REMOVE REAR BUMPER SIDE RETAINER NO.3 RH

- (a) Remove the 2 clips and side retainer.

30. INSTALL REAR BUMPER ARM SUPPORT REINFORCE SUB-ASSY LH

- (a) Install the arm support with the 2 bolts and nut.

31. INSTALL REAR BUMPER ARM SUPPORT REINFORCE SUB-ASSY RH

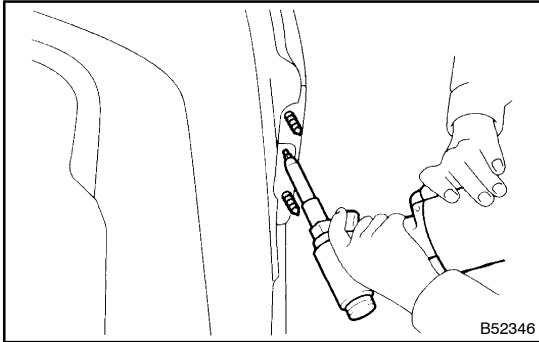
- (a) Install the arm support with the 2 bolts and nut.

Torque: 20 N·m (200 kgf·cm, 15 ft·lbf)

32. INSTALL REAR BUMPER REINFORCEMENT SUB-ASSY

- (a) Install the reinforcement with the 2 bolts and nut.

Torque: 20 N·m (200 kgf·cm, 15 ft·lbf)

**33. INSTALL REAR BUMPER SIDE RETAINER LH**

- (a) Using an air riveter or hand riveter with nose piece, strike waterproof rivets of ϕ 4.9 mm (0.19 in.) into the side retainer to install the rivet to the bumper cover.

NOTICE:

If the rivet is not positioned perpendicularly to the bumper, the mandrel will bend and become damaged.

34. INSTALL REAR BUMPER SIDE RETAINER RH**HINT:**

Use the same procedures described for the LH side.