

LOCATION

LHD

Throttle Position
Sensor and MotorABS & Traction
Actuator Assy
(Skid Control ECU)Engine Room No. 1
R/B

- IG1 Relay
- IG2 Relay
- IGN Fuse
- FR IG Fuse
- EFI NO.1 Fuse

ECM

Millimeter Wave Radar Sensor Assy

Steering Sensor

Combination Meter Assy
(Combination Meter ECU)Combination Switch
Assy

- Wiper Switch
- Turn Signal Switch

Rain Sensor

Steering Pad Switch
ModulatorCruise Control ECU Assy
(Distance Control ECU)Passenger Side J/B
● Passenger Side J/B ECU

Pattern Select Switch

Yaw Rate Sensor
(Deceleration Sensor)

Transmission Control Switch

Cruise Control Main Switch Assy

Spiral Cable Sub-assy

DLC3


Accelerator Pedal
Position SensorDrive Side J/B
● Driver Side J/B ECU
● STOP Fuse
● AM1 Fuse

Skid Control Buzzer

Stop Lamp
Switch Assy

Gateway ECU

RHD

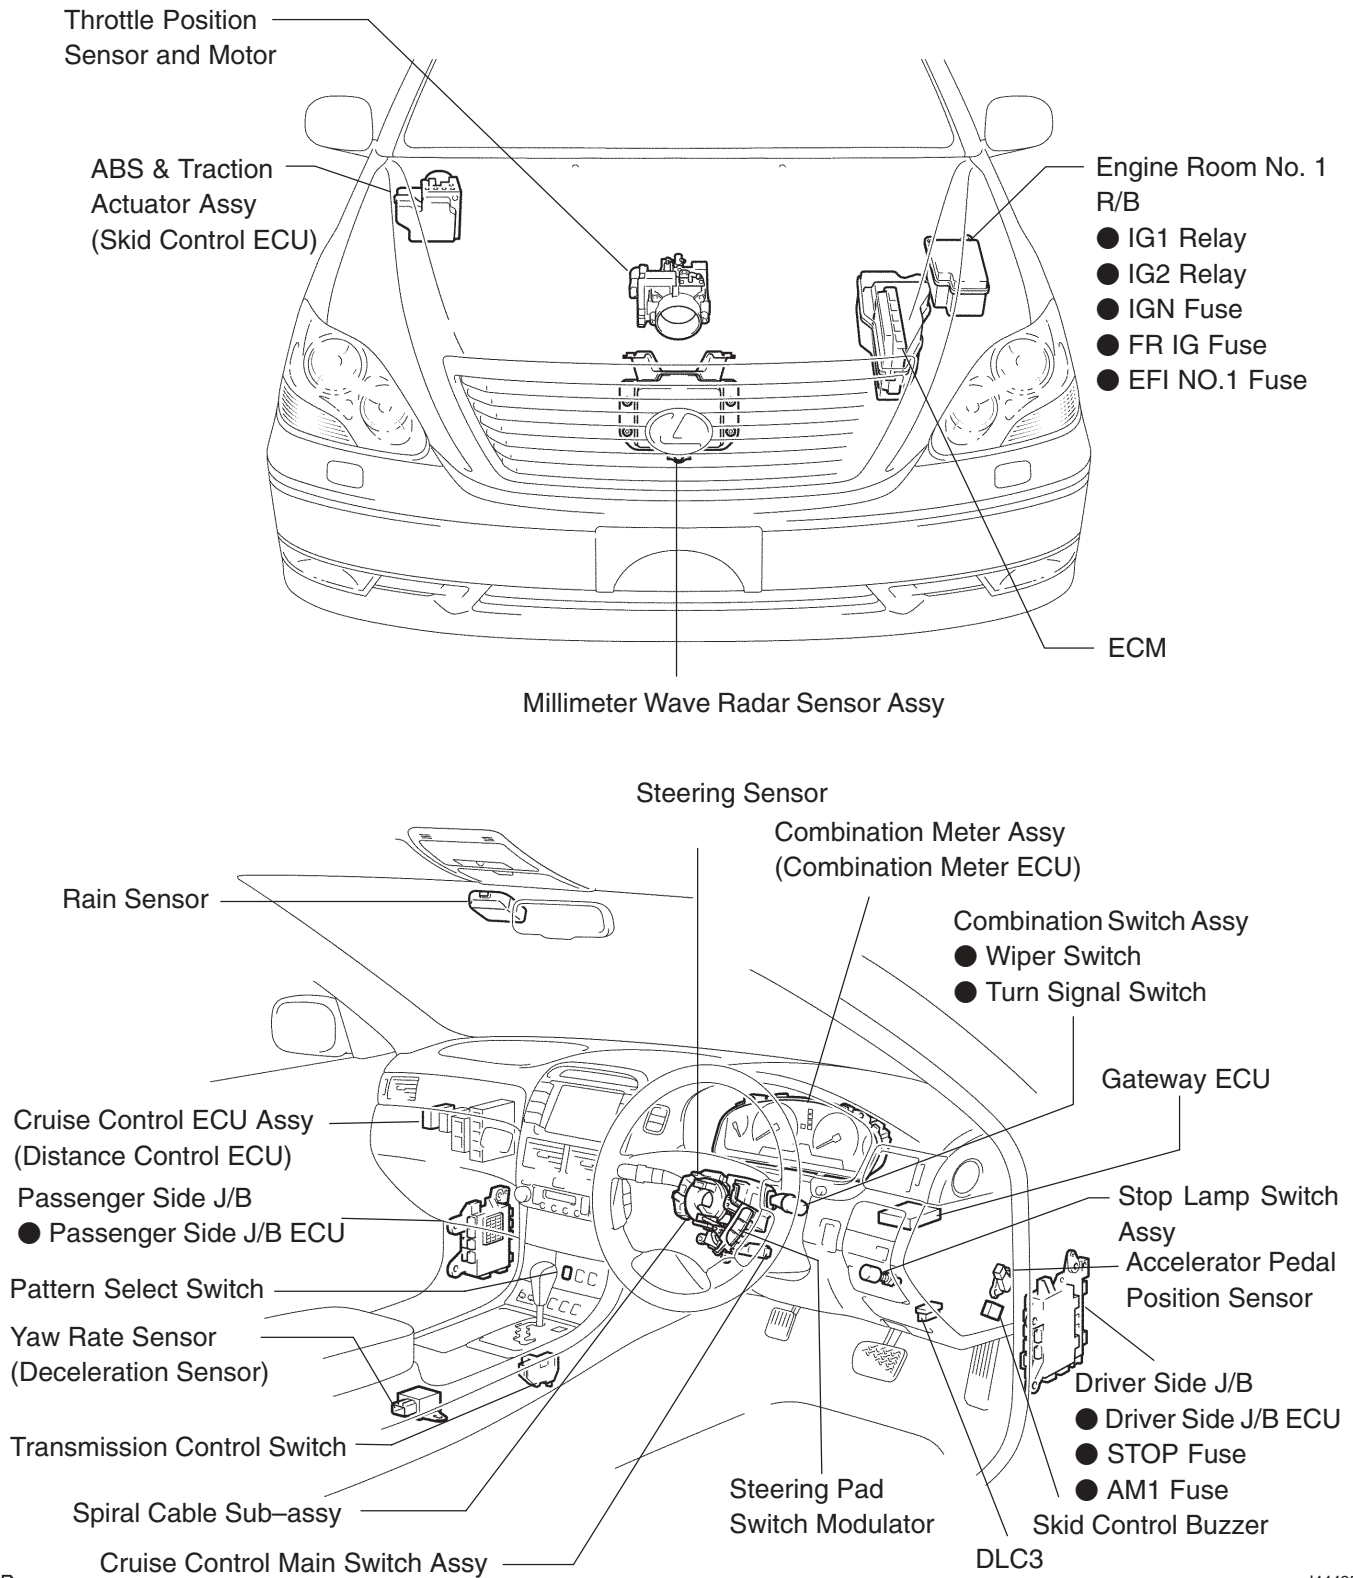

5

