



LOCATION

LHD

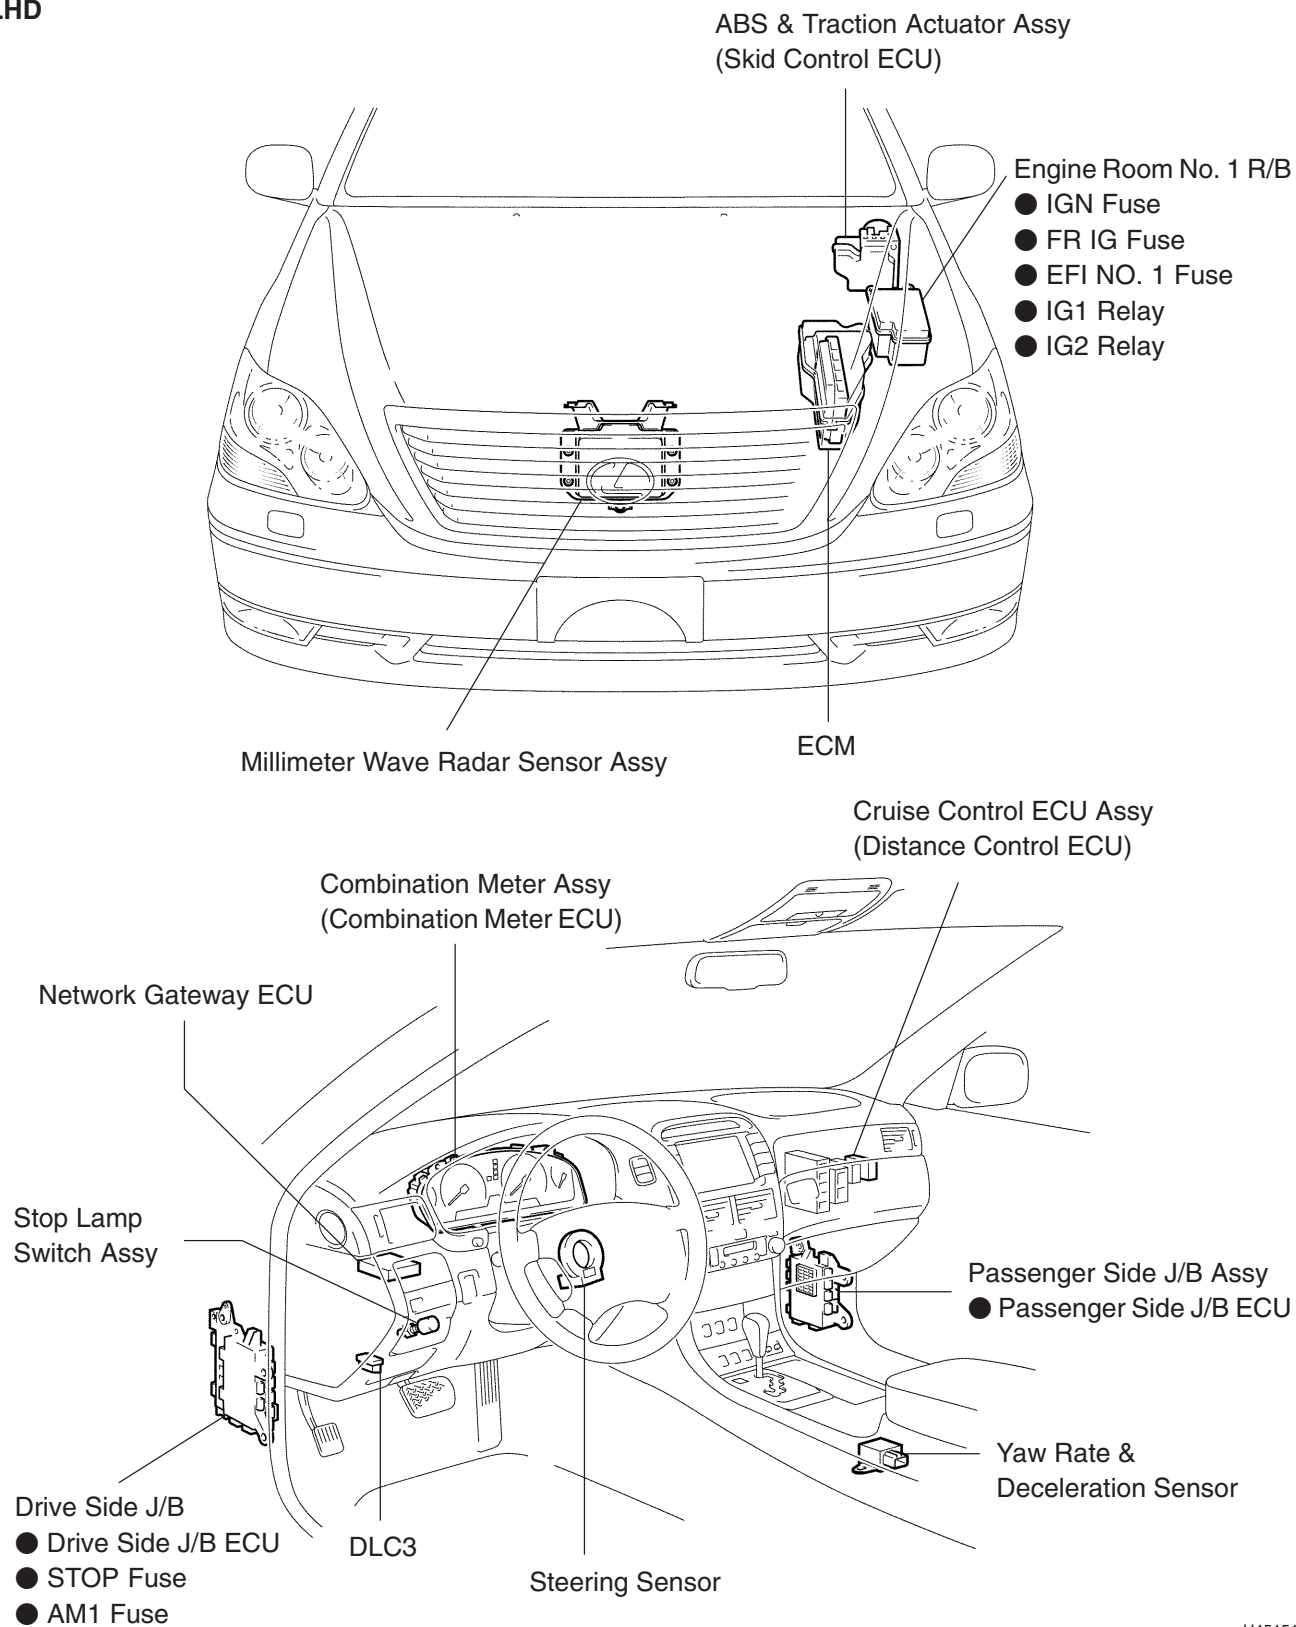

RHD

ABS & Traction Actuator Assy
(Skid Control ECU)

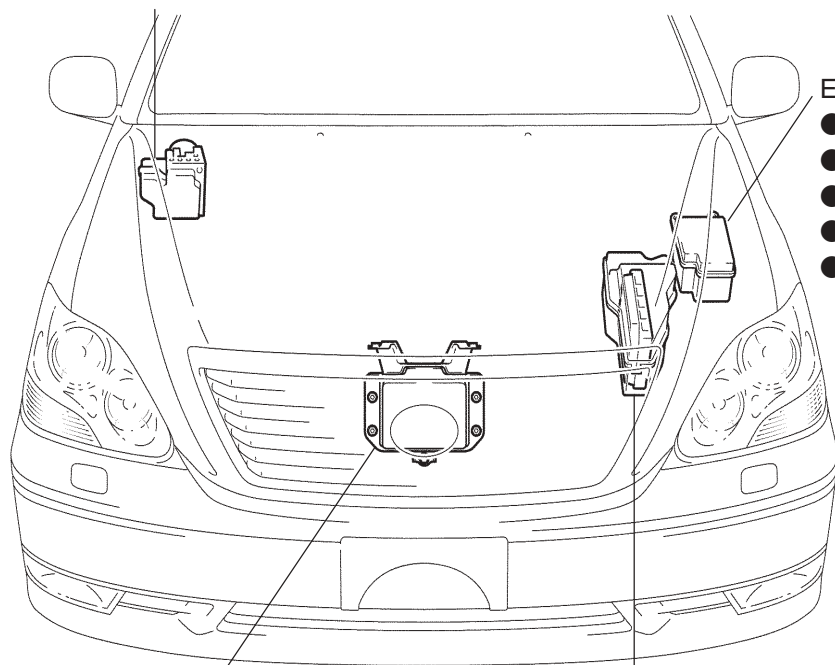

Engine Room No. 1 R/B

- IGN Fuse
- FR IG Fuse
- EFI NO. 1 Fuse
- IG1 Relay
- IG2 Relay

Millimeter Wave Radar Sensor Assy

Cruise Control ECU Assy
(Distance Control ECU)

Combination Meter Assy
(Combination Meter ECU)

Network Gateway ECU

Passenger Side J/B Assy

- Passenger Side J/B ECU

Stop Lamp
Switch Assy

Yaw Rate &
Deceleration Sensor

Steering Sensor

DLC3

Drive Side J/B

- Drive Side J/B ECU
- STOP Fuse
- AM1 Fuse

