




CIRCUIT

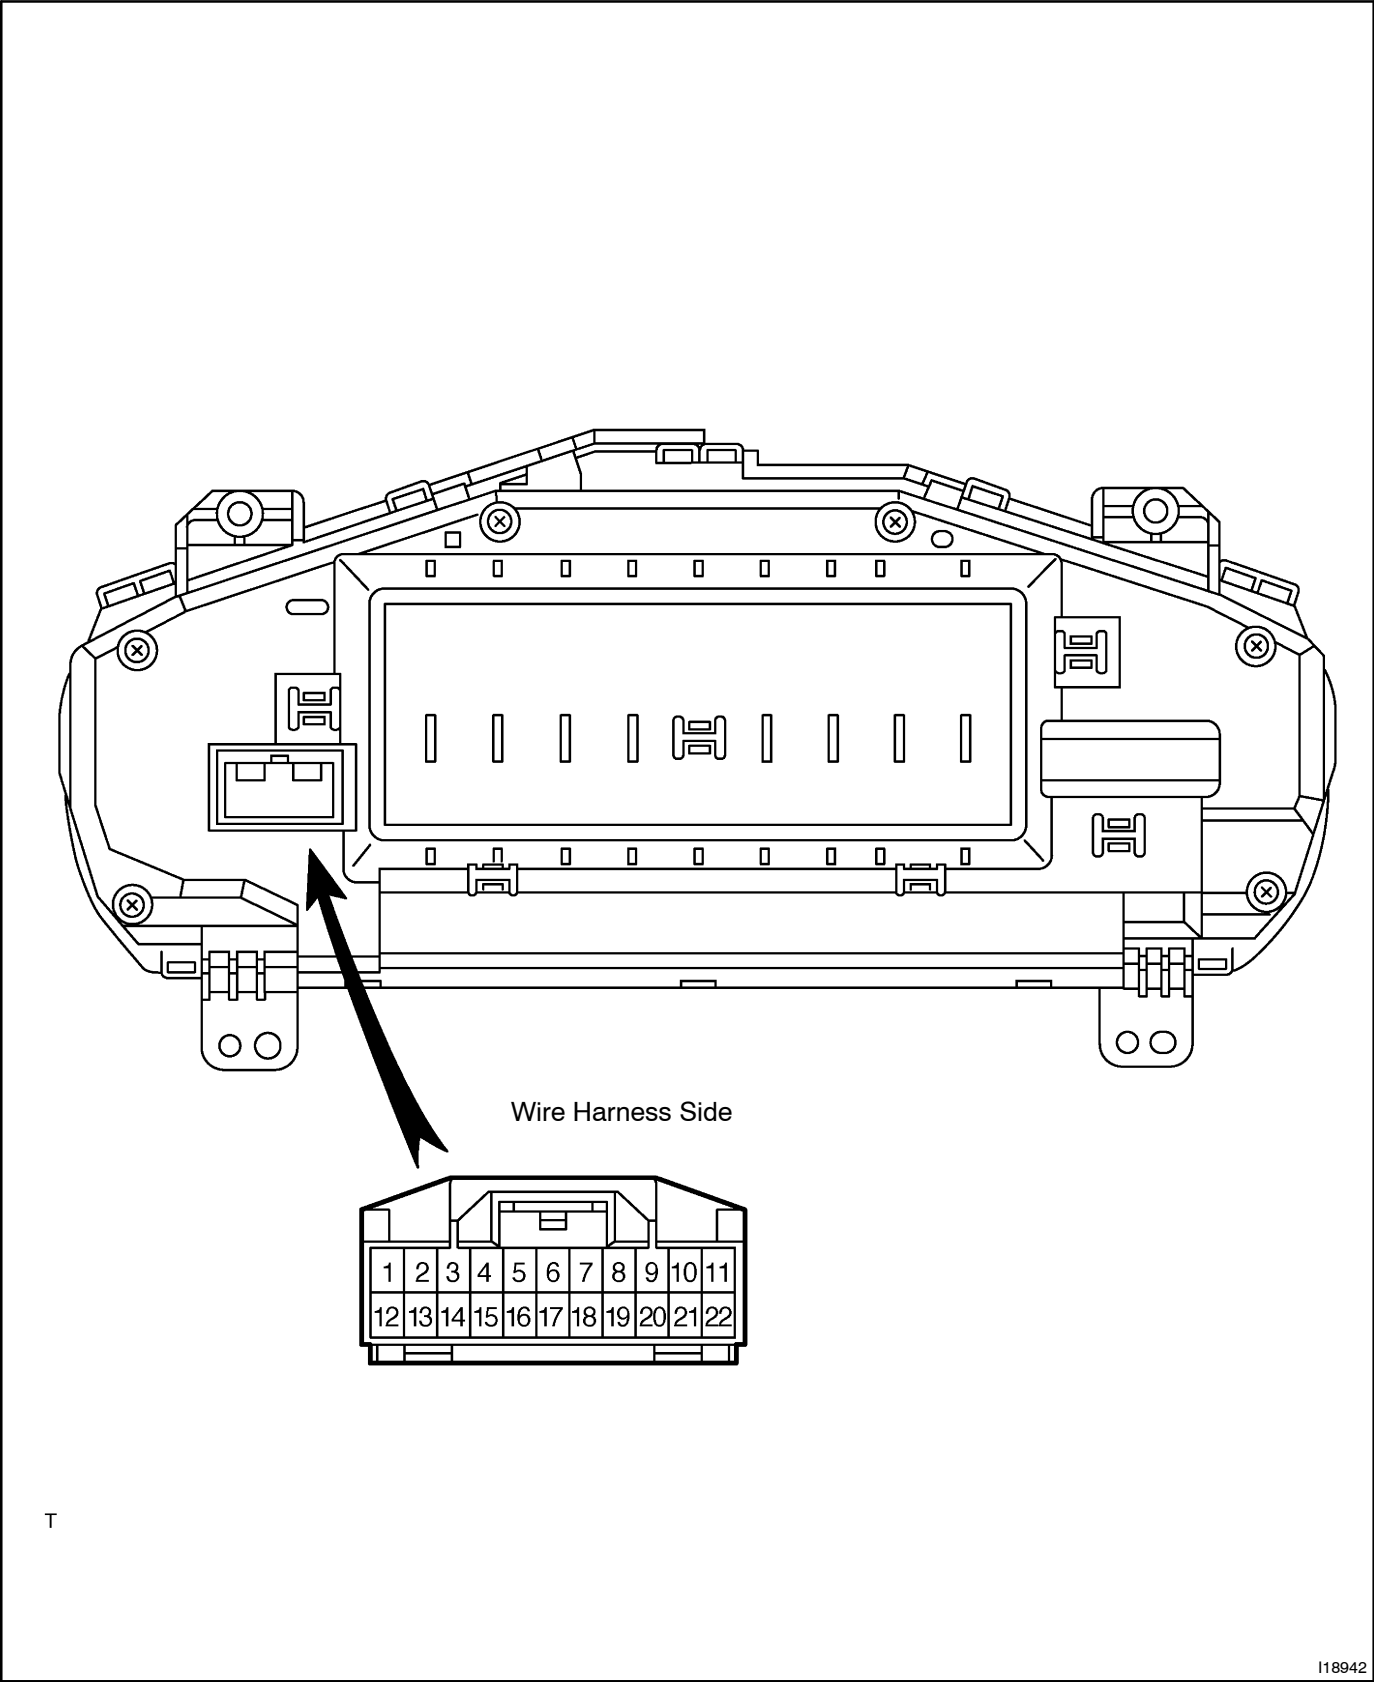

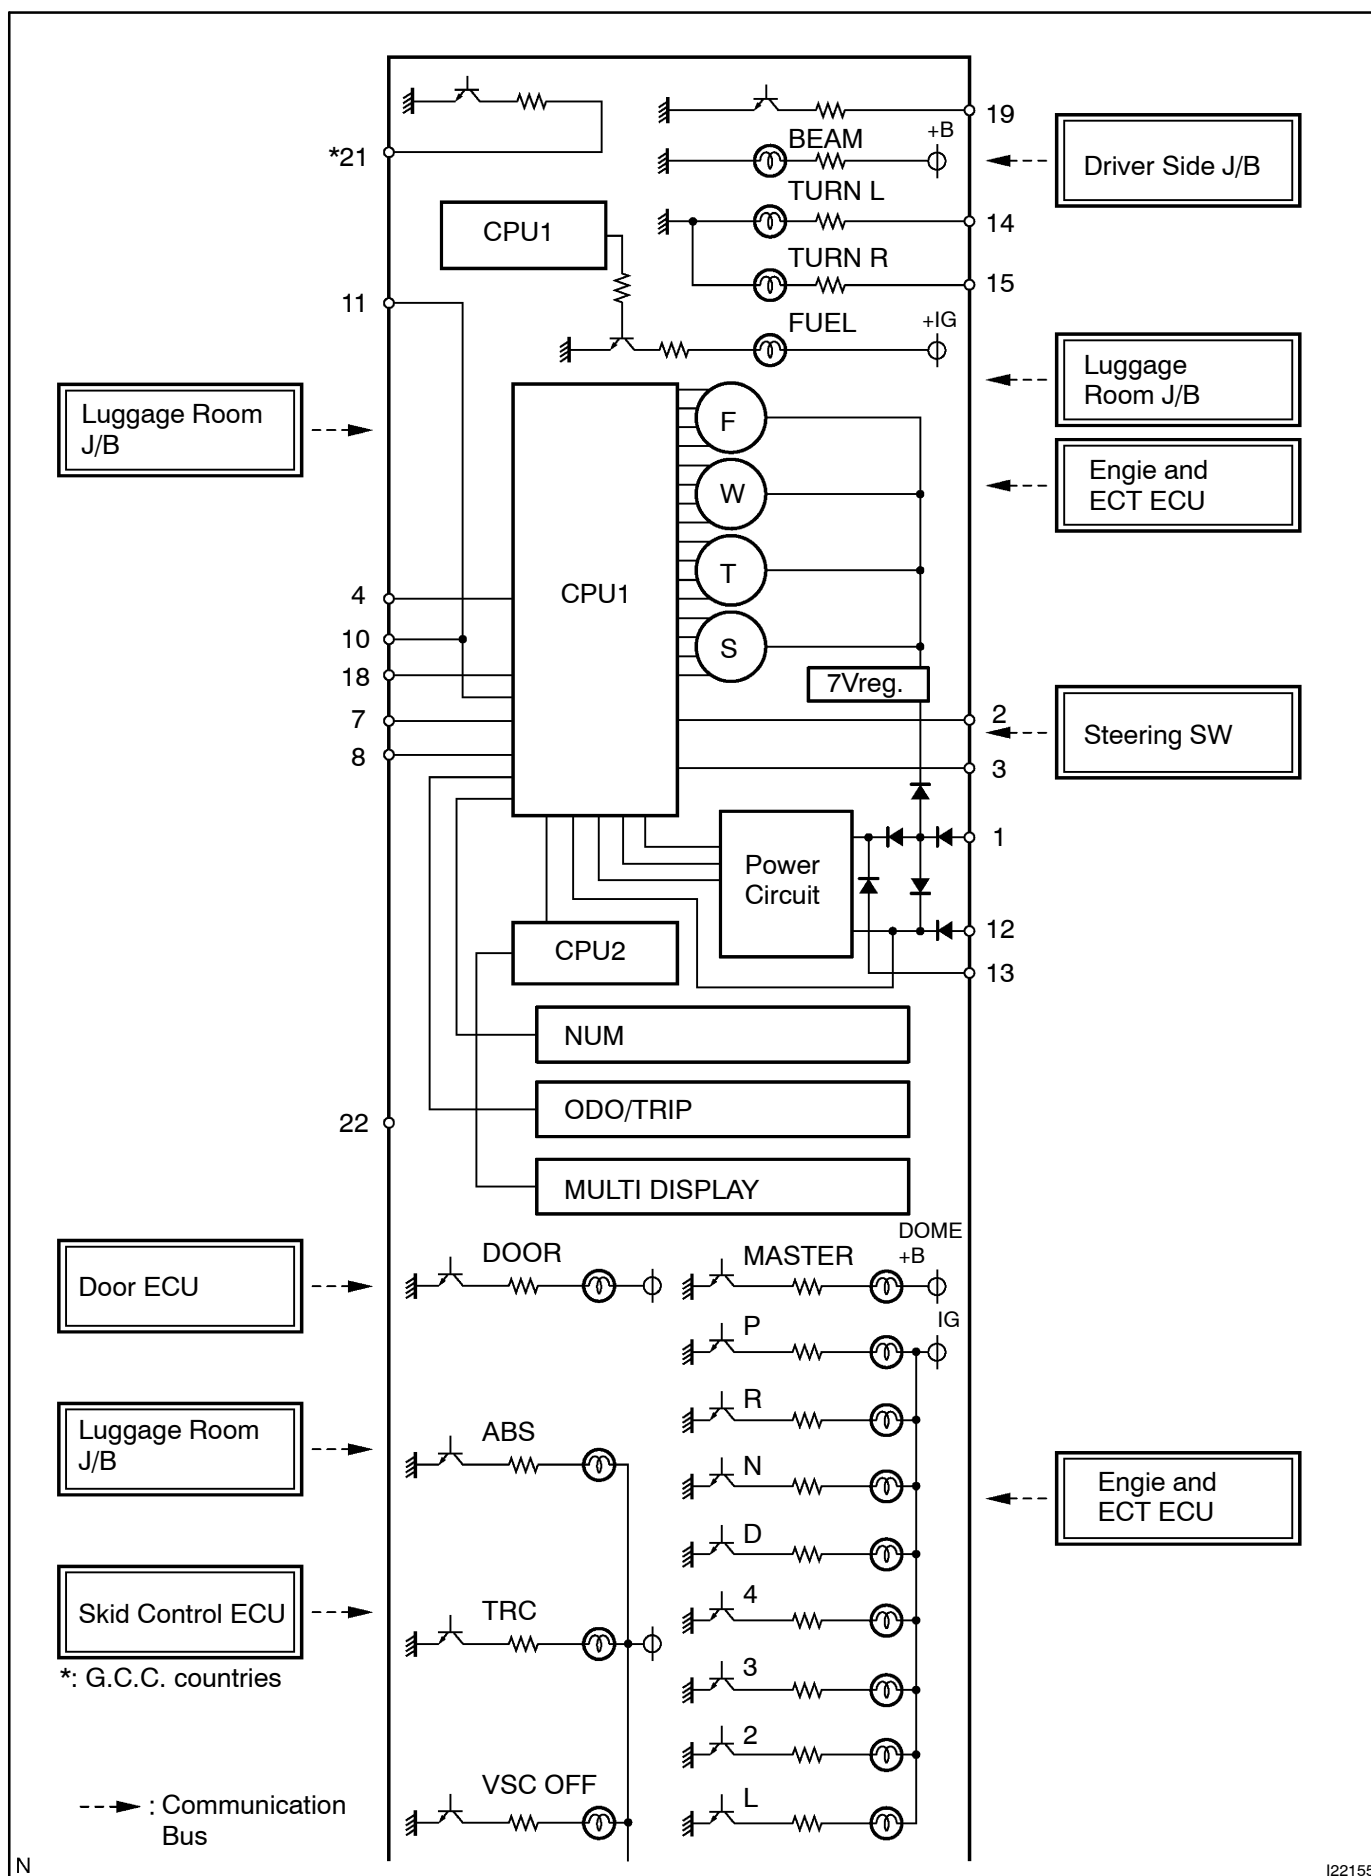

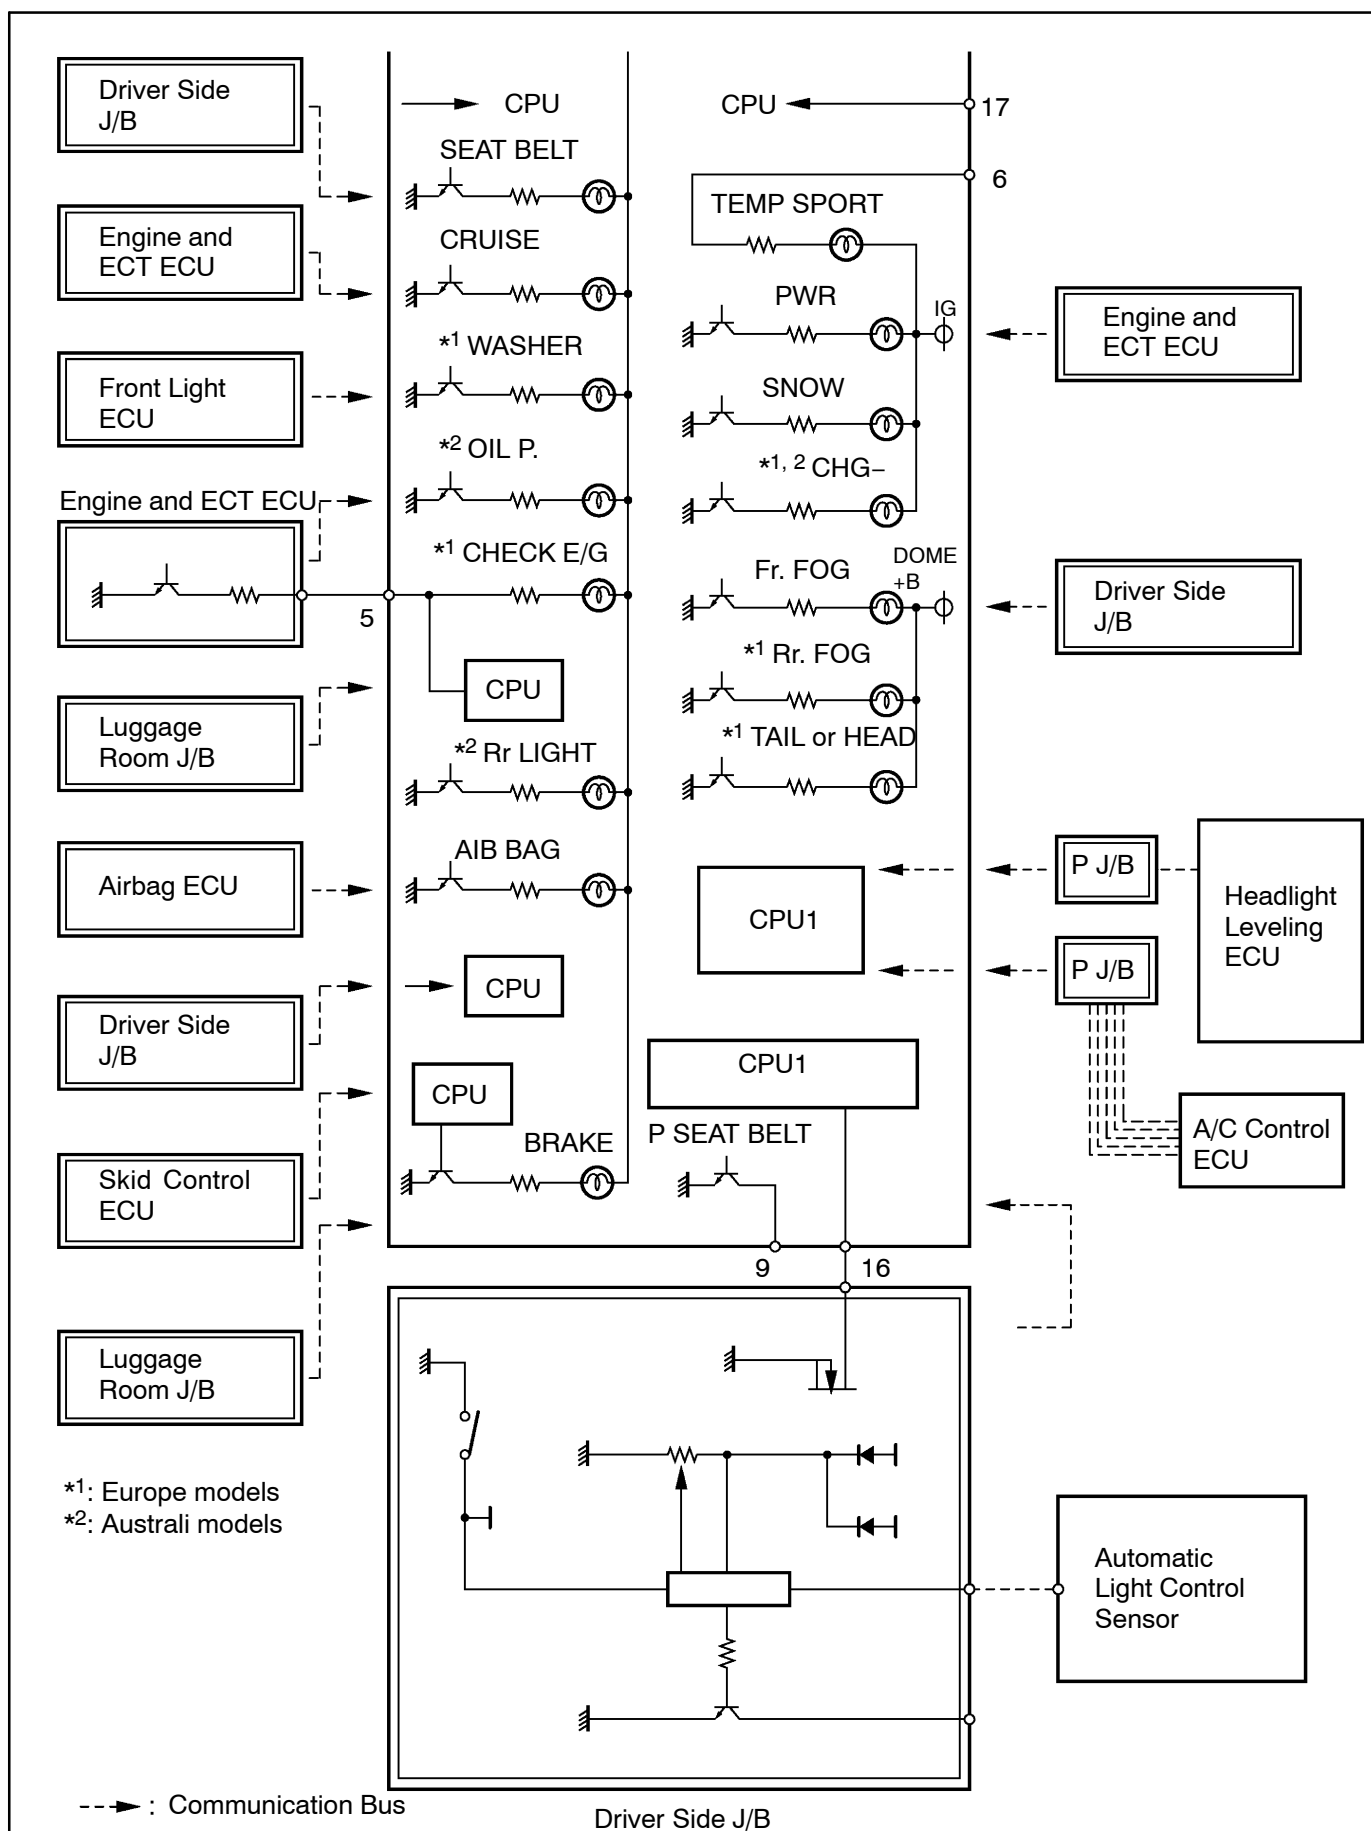

No.	Wiring connector side
1 (IG+)	GAUGE Fuse
2 (MPX+)	Gateway ECU
3 (MPX-)	Skid Control ECU
4 (S)	Engine and ECT ECU
5 (CHK)	Engine and ECT ECU
*1 6 (TEMS)	Air Suspension ECU
7 (A/B)	Trip Switch
8 (TRIP)	Trip Switch
9 (PBLT)	*2 Multi Display *3 Clock
10 (SE)	Trip Switch
11 (ES)	Ground
12 (B)	MPX B2 Fuse
13 (B)	DOVE Fuse
14 (B)	Turn Signal Switch LH
15 (B)	Turn Signal Switch RH
16 (ILL-)	Driver Side J/B
*1 17 (H)	Air Suspension ECU
18 (SI)	Skid Control ECU
19 (+S)	Multi Display, Stereo Component Amplifier
20	–
21 (ALRM)	Speed Warning Buzzer
22 (E2)	Ground

*1: Except G.C.C. countries

*2: w/ LEXUS navigation system

*3: w/o LEXUS navigation system