


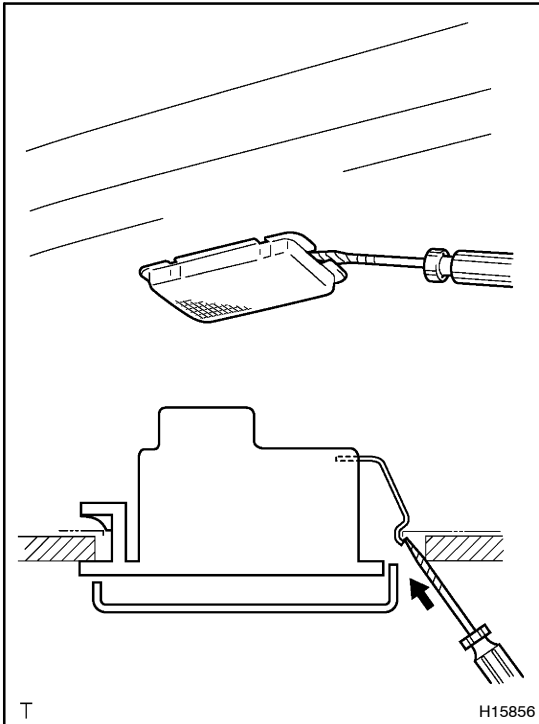


REMOVAL

1. REMOVE LUGGAGE COMPARTMENT LIGHT

- Using a screwdriver, pry the luggage compartment light out.
- Disconnect the connector and remove the luggage compartment light.


2. REMOVE ASSIST GRIP

Remove the 2 screws and assist grip.

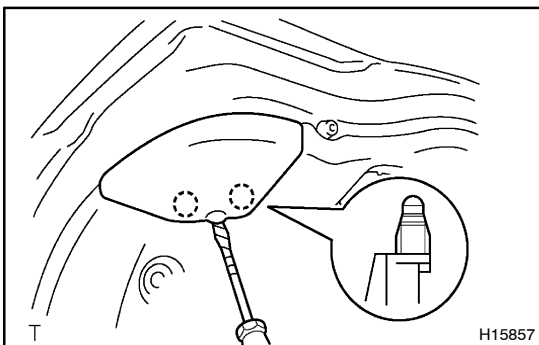


3. REMOVE REAR COMBINATION LIGHT SERVICE COVER

- Using a screwdriver, remove the rear combination light service cover.
- Employ the same manner described above to the other side.

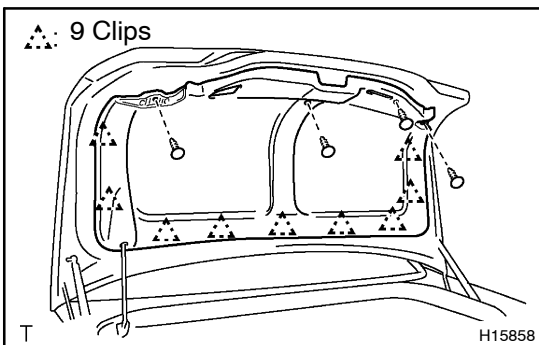

4. REMOVE DOOR TRIM COVER

Remove the 4 clips and door trim cover.

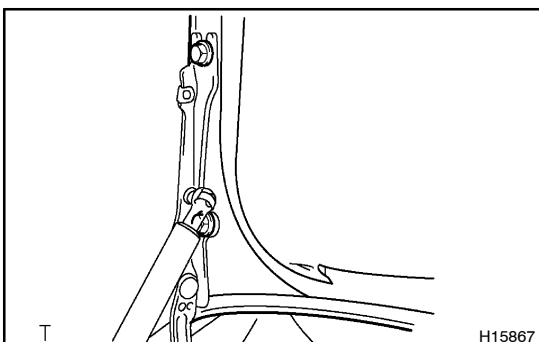

5. REMOVE LUGGAGE COMPARTMENT DOOR


- Disconnect the connectors and wire harness clamps.
- Remove the 4 bolts and door.

Torque: 13 N·m (135 kgf·cm, 10 ft·lbf)

6. REMOVE FLOOR MAT

7. REMOVE DECK TRIM SIDE BOARD


- Remove the clip and deck trim side board.
- Employ the same manner described above to the other side.

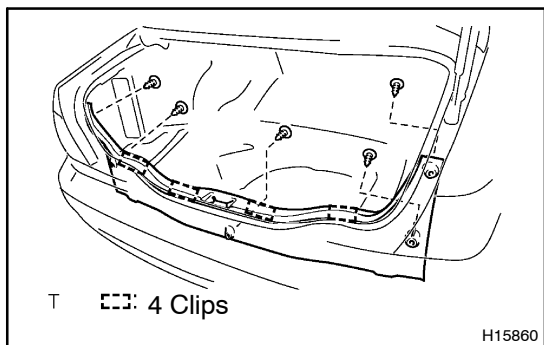**8. REMOVE REAR FLOOR FINISH PLATE**


- (a) Remove the 2 bolts and luggage hold belt strikers.
- (b) Remove the 5 clips.
- (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

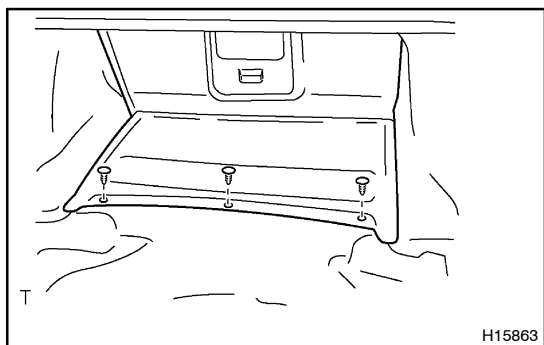**9. REMOVE FRONT LUGGAGE COMPARTMENT TRIM COVER**


- (a) Remove the luggage compartment light.
- (b) Remove the 2 hooks.
- (c) w/o Rear A/C or airpurifier:
Remove the 3 clips.

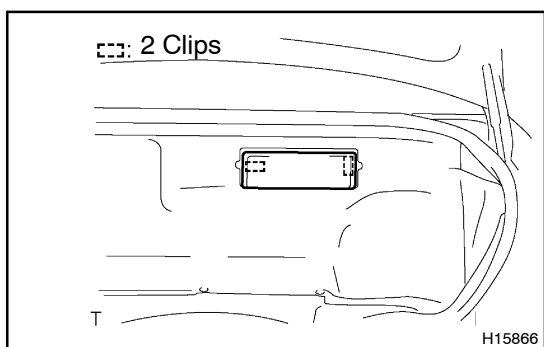


- (d) w/ Rear A/C or airpurifier:
Using a screwdriver, remove the cover.

HINT:


Tape the screwdriver tip before use.

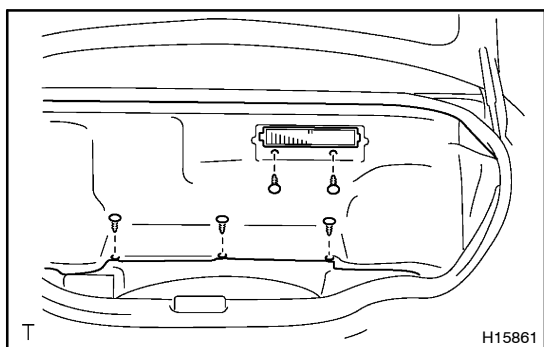

- (e) w/ Rear A/C or airpurifier:
Remove the 5 clips.

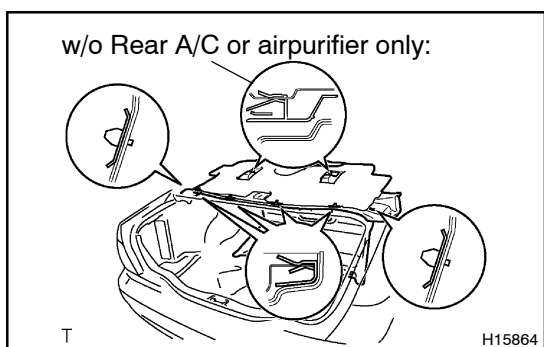

- (f) Disengage the trim hooks and remove the front luggage compartment trim cover as shown in the illustration.

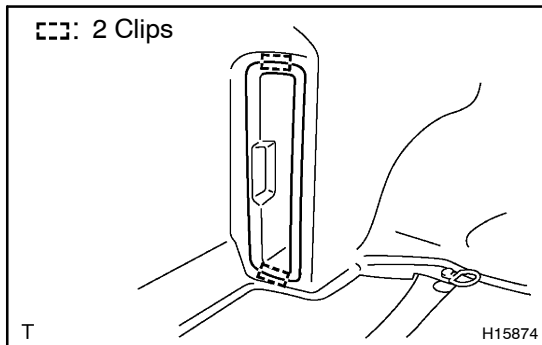
**10. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER**

- (a) Using a screwdriver, remove the side trim tool bag cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and luggage hold belt striker.

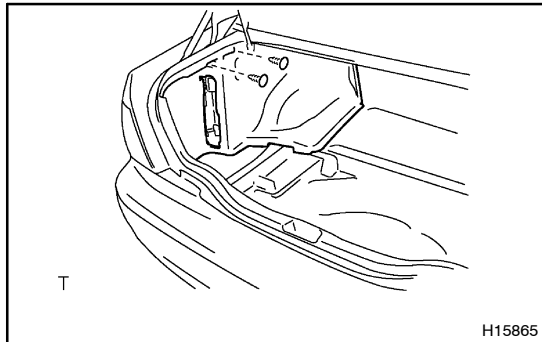

- (c) Remove the 2 clips and luggage compartment trim side cover.

- (d) Employ the same manner described above to the other side.

11. REMOVE SPARE WHEEL GUARD**12. REMOVE SPARE WHEEL COVER****13. REMOVE LUGGAGE COMPARTMENT TRIM INNER LOWER COVER****14. REMOVE DOOR STOPPER CUSHION COVER AND DOOR HINGE COVER****15. REMOVE DOOR HINGES**

Remove the 4 bolts and door hinges.

Torque: 13 N·m (135 kgf·cm, 10 ft·lbf)

16. REMOVE DOOR SUPPORTS