


REMOVAL

1. REMOVE REAR SEAT CUSHION
(See page BO-172 or BO-179)
2. REMOVE REAR SEATBACK
(See page BO-172 or BO-179)

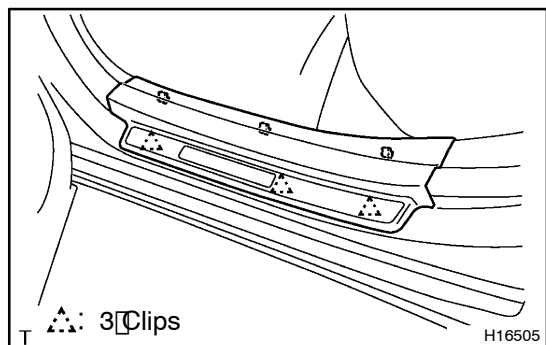

3. REMOVE REAR DOOR SCUFF PLATE


- (a) Using a screwdriver, remove the rear door scuff plate as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

4. REMOVE REAR AND UPPER PART OF REAR DOOR OPENING TRIMS

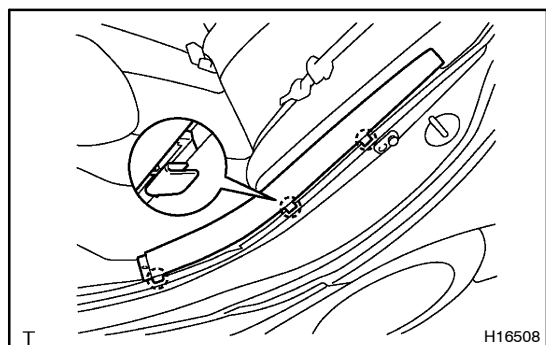


5. REMOVE REAR SEAT SIDE GARNISH

- (a) Using a screwdriver, remove the rear seat side garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

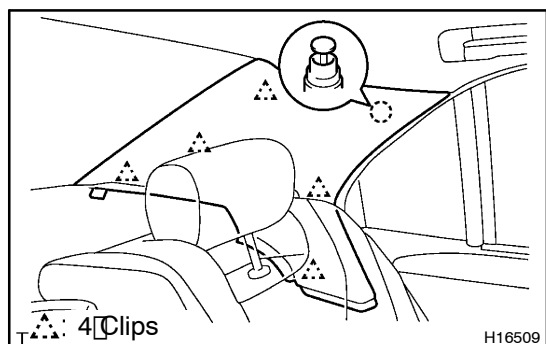

6. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, disengage the clips, then pull the garnish forward to remove it.


HINT:

Tape the screwdriver tip before use.

NOTICE:

Be careful not to damage the airbag and wire harness.

- (b) Employ the same manner described above to the other side.

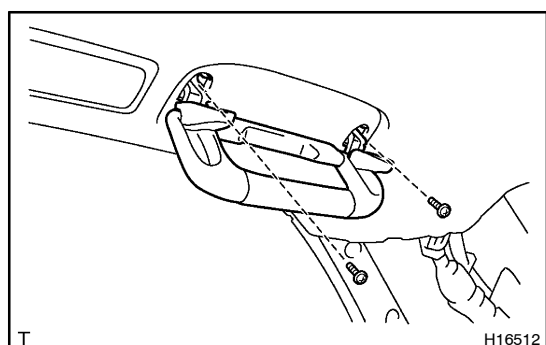


7. REMOVE REAR ASSIST GRIP

- (a) Using a screwdriver, open the screw cap.


HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 screws and assist grip.
- (c) Employ the same manner described above to the other side.

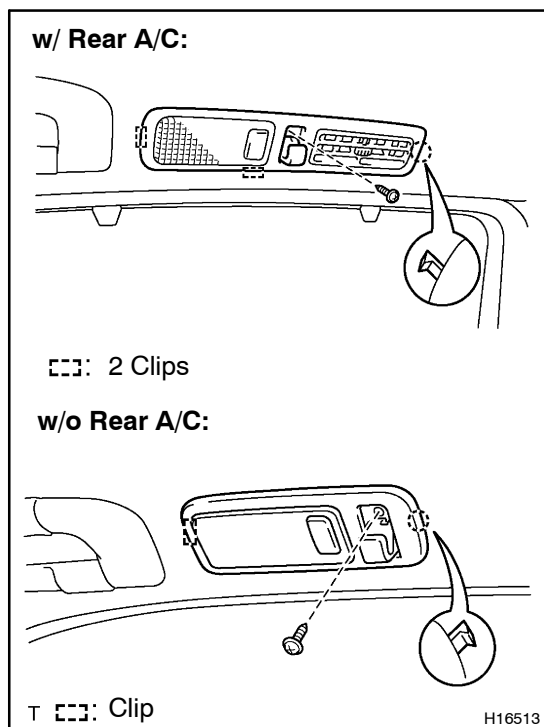**8. REMOVE REAR PERSONAL LIGHT ASSEMBLY**

- Open the coat hook.
- Remove the screw and rear personal light assembly, then disconnect the connector.
- Employ the same manner described above to the other side.

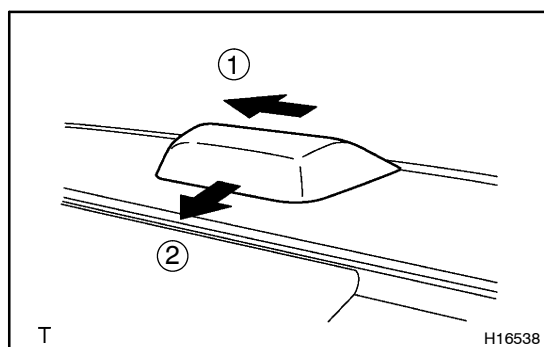**9. REMOVE HIGH-MOUNTED STOP LIGHT**


- Slide the high-mounted stop light as shown in the illustration to remove it.
- Disconnect the connector.

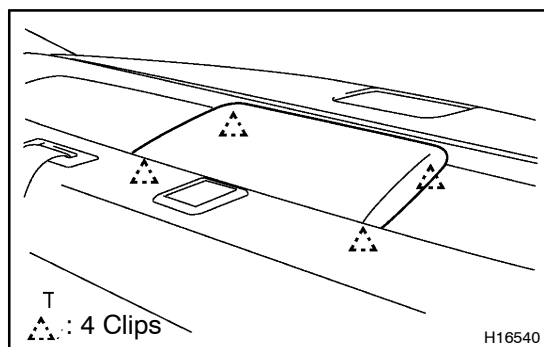**10. REMOVE REAR SPEAKER GRILLE**


Using a screwdriver, remove the rear speaker grille.

HINT:


Tape the screwdriver tip before use.

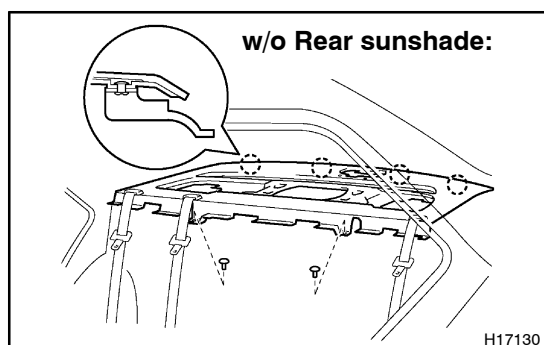**11. REMOVE PACKAGE TRAY TRIM PANEL**


- Remove the 2 clips.
- Remove the rear seat outer belts through the cutout on the package tray trim panel.
- w/o Rear sunshade:
Pull the package tray trim panel forward to remove it.

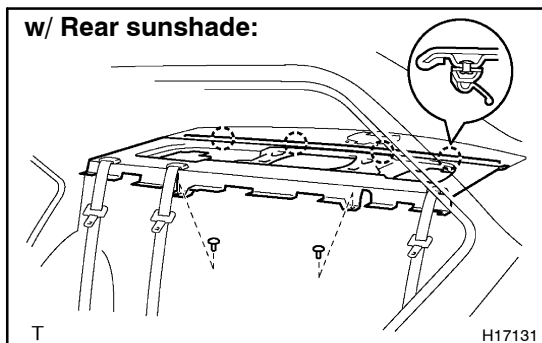w/ Rear sunshade:


- (d) w/ Rear sunshade:
Pull the package tray trim panel forward to remove it.

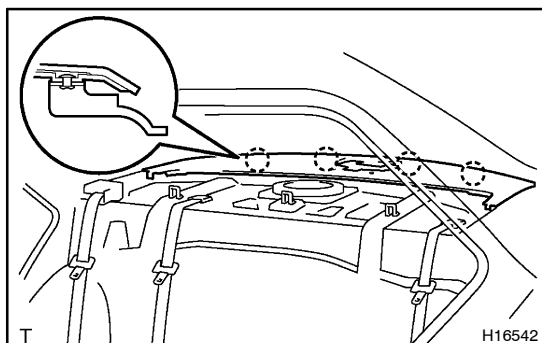**12. w/ Rear sunshade:****REMOVE NO. 2 PACKAGE TRAY TRIM PANEL**

Pull the No. 2 package tray trim panel forward to remove it.

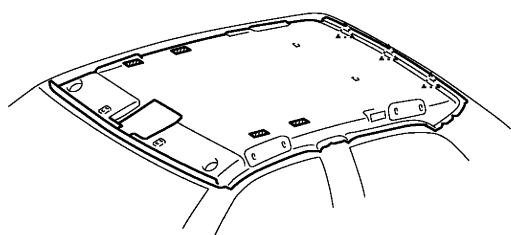13. REMOVE ROOM PARTITION TRIM**w/o Sliding roof:**

▲: 3 Clips

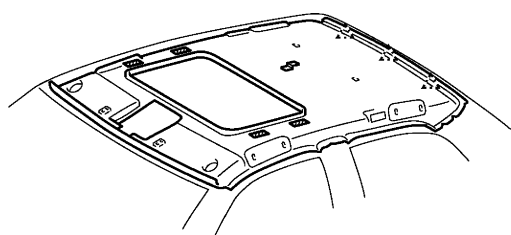w/ Sliding roof:

▲: 3 Clips

14. REMOVE REAR PORTION OF ROOF HEADLINING

- (a) Disengage the 3 clips.
(b) Pull the rear portion of roof headlining downward.


15. REMOVE BACK WINDOW OUTSIDE MOULDING


- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

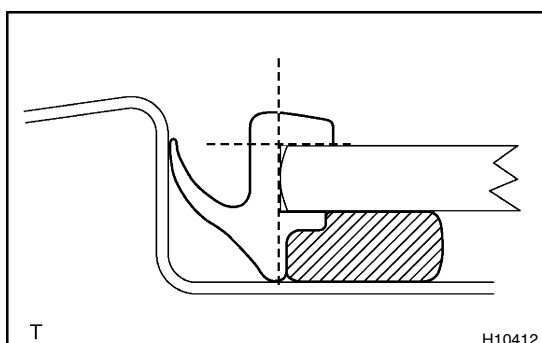

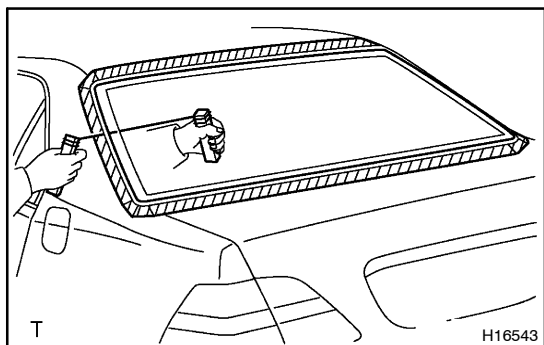**16. REMOVE BACK WINDOW GLASS**

- (a) Disconnect the connectors.
- (b) Push piano wire through from the interior.
- (c) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.



NOTICE:

When separating the glass, take care not to damage the paint and exterior.

- (d) Cut the adhesive by pulling the piano wire around it.

HINT:


Cut the adhesive areas as shown in the illustration, leaving the adhesive where the stoppers are.

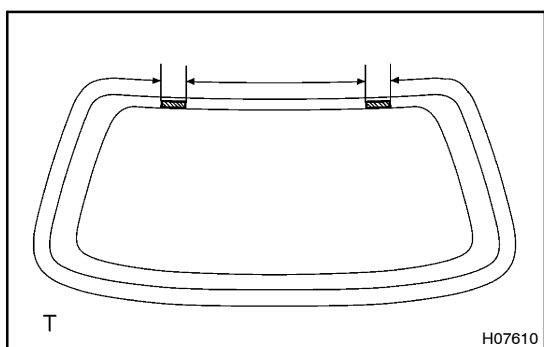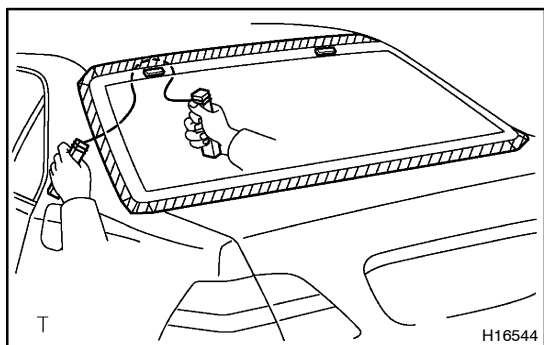

- (e) Let the piano wire pass as shown in the illustration, cut off the adhesive sticking to the stoppers.

NOTICE:


Do not damage the glass stoppers.

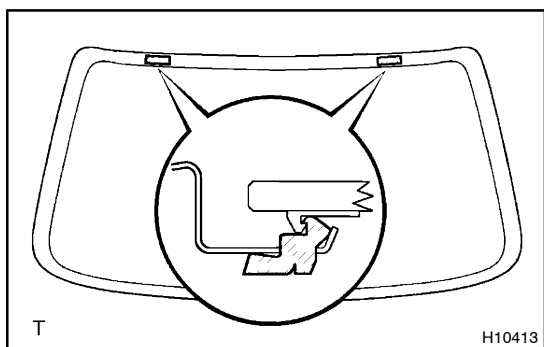

- (f) Stoppers used for repair:
Disengage the stoppers, then remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.

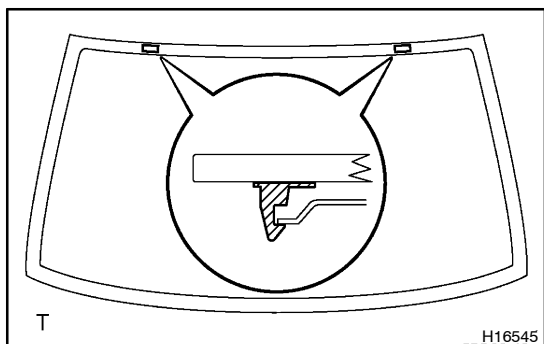

- (g) Stoppers for initial assembly:
Disengage the stoppers, then remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.