


REMOVAL

1. REMOVE FRONT SEATS (See page BO-159)
2. REMOVE REAR SEAT CUSHION (See page BO-172 or BO-179)
3. REMOVE REAR SEATBACK ASSEMBLY (See page BO-172 or BO-179)
4. Power adjuster type:
REMOVE REAR SEAT ADJUSTER (See page BO-179)

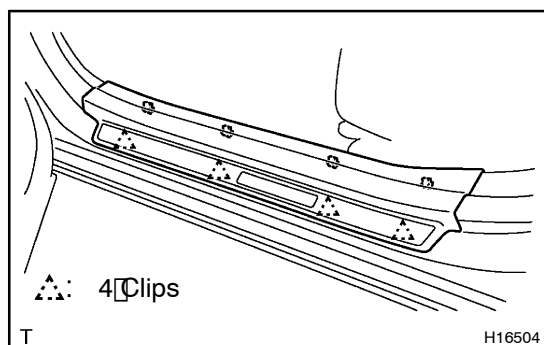


5. REMOVE FRONT DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the front door scuff plate as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

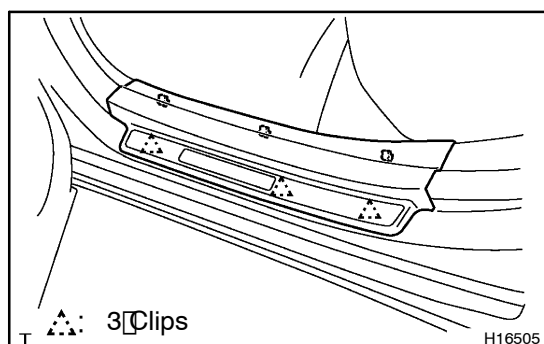

6. REMOVE REAR DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the rear door scuff plate as shown in the illustration.


HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

7. REMOVE FRONT DOOR OPENING TRIMS

8. REMOVE REAR DOOR OPENING TRIMS

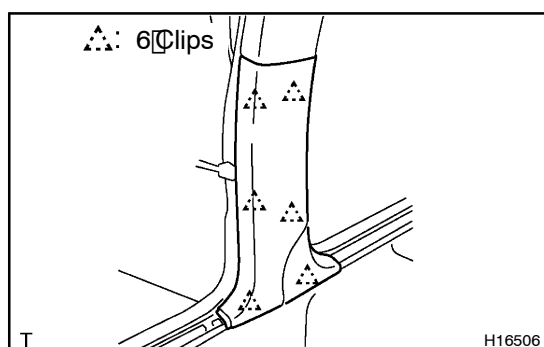


9. REMOVE CENTER PILLAR LOWER GARNISH

- (a) Using a screwdriver, remove the center pillar lower garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

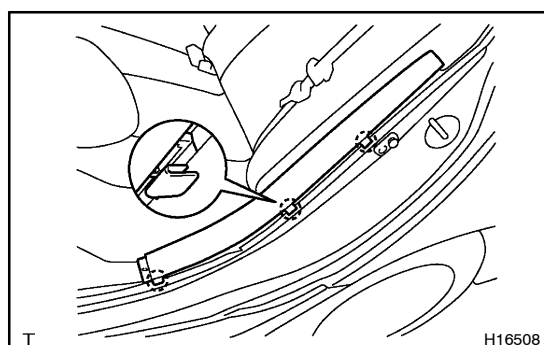


10. REMOVE REAR SEAT SIDE GARNISH

- (a) Using a screwdriver, remove the rear seat side garnish.

HINT:

Tape the screwdriver tip before use.


- (b) Employ the same manner described above to the other side.

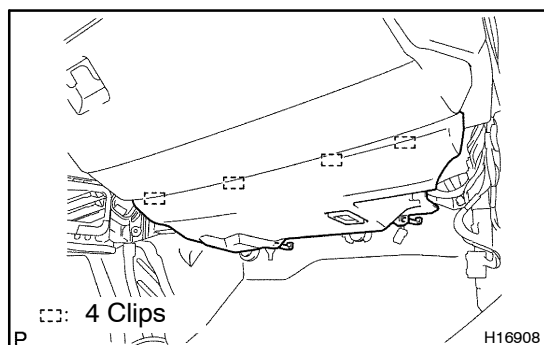**11. REMOVE NO. 2 UNDER COVER**

Using a screwdriver, pry the No. 2 under cover to remove it.

HINT:


Tape the screwdriver tip before use.

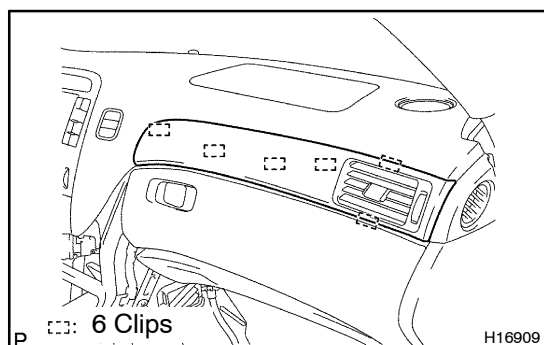**12. REMOVE NO. 2 GARNISH**

Using a screwdriver, remove the No. 2 garnish.

HINT:

Tape the screwdriver tip before use.

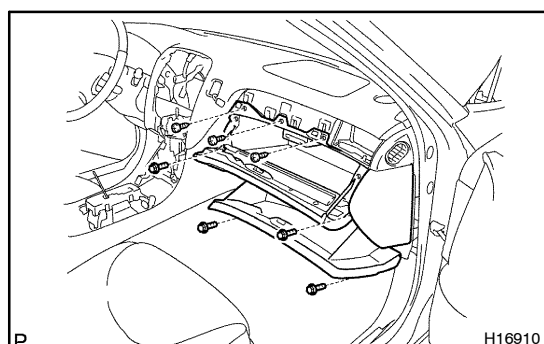
**13. REMOVE FINISH PANEL ASSEMBLY**

(a) Remove the 4 bolts and 3 screws.

(b) Using a screwdriver, remove the finish panel assembly.

HINT:

Tape the screwdriver tip before use.

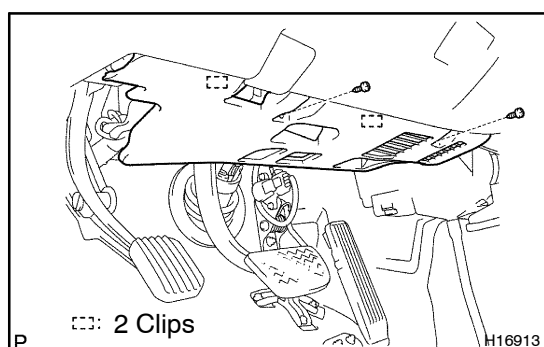**14. REMOVE NO. 1 UNDER COVER**

(a) Remove the 2 screws.

(b) Using a screwdriver, remove the No. 1 under cover.

HINT:

Tape the screwdriver tip before use.

15. REMOVE NO. 1 SAFETY PAD


(a) Remove the 2 screws and hood lock release lever.

(b) LHD:

Remove the 2 bolts and screw.

(c) RHD:

Remove the 2 bolts and 2 screws.

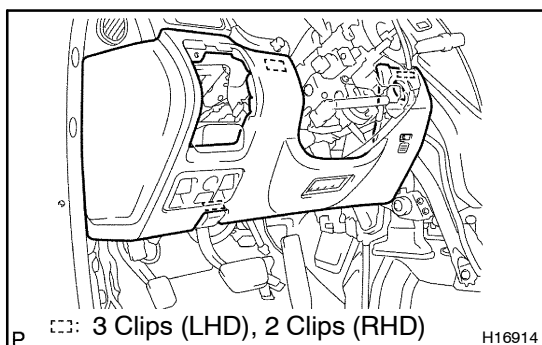


(d) Using a screwdriver, remove the No. 1 safety pad.

HINT:

Tape the screwdriver tip before use.

(e) Disconnect the connectors.

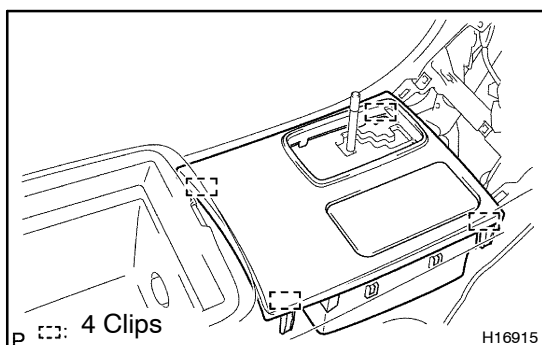


16. REMOVE CLUSTER FINISH PANEL

Using a screwdriver, remove the cluster finish panel.

HINT:

Tape the screwdriver tip before use.

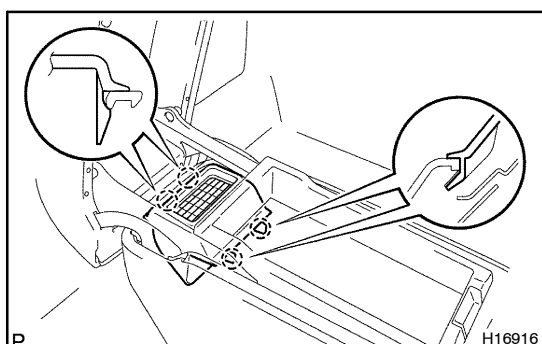


17. REMOVE REAR CONSOLE ARMREST

(a) Using a screwdriver, remove the upper rear console panel.

HINT:

Tape the screwdriver tip before use.


(b) Remove the console box carpet.

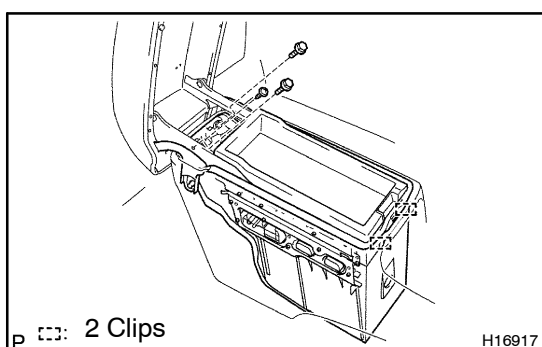

(c) Remove the 2 bolts and screw.

(d) Slide the inner tray and remove the 4 bolts.

(e) Remove the rear console armrest.

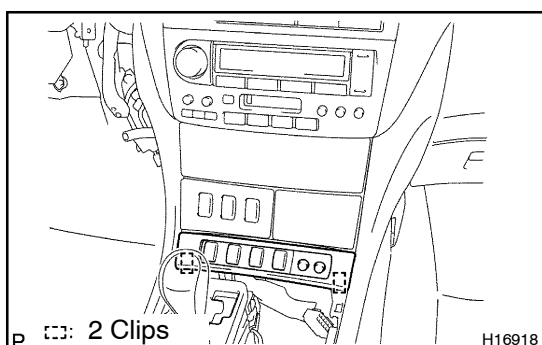


18. REMOVE LOWER CENTER FINISH PANEL

Using a screwdriver, remove the lower center finish panel.

HINT:

Tape the screwdriver tip before use.

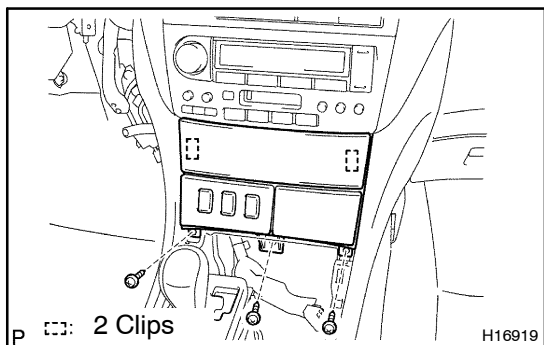**19. REMOVE LOWER CLUSTER FINISH PANEL**


- (a) Remove the 3 screws.
- (b) Using a screwdriver, remove the lower cluster finish panel.

NOTICE:

Do not pull the door, when remove the lower cluster finish panel.

HINT:

Tape the screwdriver tip before use.

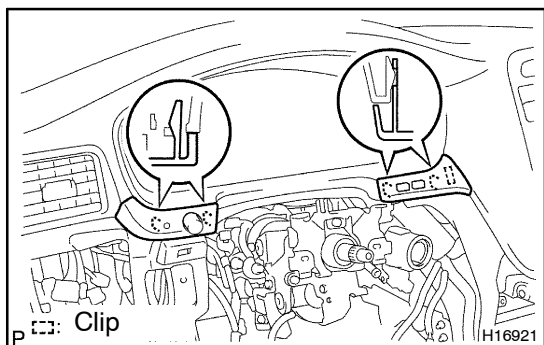**20. REMOVE CLUSTER FINISH END PANEL**

- (a) Using a screwdriver, remove the cluster finish end panel.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.


21. REMOVE CENTER LOWER CLUSTER FINISH PANEL

- (a) Using a screwdriver, remove the center lower cluster finish panel.


HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

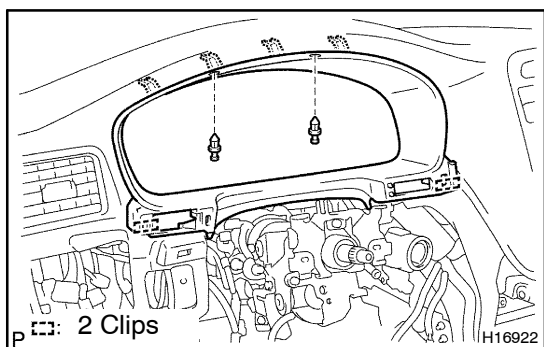**22. REMOVE CLUSTER FINISH PANEL**

Remove the 2 clips and cluster finish panel.

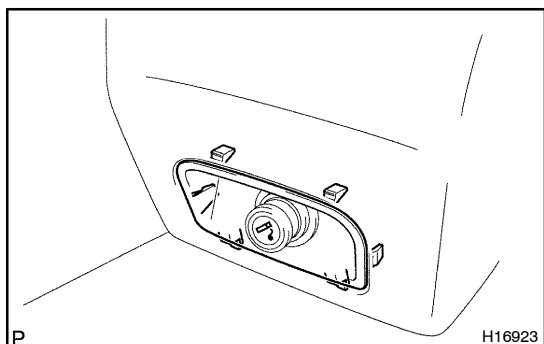
**23. REMOVE CONSOLE BOX**

- (a) Using a screwdriver, remove the console box plate.


HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

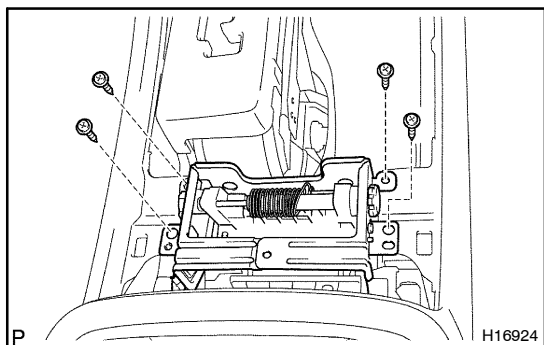

- (c) Remove the 4 screws and cup holder.

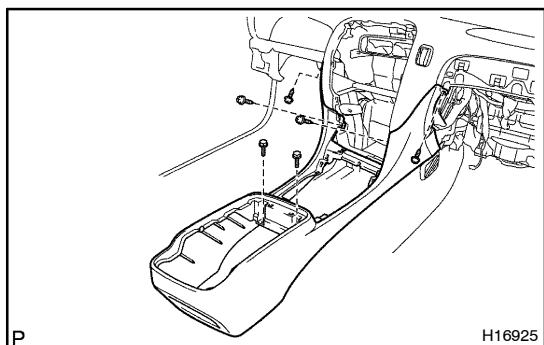

- (d) Remove the 2 bolts, 4 screws and console box.


24. REMOVE AIR DUCT

- (a) Using a screwdriver, remove the 4 caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and 2 air ducts.

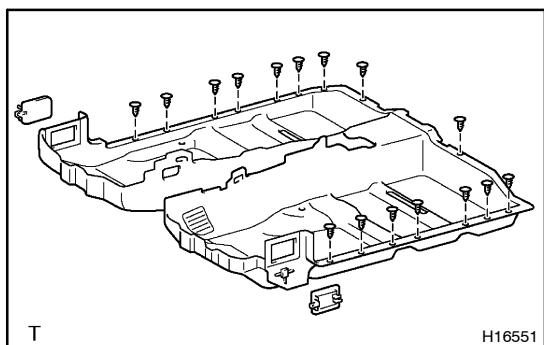

25. REMOVE FUSE BOX COVERS

26. REMOVE FLOOR CARPET

- (a) Using a clip remover, remove the 16 clips.
 (b) Through the wire harness and connector from the cut-outs.
 (c) Disengage the flange clips, then remove the floor carpet.

NOTICE:

Be careful not to damage the wire harness and connectors.