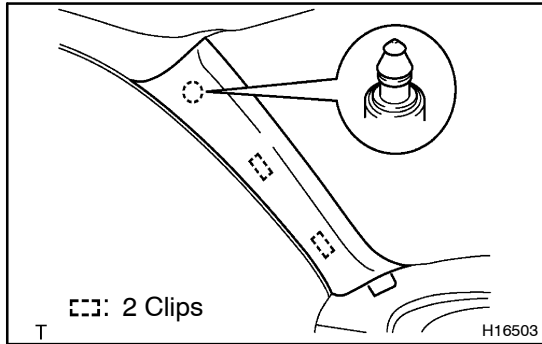




REMOVAL

1. REMOVE FRONT PILLAR GARNISH

- (a) Push the upper portion of front pillar garnish, then pull and release the clip.
- (b) Using a screwdriver, remove the front pillar garnish as shown in the illustration.

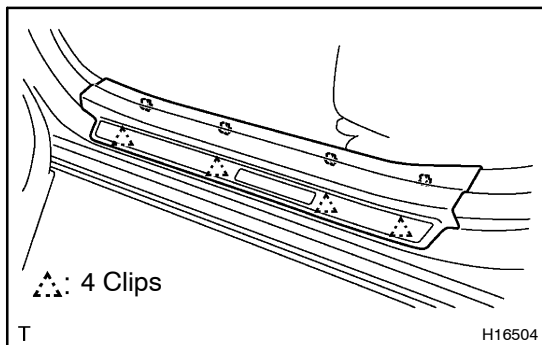
HINT:

Tape the screwdriver tip before use.

- (c) Employ the same manner described above to the other side.

NOTICE:

When install the front pillar garnish, replace new clip on the upper portion of front pillar garnish.



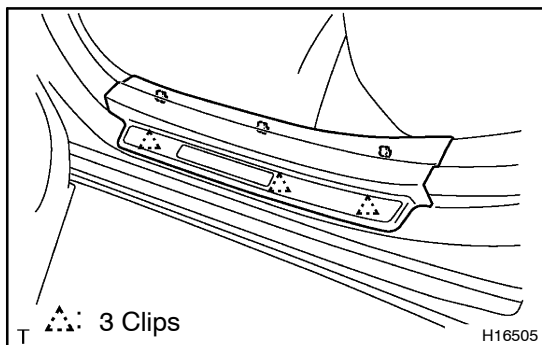
2. REMOVE FRONT DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the front door scuff plate as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.



3. REMOVE REAR DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the rear door scuff plate as shown in the illustration.

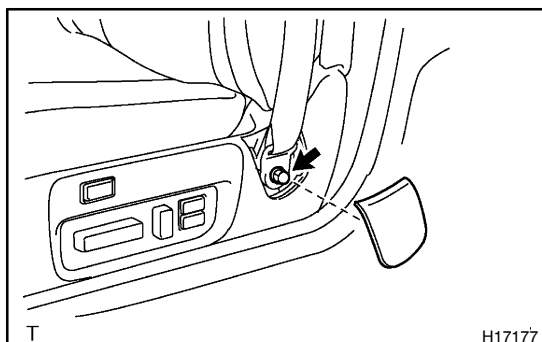
HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

4. REMOVE FRONT DOOR OPENING TRIMS

5. REMOVE REAR DOOR OPENING TRIMS



6. REMOVE FRONT SEAT OUTER BELT ANCHOR

- (a) Using a screwdriver, remove the anchor cover from the front seat.

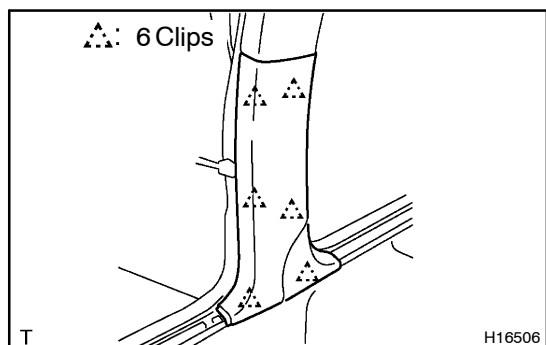
HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and anchor from the front seat.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

- (c) Employ the same manner described above to the other side.

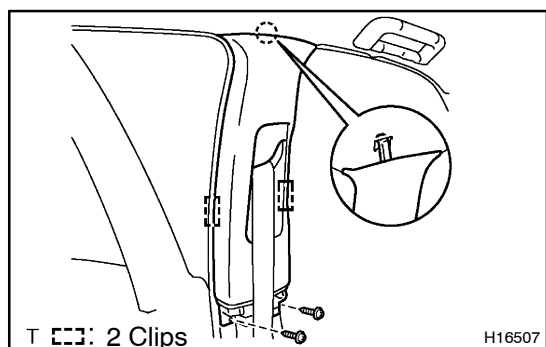
**7. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar lower garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

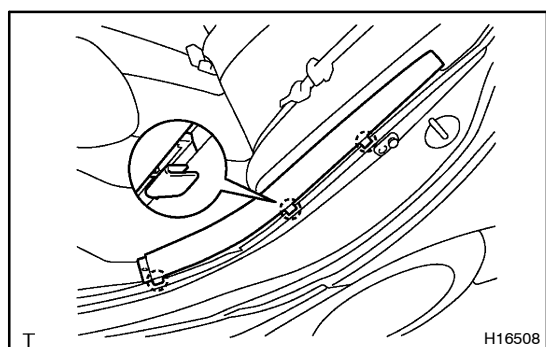
**8. REMOVE CENTER PILLAR UPPER GARNISH**

- (a) Remove the 2 screws.
- (b) Using a screwdriver, remove the center pillar upper garnish.

HINT:

Tape the screwdriver tip before use.

- (c) Employ the same manner described above to the other side.

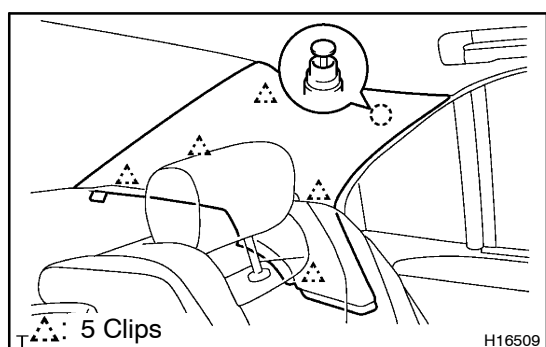
**9. REMOVE REAR SEAT SIDE GARNISH**

- (a) Using a screwdriver, remove the rear seat side garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

**10. REMOVE ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, disengage the clips, then pull the garnish forward to remove it.

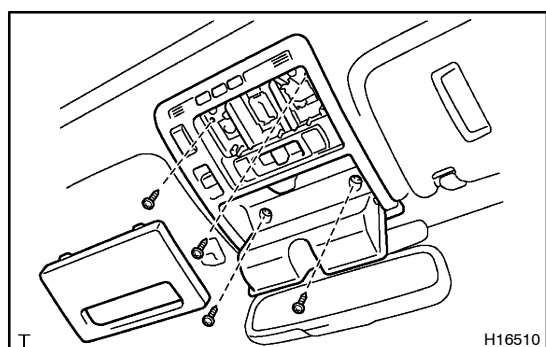
HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

NOTICE:

**At the time of installation, please refer to the following item.
If the clip is damaged, replace new clip.**

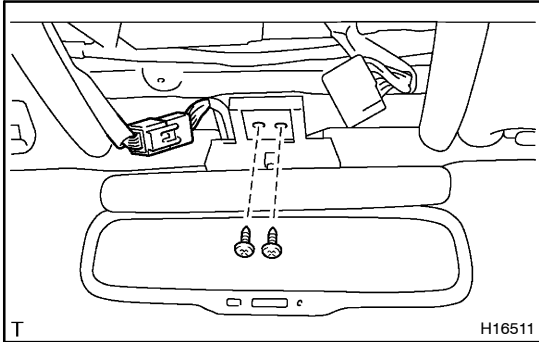
**11. REMOVE MAP LIGHT ASSEMBLY**

- (a) w/ LEXUS link system:
Open the control switch box.
- (b) w/o LEXUS link system:
Open the upper console.
- (c) Using a screwdriver, remove the lens.

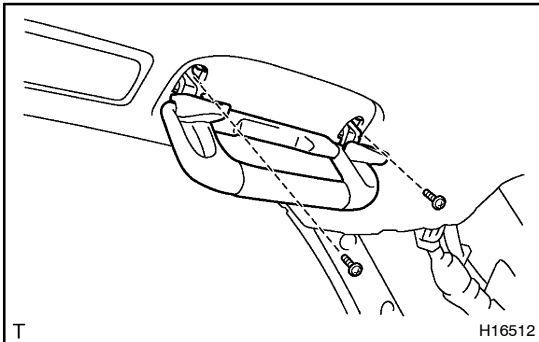
HINT:

Tape the screwdriver tip before use.

- (d) Remove the 4 screws and map light assembly, then disconnect the connectors.

**12. REMOVE INNER REAR VIEW MIRROR**

- (a) Remove the 2 screws and inner rear view mirror.
- (b) Disengage the connector from the body.
- (c) Disconnect the connector.

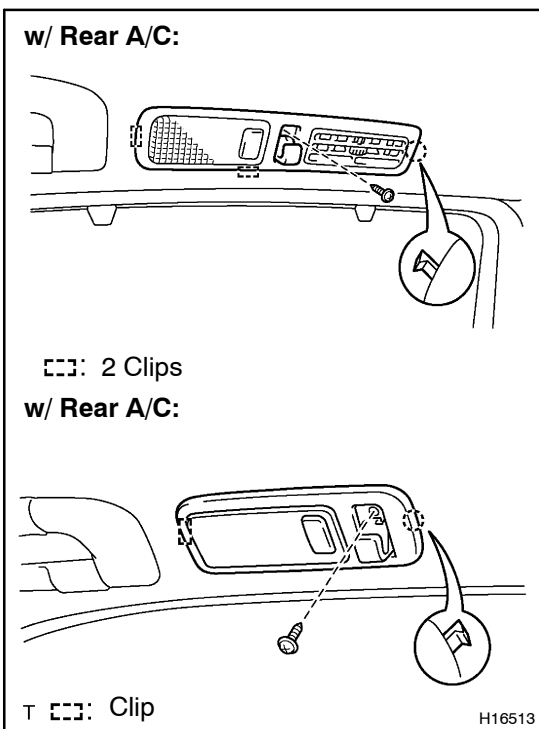
**13. REMOVE ASSIST GRIP**

- (a) Using a screwdriver, open the screw cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.
- (c) Employ the same manner described above to the other sides.

**14. REMOVE REAR PERSONAL LIGHT ASSEMBLY**

- (a) Open the coat hook.
- (b) Remove the screw and rear personal light assembly, then disconnect the connector.
- (c) Employ the same manner described above to the other side.

15. REMOVE SUN VISOR

- (a) Using a screwdriver, remove the cap.

HINT:

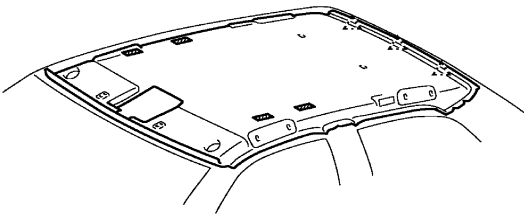
Tape the screwdriver tip before use.

- (b) Remove the 2 screws and sun visor, then disconnect the connector.
- (c) Employ the same manner described above to the other side.

16. REMOVE SUN VISOR HOLDERS

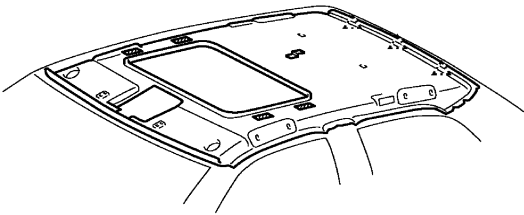
Remove the 2 screws and 2 holders.

w/o Sliding roof:



△: 3 Clips

w/ Sliding roof:



T △: 3 Clips

H16514

17. REMOVE ROOF HEADLINING

- (a) Disengage the 3 clips.
- (b) Disengage the fasteners.
- (c) w/ Sliding roof:
Slide the roof headlining rearward to release it from the front portion of sliding roof housing.
- (d) w/ Sliding roof:
Slide the roof headlining forward to release it from the rear portion of sliding roof housing.
- (e) Pull the roof headlining downward to remove it.