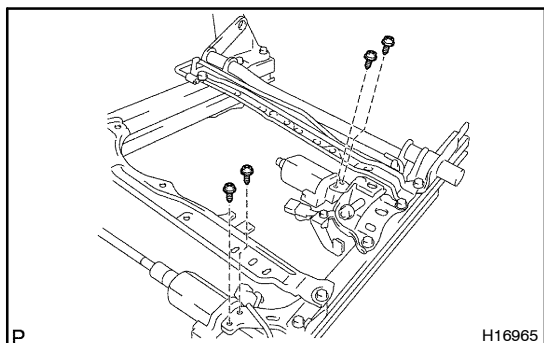




REASSEMBLY

1. INSTALL SLIDE MOTOR

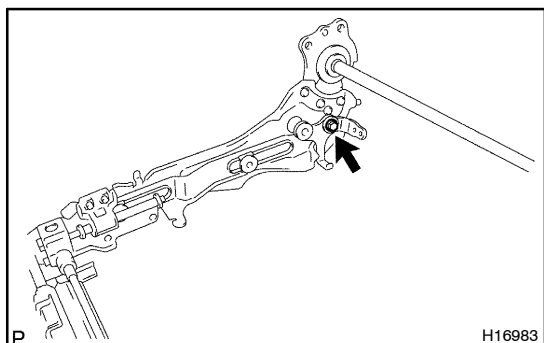
Install the slide motor with the 2 screws.

Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)

2. INSTALL SEAT CUSHION SLIDE MOTOR

Install the seat cushion slide motor with the 2 screws.

Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)

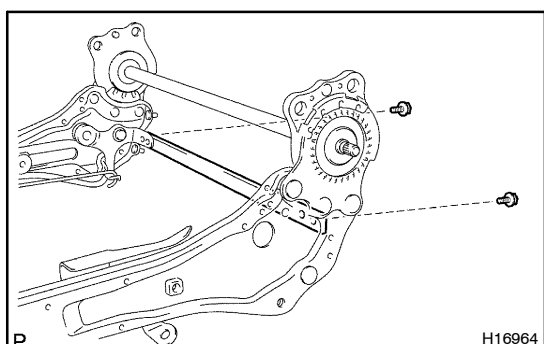


3. INSTALL FRONT SEAT TRAVEL NO. 1 LINK

(a) Install the front seat travel No. 1 link with the bolt.

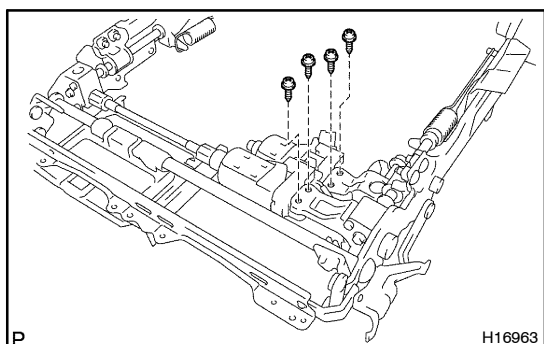
(b) Employ the same manner described above to the other side.

4. INSTALL SEAT CUSHION SPRING



5. INSTALL NO. 1 SEAT CUSHION PLATE

Install the No. 1 seat cushion plate with the 2 bolts.



6. INSTALL TILT MOTOR

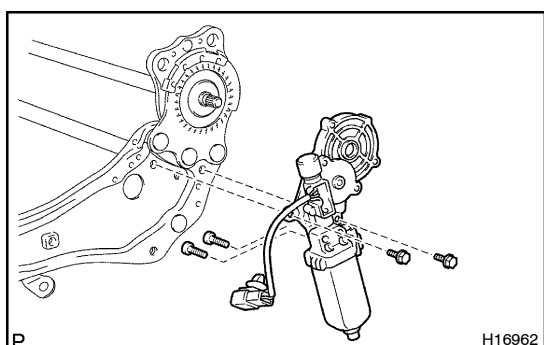
Install the tilt motor with the 2 screws.

Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)

7. INSTALL LIFTER MOTOR

Install the lifter motor with the 2 screws.

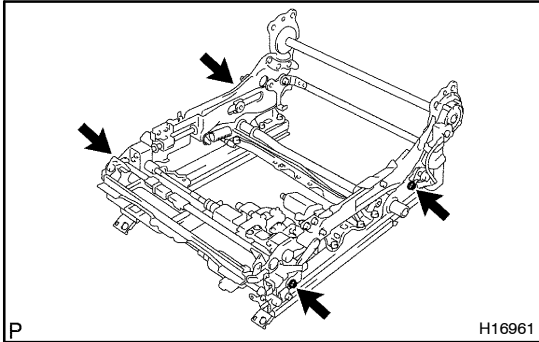
Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)



8. INSTALL RECLINING MOTOR

(a) Install the reclining motor with the 2 screws to the bracket.

(b) Install the reclining motor assembly with the 2 bolts.

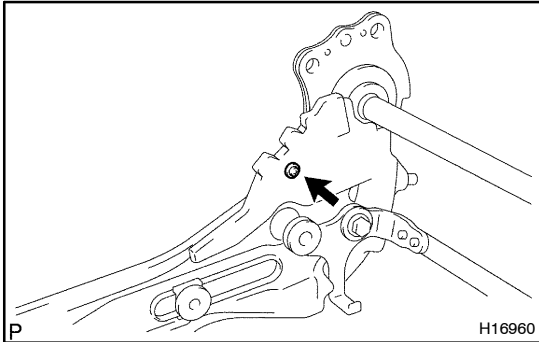


9. INSTALL POWER RECLINING ADJUSTER ASSEMBLY

Using a torx socket wrench, install the power reclining adjuster assembly with the 4 torx screws.

Torx socket wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)



10. INSTALL RECLINING ADJUSTER INSIDE COVER

- Install the reclining adjuster inside cover with the screw.
- Employ the same manner described above to the other side.

11. INSTALL SEAT CUSHION COVER

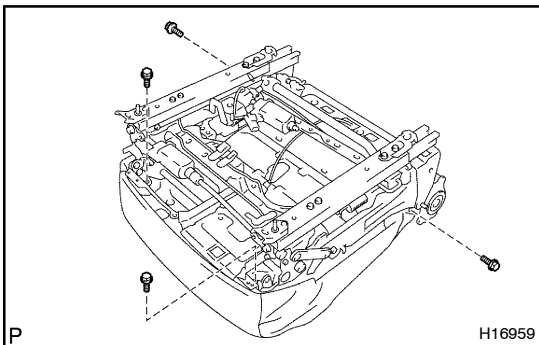
Install the seat cushion cover with new hog rings to the seat cushion pad.

HINT:

When installing hog ring, take care to prevent wrinkles as much as possible.

12. INSTALL SEAT CUSHION FRAME

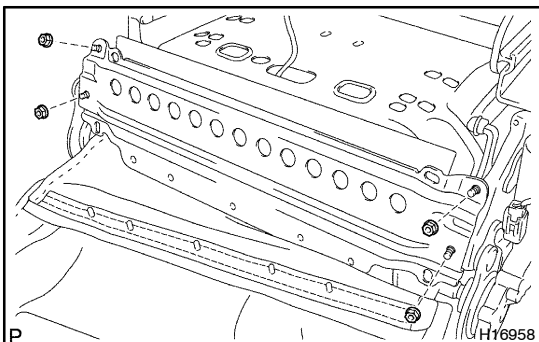
Set the seat cushion frame to the seat cushion cover with pad, then engage the seat cushion cover hooks.



13. INSTALL SEAT CUSHION ASSEMBLY

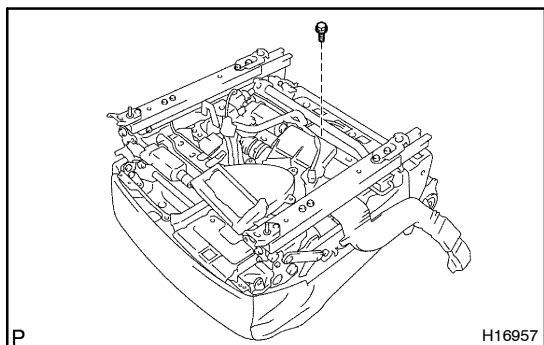
Install the seat cushion assembly with the 4 bolts.

Torque: 21 N·m (214 kgf·cm, 15 ft·lbf)

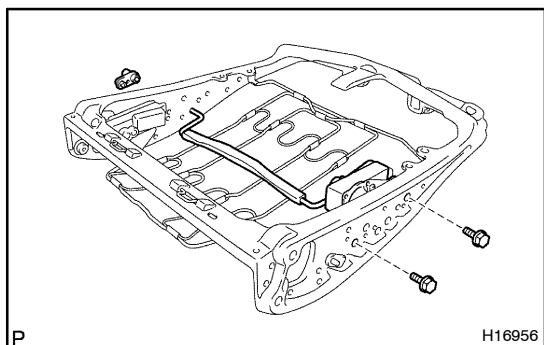


14. INSTALL LOWER SEAT CUSHION SHIELD

Install the lower seat cushion shield with the 4 nuts.

**15. Climate control seat:****INSTALL AIR RESERVOIR ASSEMBLY**

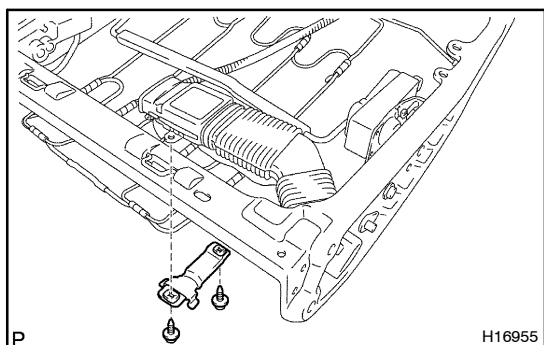
- (a) Install the air reservoir assembly with the bolt.
- (b) Connect the connectors and engage the connector clamps.
- (c) Engage the seat cushion cover hook.

**16. INSTALL LUMBER SUPPORT ADJUSTER**

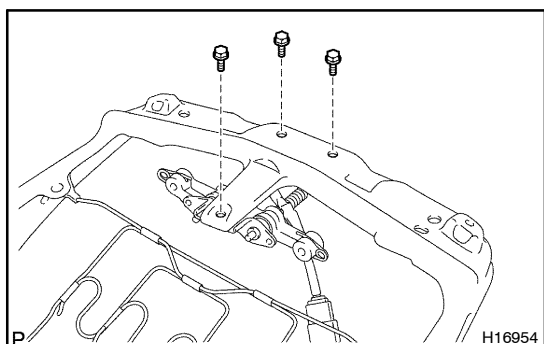
- (a) Install the lumbar support adjuster and spacer with the 2 bolts.

Torque: 5.2 N·m (54 kgf·cm, 47 in·lbf)

- (b) Employ the same manner described above to the other side.

**17. Climate control seat:****INSTALL AIR DUCT**

Install the air duct and bracket with the 2 screws to the seatback frame.

**18. INSTALL HEADREST ADJUSTER**

- (a) Install the headrest adjuster with the 3 bolts to the seatback frame.

Torque: 5.2 N·m (54 kgf·cm, 47 in·lbf)

- (b) Engage the connector clamps.

19. INSTALL SEATBACK COVER

Install the seatback cover with now hog rings to the seatback pad.

20. INSTALL SEATBACK FRAME

- (a) Install the seatback frame to the seatback cover with pad.
- (b) Install the seatback cover hook with the bolt.

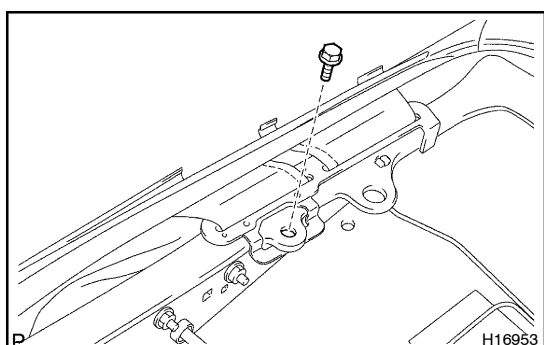
Torque: 5.2 N·m (54 kgf·cm, 47 in·lbf)

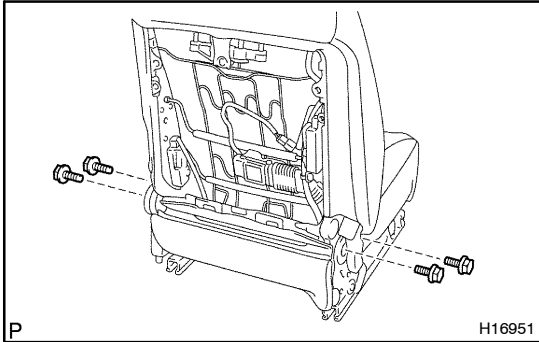
NOTICE:

Do not damage the side airbag assembly.

21. INSTALL HEADREST SUPPORTS**22. INSTALL HEADREST**

Install the headrest to the seatback assembly.



**23. INSTALL SEATBACK ASSEMBLY**

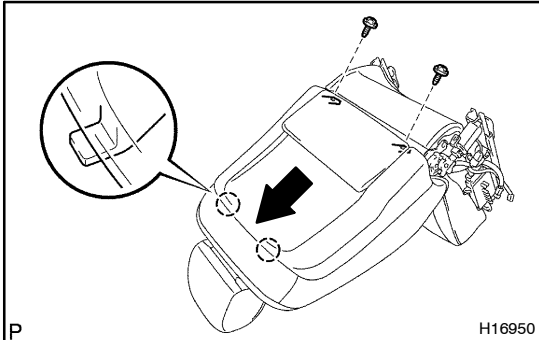
- (a) Install the seatback assembly with the 4 bolts.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

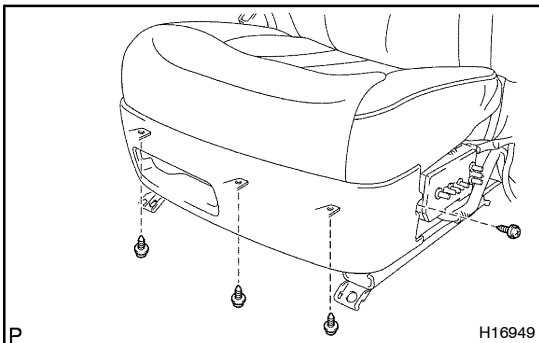
- (b) Connect the connectors and engage the clamps.

- (c) Climate control seat:

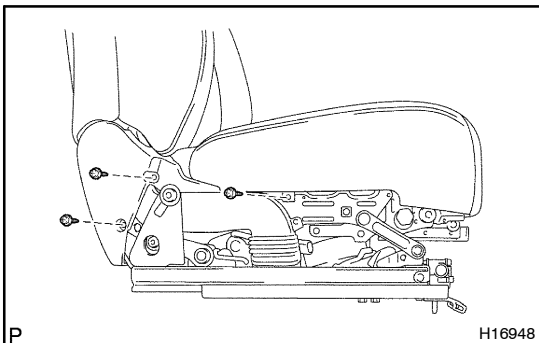
Connect the air duct and install it with the 3 screws.

**24. INSTALL SEATBACK BOARD**

Install the seatback board as shown in the illustration, then install the 2 screws.

25. INSTALL POWER SEAT SWITCH**26. INSTALL FRONT SEAT CUSHION FRONT SHIELD**

Slide the front seat cushion front shield rearward, then install it with the 4 screws.

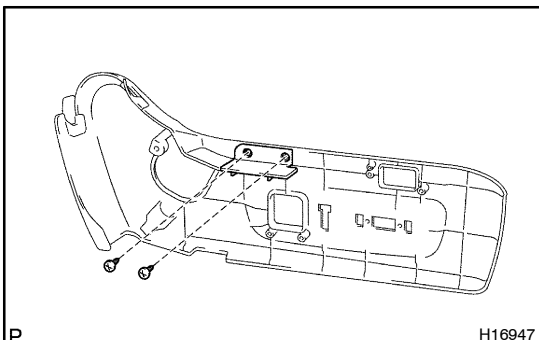
**27. INSTALL FRONT SEAT CUSHION INNER SHIELD**

Install the front seat cushion inner shield with the 3 screws.

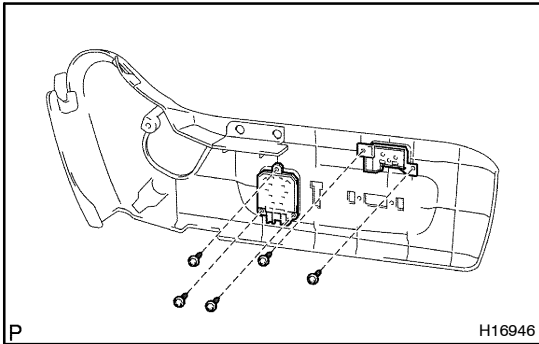
28. INSTALL FRONT SEAT INNER BELT

Install the front seat inner belt with the nut.

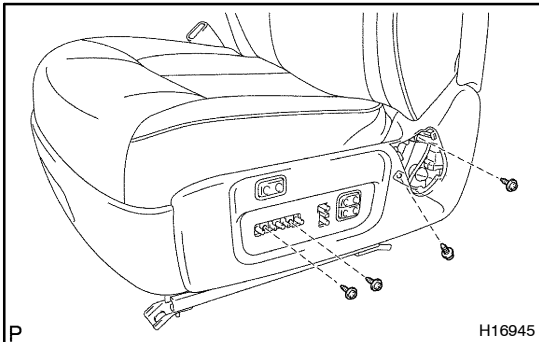
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

**29. INSTALL FRONT SEAT HINGE COVER**

Install the front seat hinge cover with the 2 screws to the front seat cushion shield.

**30. INSTALL SEAT CUSHION SWITCH AND POWER LUMBER SUPPORT SWITCH**

- (a) Install the seat cushion switch with the 2 screws.
- (b) Install the power lumbar support switch with the 3 screws.
- (c) Connect the connectors.

**31. INSTALL FRONT SEAT CUSHION SHIELD**

Install the front seat cushion shield with the 4 screws.

32. INSTALL POWER SEAT SWITCH KNOBS**33. INSTALL FRONT SEAT UNDER TRAY RAIL****34. INSTALL FRONT SEAT UNDER TRAY**

Install the front seat under tray with the 4 screws.