


REMOVAL


HINT:

When removing the rear seat, lift the headrests up to the highest position.

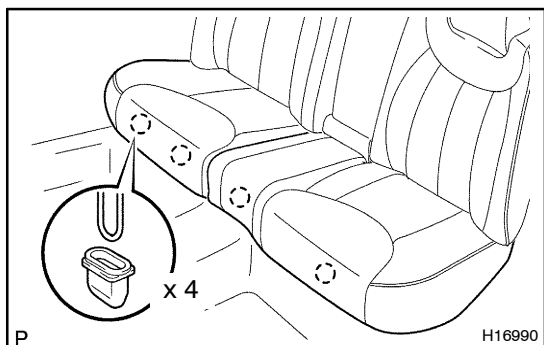

1. REMOVE REAR SEAT CUSHION ASSEMBLIES

- (a) Pull up the front portion of the seat cushion assemblies, then remove them.
- (b) w/ Seat heater:
Disconnect the connector.

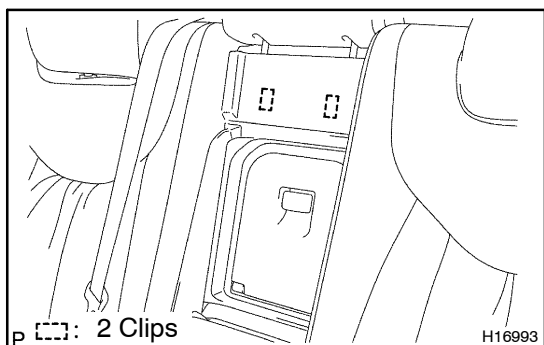


2. REMOVE REAR SEAT ARMREST COVER

- (a) Using a screwdriver, remove the 2 hole covers and 2 screws

HINT:

Tape the screwdriver tip before use.

- (b) Fold the rear seat armrest cover.
- (c) Remove the 2 screws and rear seat armrest cover from the center armrest.

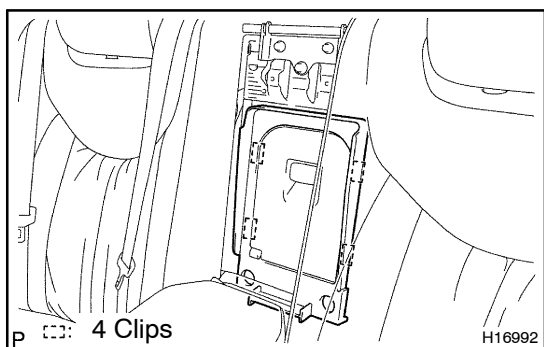


3. REMOVE SEATBACK BOX PLATE

Using a screwdriver, remove the seatback box plate.


HINT:

Tape the screwdriver tip before use.

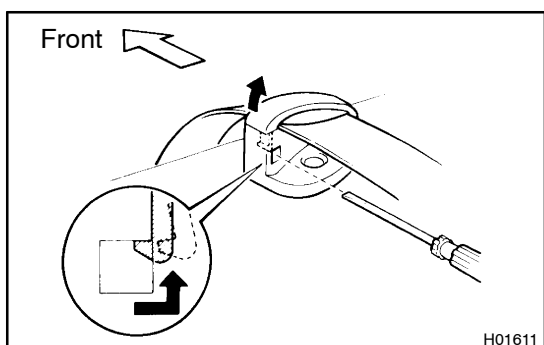

4. REMOVE REAR SEATBACK ASSEMBLIES

- (a) Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.
- (b) Employ the same manner described above to the other sides.

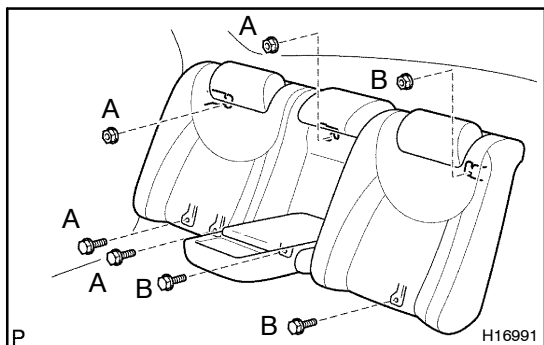


- (c) Remove the "A" bolts, "A" nuts and rear seatback assembly RH, then disconnect the connectors.
- (d) Remove the "B" bolts, "B" nut and rear seatback assembly LH, then disconnect the connectors.

NOTICE:

Be careful not to damage the body.

- (e) w/ Seat heater:
Disconnect the connector.

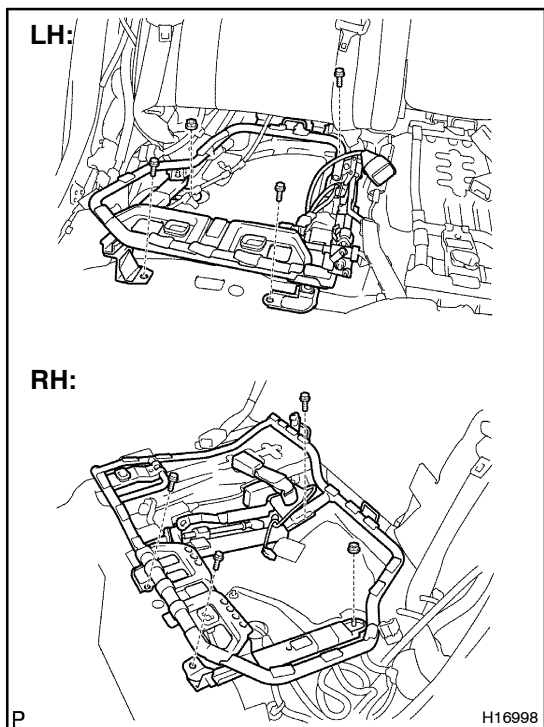**5. REMOVE REAR SEAT ADJUSTER ASSEMBLY**

- (a) Disconnect the connector.
- (b) Using a screwdriver, remove the seat track covers.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 3 bolts, nut and rear seat adjuster assembly.
- (d) Employ the same manner described above to the other side.

NOTICE:

Be careful not to damage the body.