



DISASSEMBLY


1. **LH side:**
REMOVE CENTER HEADREST

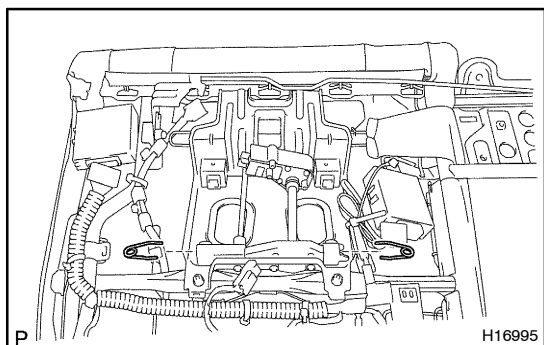

2. **REMOVE HEADREST**
 - (a) Remove the 2 pins and headrest.
 - (b) Install the 2 pins again.
 - (c) Employ the same manner described above to the other side.

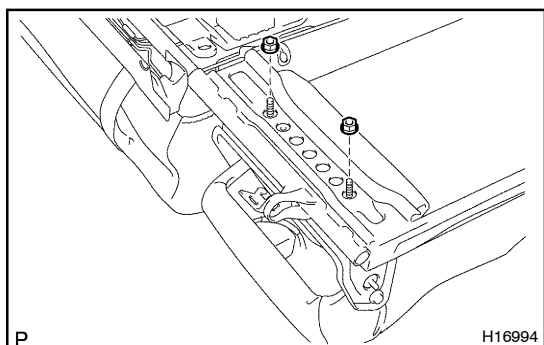

3. **LH side:**
REMOVE REAR SEAT CENTER ARMREST
 - (a) Using a screwdriver, disengage the wire harness clamp.
 - (b) Remove the 2 nuts and rear seat center armrest.
4. **LH side:**
DISASSEMBLE REAR SEAT CENTER ARMREST
 - (a) Remove the 2 nuts and armrest hinge covers.
 - (b) Remove the 2 screws and center armrest hinge.

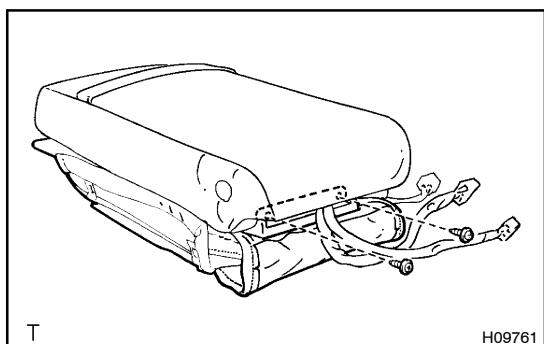

- (c) Remove the 2 screws and center armrest door.
- (d) Remove the screw and using a screwdriver, remove the center armrest plate.

HINT:

Tape the screwdriver tip before use.

- (e) Remove the 4 screws and power seat switch.
- (f) Remove the 2 screws and audio and rear A/C switch.

5. REMOVE SEATBACK FRAME ASSEMBLY

- (a) **RH side:**
Remove the 2 screws and center seat belt guide.
- (b) Remove the 2 screws and seat belt guide.
- (c) **LH side:**
Remove the 2 center headrest supports.
- (d) Remove the 2 headrest supports.
- (e) Remove the hog rings and seatback frame assembly from the seatback cover with pad.
- (f) Employ the same manner described above to the other side.

6. REMOVE SEATBACK COVER

- (a) Remove the hog rings and seatback cover from the seat back pad.
- (b) Employ the same manner described above to the other side.

7. REMOVE HEADREST ADJUSTER ASSEMBLY

- (a) Disengage the clamp.
- (b) Remove the 4 nuts and headrest adjuster assembly.
- (c) Employ the same manner described above to the other side.

8. REMOVE SEATBACK HINGES


- (a) Remove the 2 bolts and 2 seatback hinges.
- (b) Employ the same manner described above to the other side.

9. REMOVE SEAT CUSHION FRAME


- (a) Remove the hog rings and seat cushion frame from the seat cushion cover with pad.
- (b) Employ the same manner described above to the other side.

10. REMOVE SEAT CUSHION COVER


- (a) Remove the hog rings and seat cushion cover from the seat cushion pad.
- (b) Employ the same manner described above to the other side.

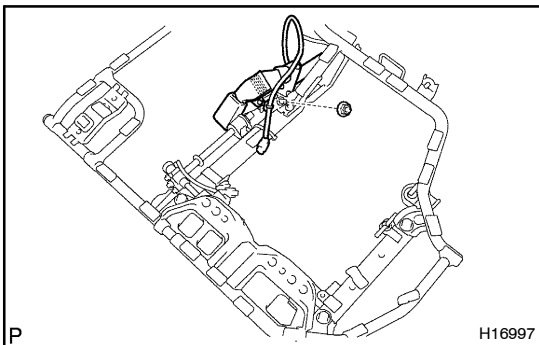**11. REMOVE REAR SEAT INNER BELT ASSEMBLY**

- (a) Disengage the clamp.
- (b) Remove the nut and rear seat inner belt assembly.
- (c) Employ the same manner described above to the other side.

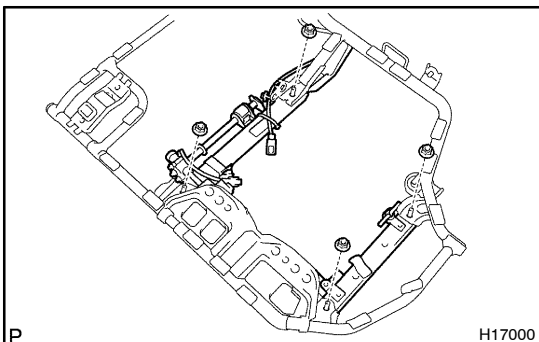**12. REMOVE REAR SEAT OUTER AND INNER TRACKS**

- (a) Remove the 2 nuts and rear seat outer track from the rear seat support bracket.
- (b) Remove the 2 nuts and rear seat inner track from the rear seat support bracket.
- (c) Employ the same manner described above to the other side.

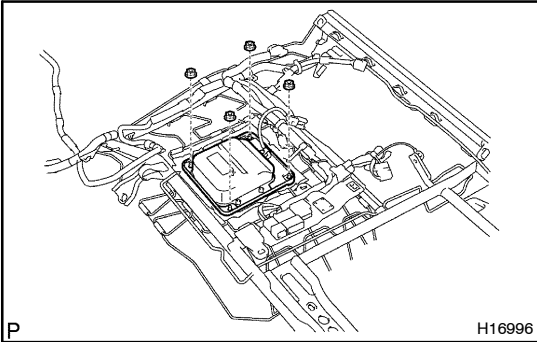**13. REMOVE SEAT VIBRATOR ASSEMBLY**

- (a) Disengage the clamp and disconnect the connector.
- (b) Remove the 4 nuts and seat vibrator assembly.
- (c) Employ the same manner described above to the other side.

14. REMOVE SEAT POSITION ECU

- (a) Disconnect the connector.
- (b) Remove the bolt, nut and seat position ECU.
- (c) Employ the same manner described above to the other side.

15. REMOVE SEAT POSITION CONTROL ECU

- (a) Disconnect the connector.
- (b) Remove the bolt, nut and seat position control ECU.
- (c) Employ the same manner described above to the other side.