


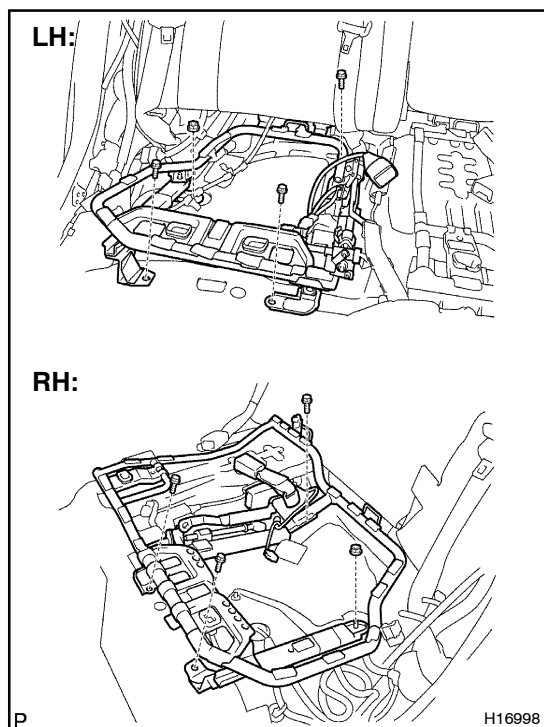

INSTALLATION

1. INSTALL REAR SEAT ADJUSTER ASSEMBLY

- (a) Install the rear seat adjuster assembly with the 3 bolts and 2 nuts.

Torque:


Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Nut: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (b) Install the seat track covers.
- (c) Connect the connector.
- (d) Employ the same manner described above to the other side.

2. INSTALL SEATBACK ASSEMBLIES

- (a) w/ Seat heater:
Connect the connector.

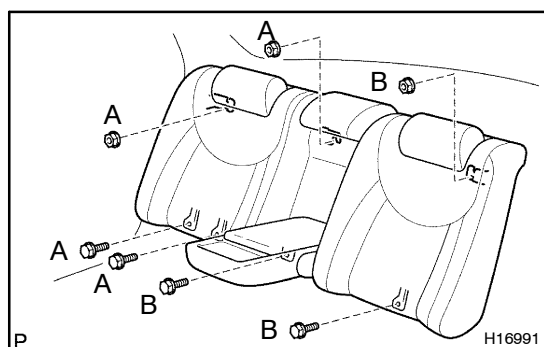

- (b) Connect the connectors, then install the seatback assembly LH with the "B" bolts and "B" nut.

Torque:

Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Nut: 18 N·m (185 kgf·cm, 13 ft·lbf)


- (c) Connect the connectors, then install the seatback assembly RH with the "A" bolts and "A" nuts.

Torque:


Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

Nut: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (d) Install the rear seat belts to the belt guides.

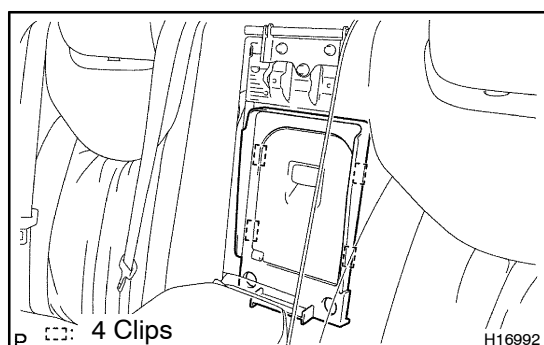


3. INSTALL SEATBACK BOX PLATE

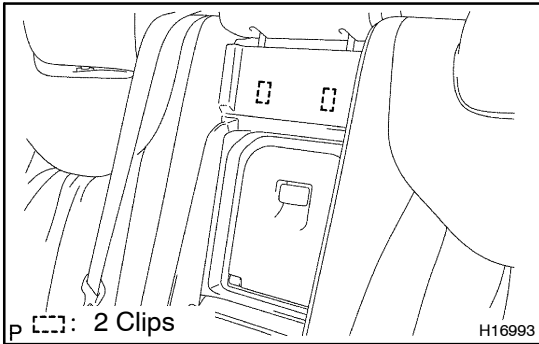**4. INSTALL REAR SEAT ARMREST COVER**

Install the rear seat armrest cover to the center armrest.

HINT:

Tape the screwdriver tip before use.

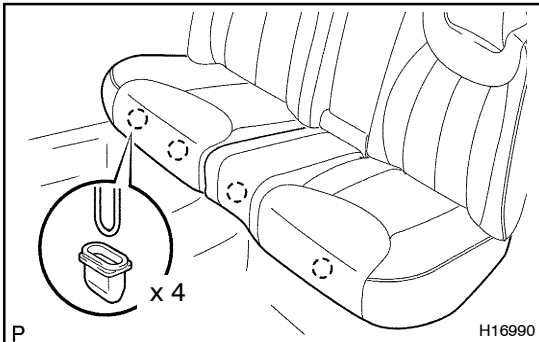**5. INSTALL REAR SEAT CUSHION ASSEMBLIES**

(a) w/ Seat belt:

Connect the connector.

(b) Install the rear seat cushion assemblies.

HINT:

Confirm that the seat cushions are installed firmly.