

SEATBELT PRETENSIONER (Rear) REMOVAL

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

1. REMOVE REAR DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the rear door scuff plate as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

2. REMOVE REAR PART OF REAR DOOR OPENING TRIMS

3. REMOVE REAR SEAT SIDE GARNISH

- (a) Using a screwdriver, remove the rear seat side garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

4. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, disengage the clips, then pull the garnish forward to remove it.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Be careful not to damage the airbag and wire harness.




- (b) Employ the same manner described above to the other side.


5. REMOVE REAR SEAT CUSHION

(See page [BO-172](#) or [BO-179](#))


6. REMOVE REAR SEATBACK ASSEMBLY

(See page [BO-172](#) or [BO-179](#))

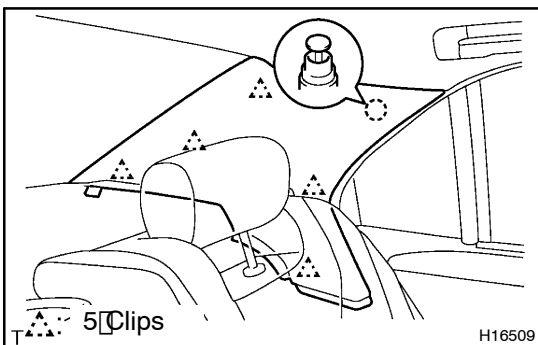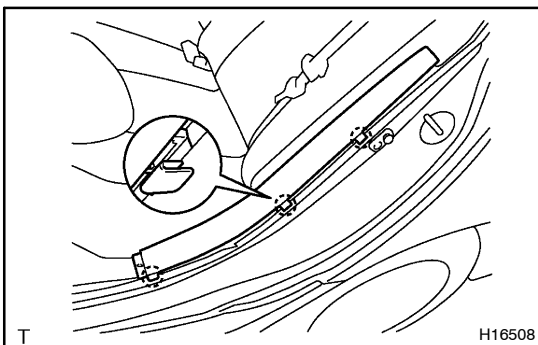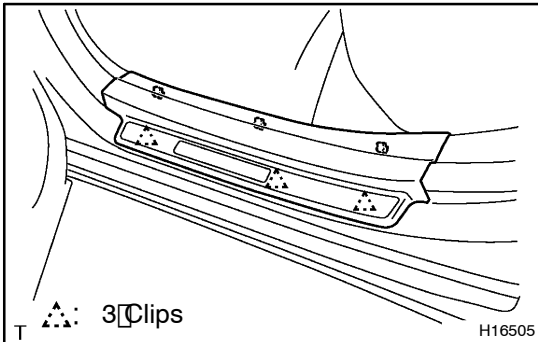

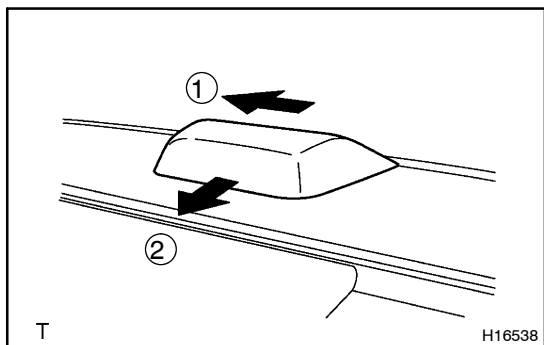**7. REMOVE HIGH-MOUNTED STOP LIGHT**


- (a) Slide the high-mounted stop light as shown in the illustration to remove it.
- (b) Disconnect the connector.

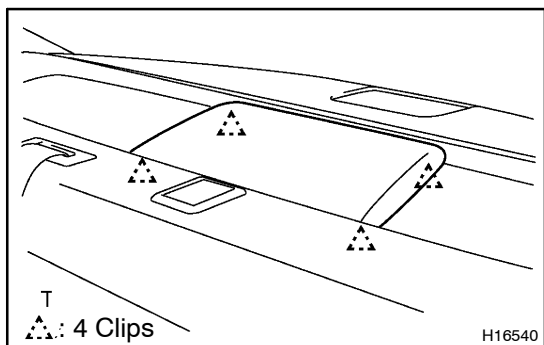**8. REMOVE REAR SPEAKER GRILLE**

Using a screwdriver, remove the rear speaker grille.

HINT:

Tape the screwdriver tip before use.

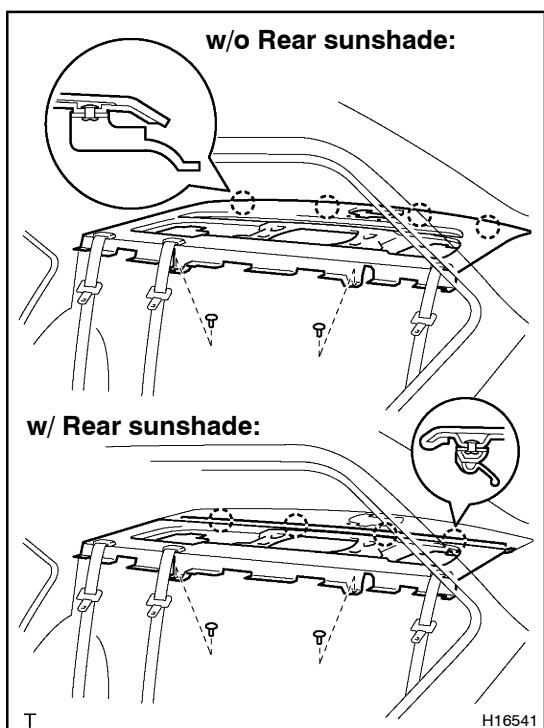**9. REMOVE PACKAGE TRAY TRIM PANEL**

- (a) Remove the 2 clips.
- (b) Remove the rear seat outer belts through the cutout on the package tray trim panel.
- (c) Pull the package tray trim panel forward to remove it.

10. REMOVE ROOM PARTITION TRIM**11. REMOVE REAR SEAT OUTER BELT**


CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

- (a) Remove the bolt and floor anchor.

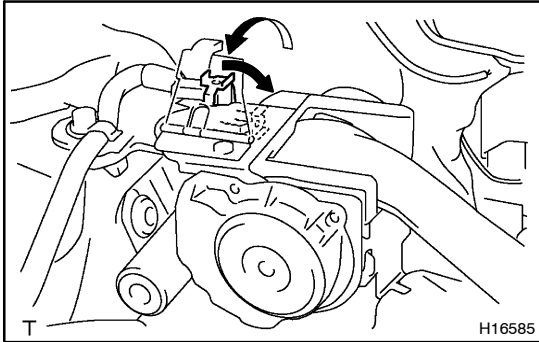

- (b) LH:
Using a screwdriver, release the connector protector as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

- (d) Remove the bolt and rear seat belt outer belt.