



VVT SENSOR COMPONENTS

FIOYM-01

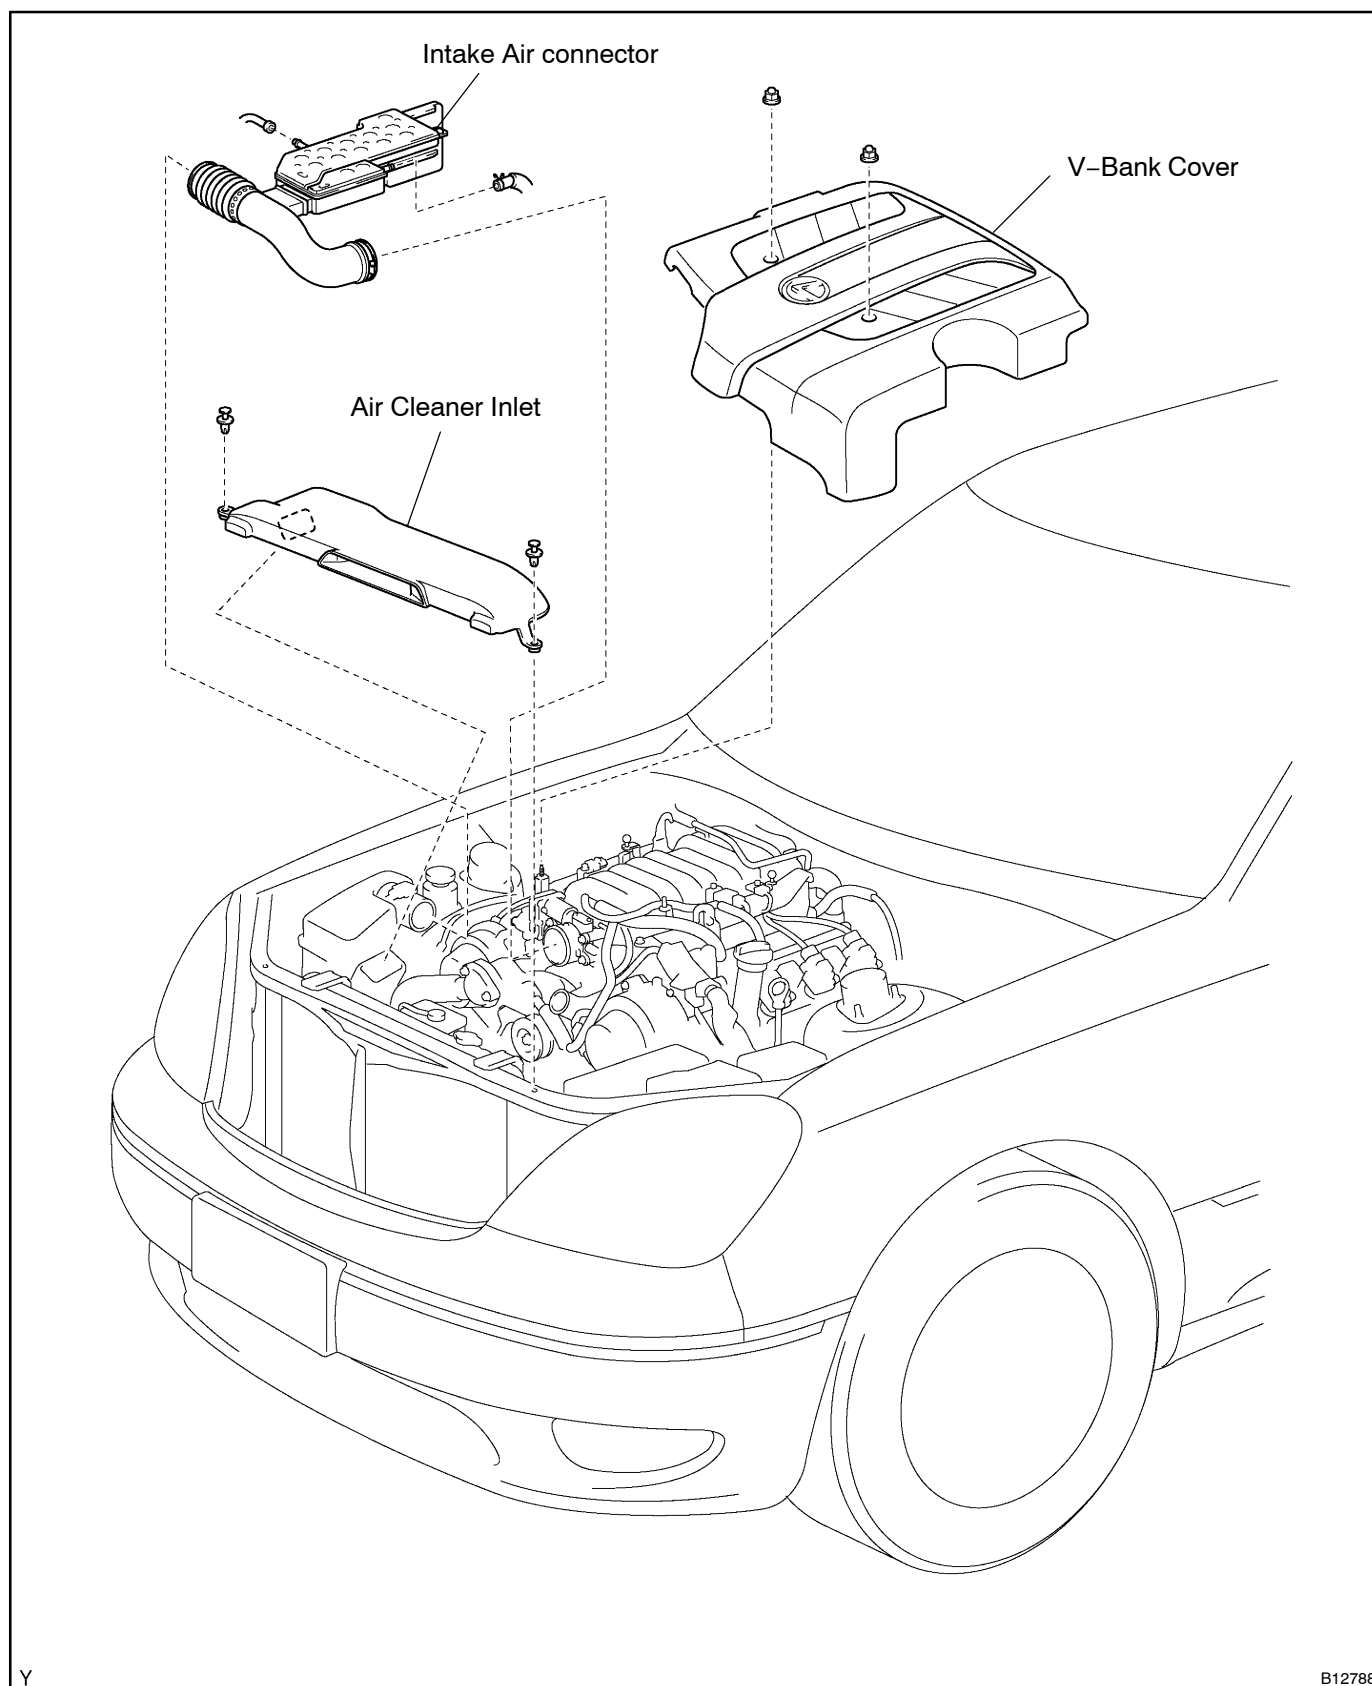

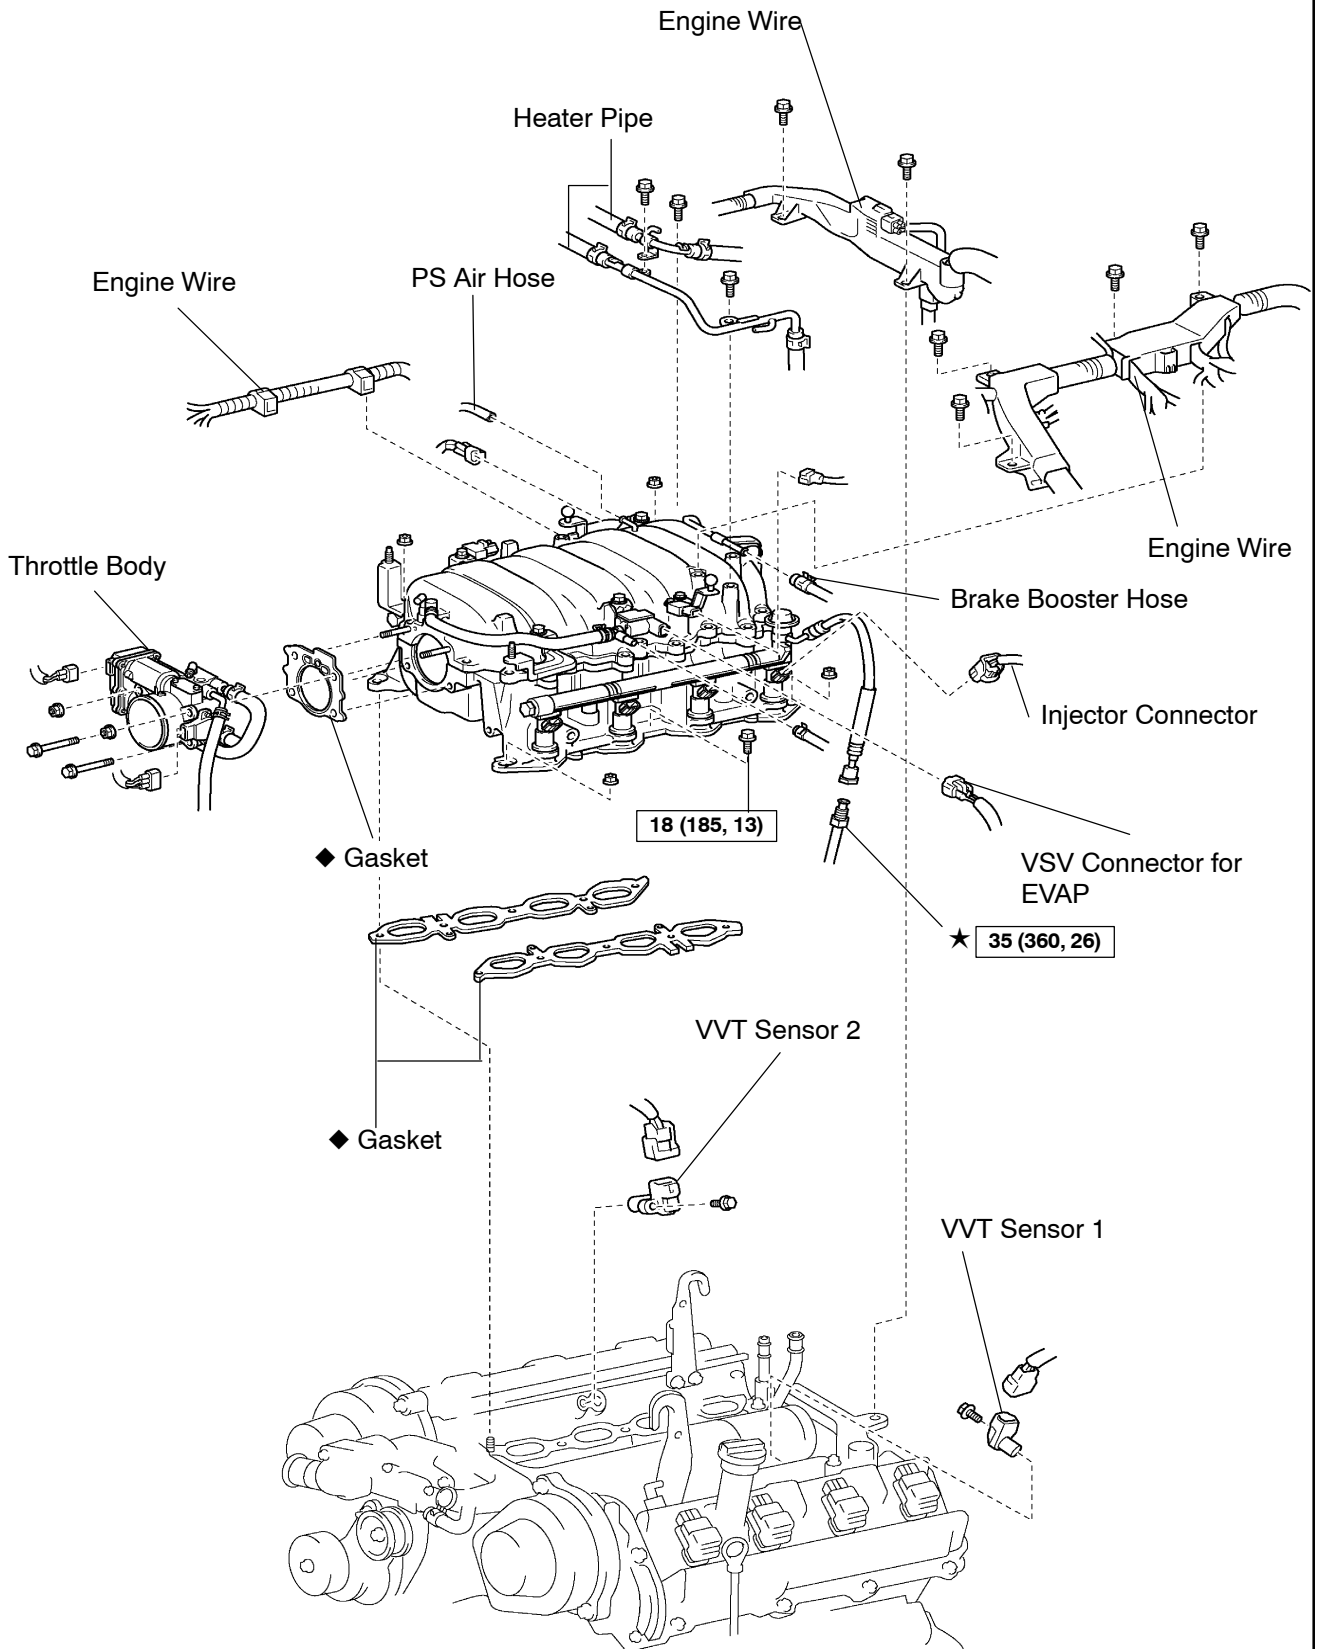

Y N·m (kgf·cm, ft·lbf) : Specified Torque

◆ Non-reusable part

★ For use with SST

B12787