


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

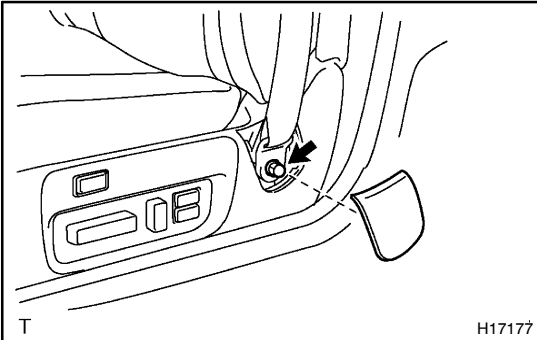

1. REMOVE FRONT SEAT OUTER BELT ANCHOR

- Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.

- Remove the front seat outer belt anchor.

2. REMOVE FRONT SEAT


- Remove the 4 seat track covers and 4 bolts.
- Disconnect the power seat and side airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- Remove the front seat.

3. REMOVE POWER SEAT SWITCH KNOBS

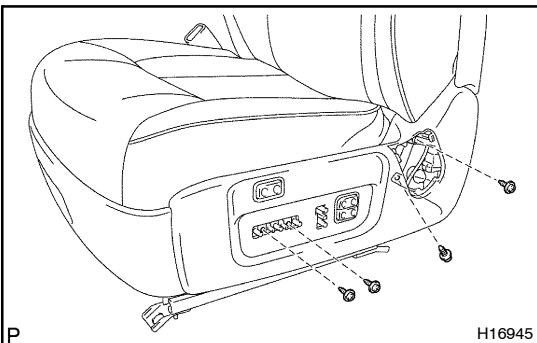


4. REMOVE FRONT SEAT CUSHION SHIELD

Remove the 4 screws and front seat cushion shield.

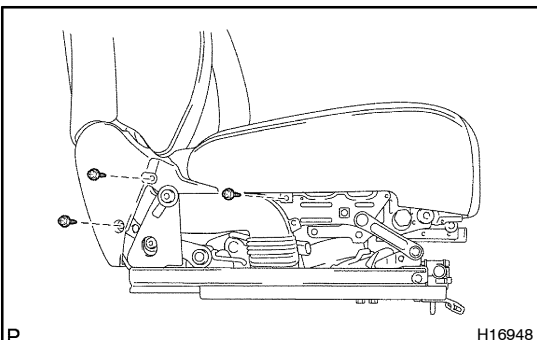

5. REMOVE FRONT SEAT CUSHION INNER SHIELD


Remove the 3 screws and front seat cushion inner shield.

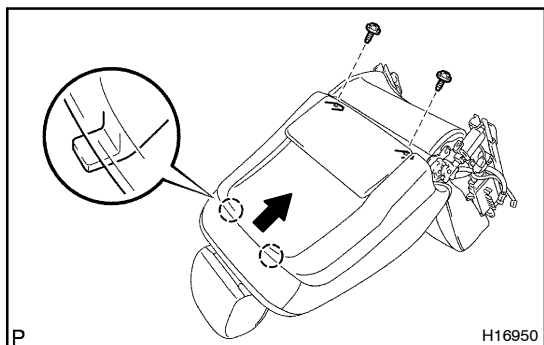**6. REMOVE FRONT SEATBACK BOARD**

- (a) Remove the 2 screws.
- (b) Remove the front seatback board as shown in the illustration.

7. REMOVE SEATBACK ASSEMBLY


- (a) Climate control seat:
Remove the 3 screws and disconnect the air duct.
- (b) Disconnect the connectors and disengage the clamps.

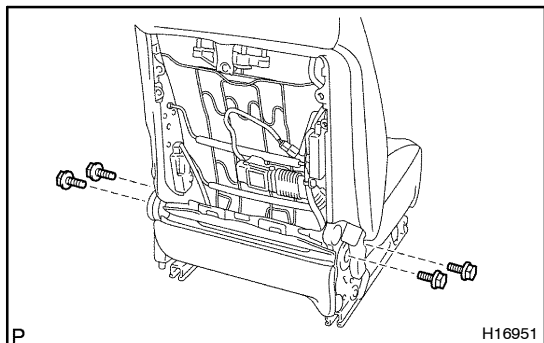

- (c) Remove the 4 bolts and seatback assembly.

8. REMOVE HEADREST

Pull the headrest assembly upward to remove it.

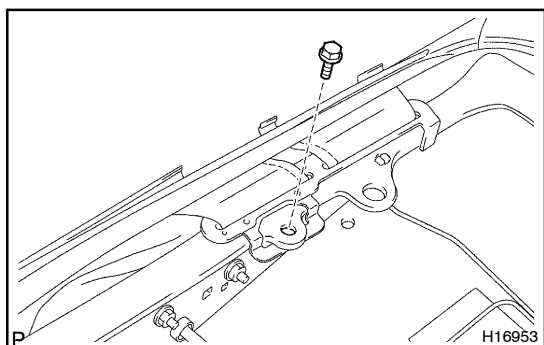9. REMOVE HEADREST SUPPORTS**10. REMOVE SEATBACK FRAME**

- (a) Remove the bolt and seat cover hook.
- (b) Remove the seatback frame from the seatback cover with pad.

NOTICE:

Do not damage the side airbag assembly.