


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL SEATBACK FRAME

- (a) Install the seatback frame to the seatback cover with pad.

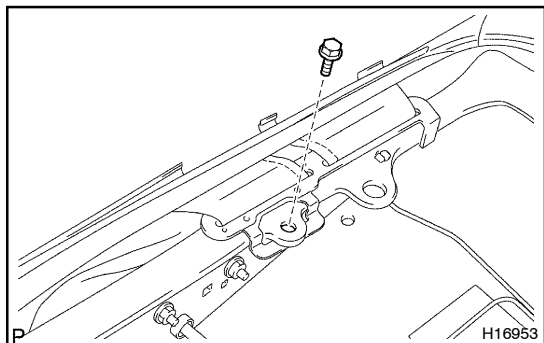


- (b) Install the seatback hook with the bolt.

NOTICE:

Do not damage the side airbag assembly.


2. INSTALL HEADREST SUPPORTS

3. INSTALL HEADREST

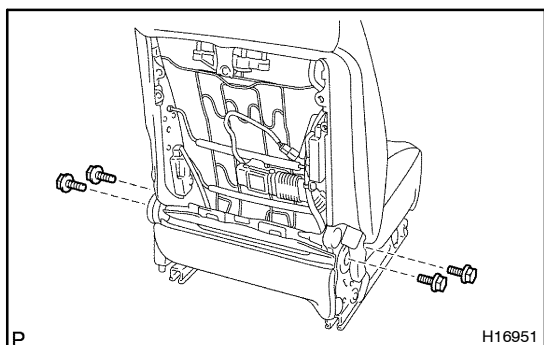


4. INSTALL SEATBACK ASSEMBLY

- (a) Install the seatback assembly with the 4 bolts.
 (b) Connect the connectors and engage the clamps.
 (c) Climate control seat:
 Connect the air duct and install it with 3 screws.

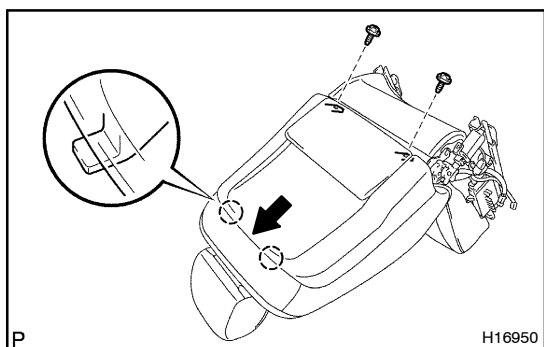

5. INSTALL FRONT SEATBACK BOARD

Install the front seatback board with the 2 screws.

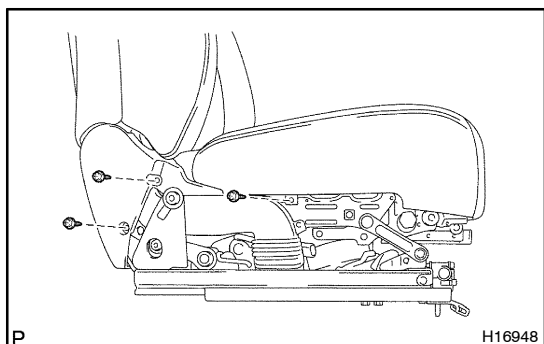


6. INSTALL FRONT SEAT CUSHION INNER SHIELD

Install the front seat cushion inner shield with the 3 screws.

7. INSTALL FRONT SEAT CUSHION SHIELD

Install the front seat cushion shield with the 4 screws.

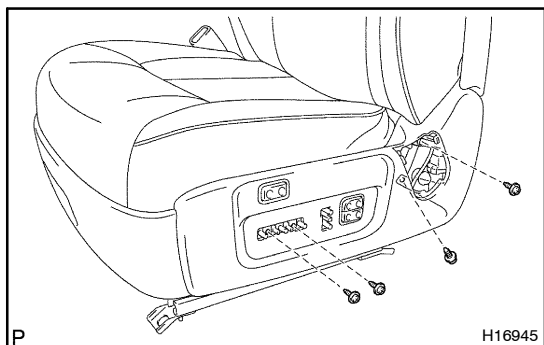
**8. INSTALL FRONT SEAT**

- (a) Set the front seat to the boldy.

NOTICE:

Be careful not to damage the body.

- (b) Connect the seat position sensor connector.
(c) Connect the power seat and side airbag connectors.
(d) Install the front seat assembly with the 4 bolts, then install the 4 seat track covers.

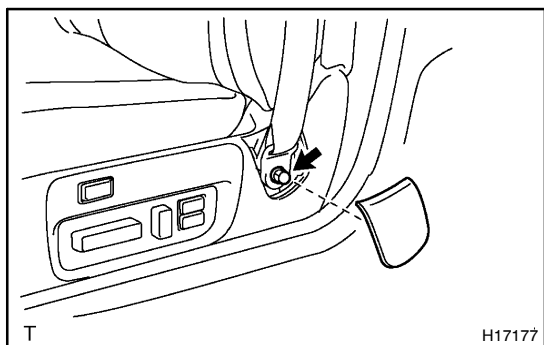**9. INSTALL FRONT SEAT OUTER BELT ANCHOR**

- (a) Install the front seat outer belt anchor with the bolt.
(b) Install the cover.