


Connector Joining Wire Harness and Wire Harness

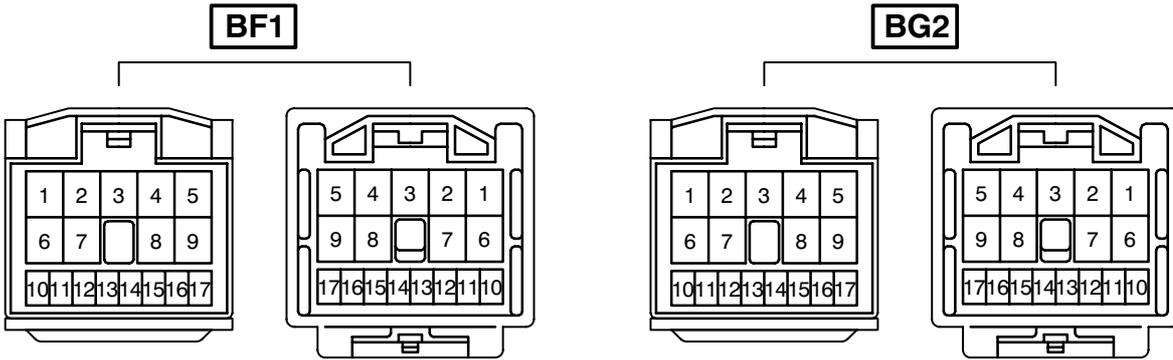

Code	Joining Wire Harness and Wire Harness (Connector Location)
BF1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BG2	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)