
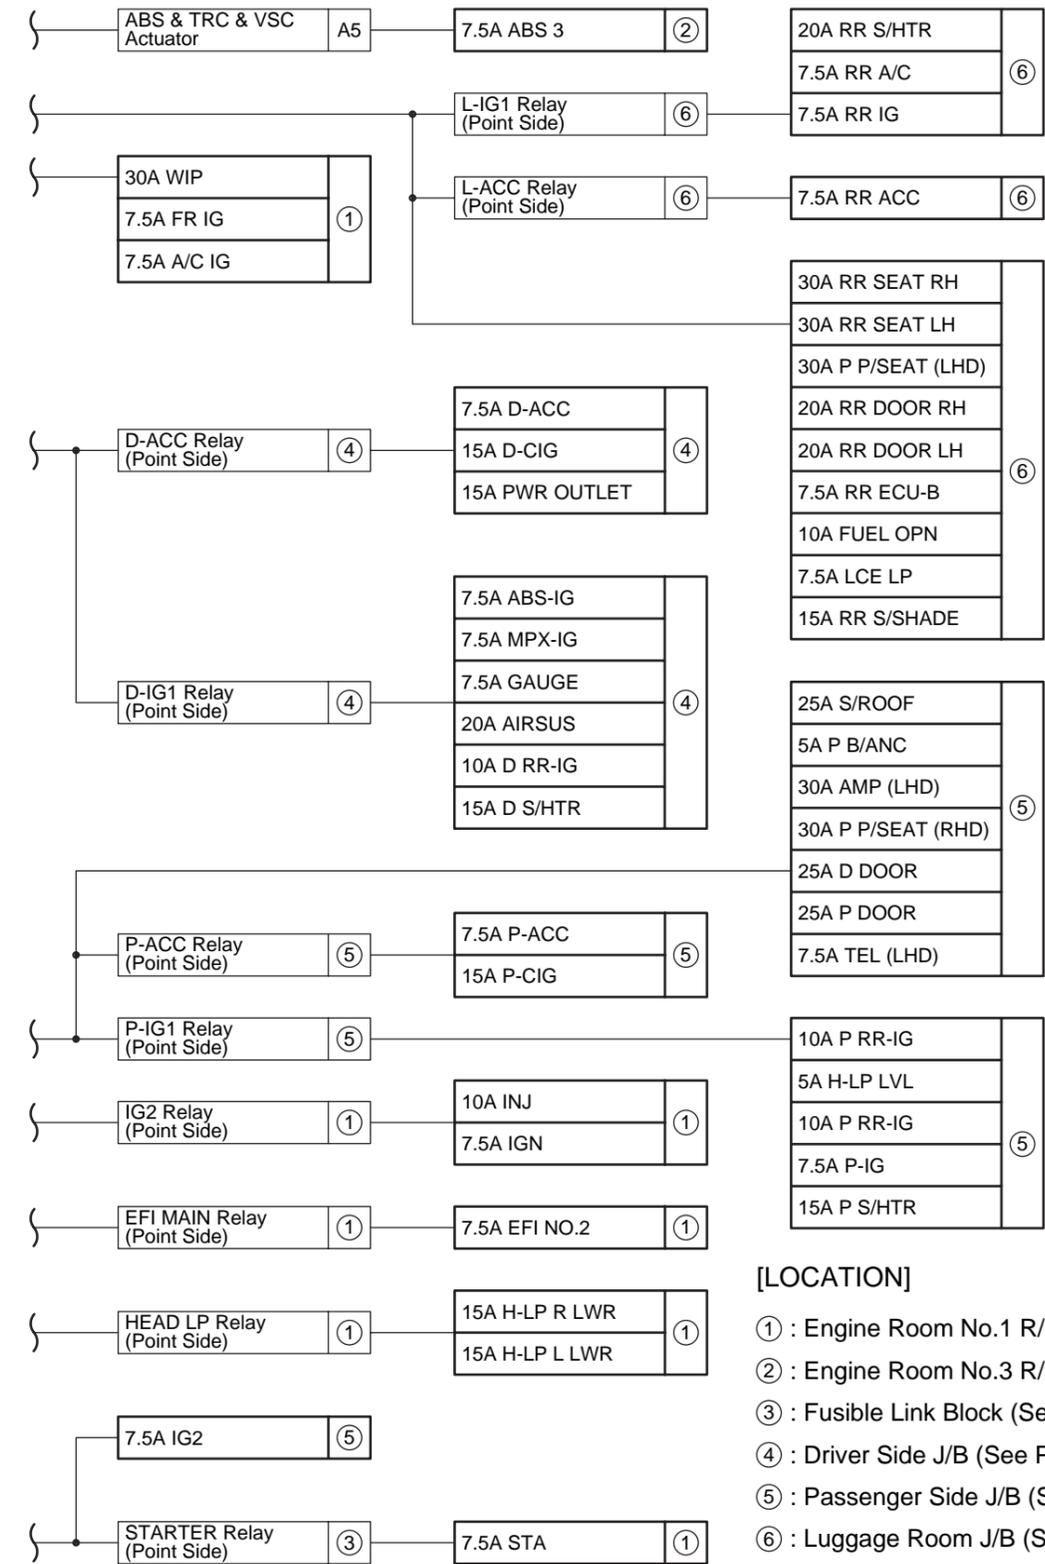


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

*1 : Australia, G.C.C.
*2 : Europe

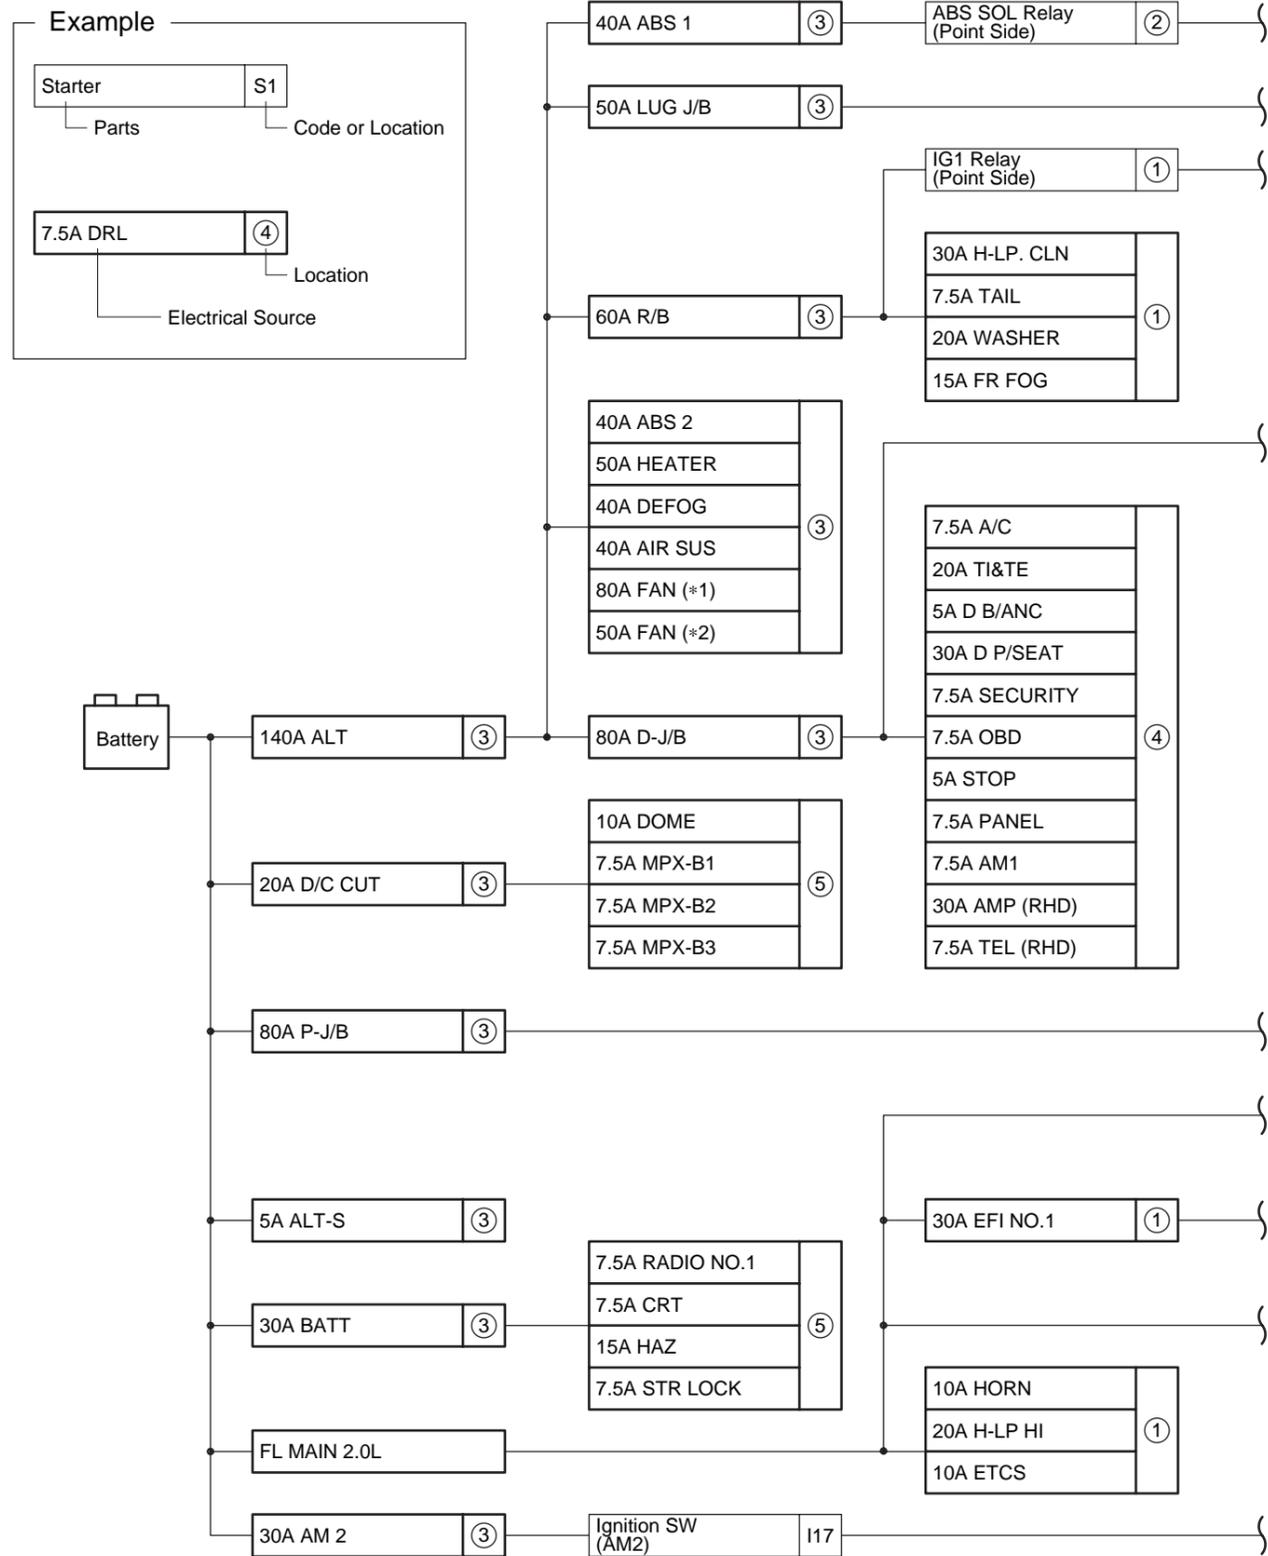

[LOCATION]

- ① : Engine Room No.1 R/B (See Page 81)
- ② : Engine Room No.3 R/B (See Page 83)
- ③ : Fusible Link Block (See Page 84,85)
- ④ : Driver Side J/B (See Page 86,98)
- ⑤ : Passenger Side J/B (See Page 92,104)
- ⑥ : Luggage Room J/B (See Page 110)