

DTC	B1822	SHORT IN SIDE SQUIB (RH) CIRCUIT (TO GROUND)
------------	--------------	---

CIRCUIT DESCRIPTION

The side squib RH circuit consists of the airbag sensor assy center and the separate type front seat back assy (side squib RH).

The circuit instructs the SRS to deploy when deployment conditions are met.

DTC B1822 is recorded when a short to ground is detected in the side squib RH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1822	<ul style="list-style-type: none"> • When the airbag sensor assy center receives a short to ground signal in the side squib RH circuit for 0.5 seconds. • Side squib RH malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Floor wire • Separate type front seat back assy (Side squib RH) • Airbag sensor assy center

WIRING DIAGRAM

See [page 05-1109](#).


INSPECTION PROCEDURE

CAUTION:

Be sure to perform the following procedures before troubleshooting to avoid unexpected airbag deployment.

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the airbag sensor assy center.
- (d) Disconnect the connectors from the horn button assy.
- (e) Disconnect the connector from the front passenger airbag assy.
- (f) Disconnect the connector from the instrument panel airbag assy lower No.1.
- (g) Disconnect the connector from the instrument panel airbag assy lower No.2.
- (h) Disconnect the connector from the front seat airbag assy LH.
- (i) Disconnect the connector from the front seat airbag assy RH.
- (j) Disconnect the connector from the curtain shield airbag assy LH.
- (k) Disconnect the connector from the curtain shield airbag assy RH.
- (l) Disconnect the connector from the front seat outer belt assy LH.
- (m) Disconnect the connector from the front seat outer belt assy RH.
- (n) Disconnect the connectors from the rear seat 3 point type outer belt assy.

1 CHECK FLOOR WIRE(SIDE SQUIB RH CIRCUIT)

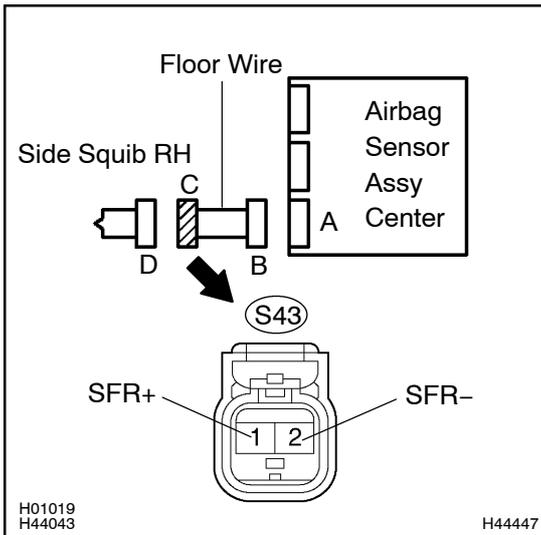

- (a) Measure the resistance according to the value(s) in the table below.


Standard:

Tester connection	Condition	Specified condition
S43-1 (SFR+) - Body ground	Always	1 MΩ or Higher
S43-2 (SFR-) - Body ground	Always	1 MΩ or Higher

NG REPAIR OR REPLACE FLOOR WIRE

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

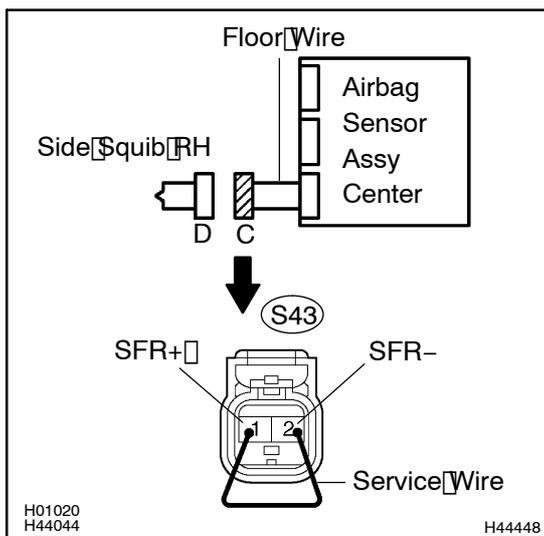

- (a) Connect the connectors to the airbag sensor assy center.
- (b) Using a service wire, connect S43-1 (SFR+) and S43-2 (SFR-) of connector "C".

NOTICE:

Do not forcibly insert a service wire into the terminals of the connector when connecting.

- (c) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (d) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (e) Clear the DTCs stored in memory (see page 05-959).
- (f) Turn the ignition switch to the LOCK position.
- (g) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (h) Check the DTCs (see page 05-959).

OK:

DTC B1822 is not output.

HINT:


Codes other than code B1822 may be output at this time, but they are not related to this check.

NG

**REPLACE AIR BAG SENSOR ASSY CENTER
(SEE PAGE 60-74)**

OK

3 CHECK SEPARATE TYPE FRONT SEAT BACK ASSY(SIDE SQUIB RH)

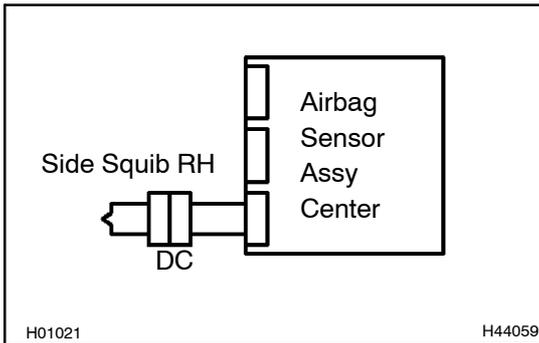

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the service wire from connector "C".
- (d) Connect the connector to the separate type front seat back assy (side squib RH).
- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Clear the DTCs stored in memory (see page 05-959).
- (h) Turn the ignition switch to the LOCK position.
- (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (j) Check the DTCs (see page 05-959).

OK:

DTC B1822 is not output.

HINT:

Codes other than code B1822 may be output at this time, but they are not related to this check.

NG

REPLACE SEPARATE TYPE FRONT SEAT BACK ASSY (SEE PAGE 72-3)

OK

USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)

HINT:

- Perform the simulation method by selecting the check mode with the intelligent tester (see page 05-960).
- After selecting the check mode, perform the simulation method by wiggling each connector of the air-bag system or driving the vehicle on a city or rough road (see page 05-960).