

CD CANNOT BE INSERTED/PLAYED OR CD IS EJECTED RIGHT AFTER INSERTION**INSPECTION PROCEDURE****1 CHECK THE CD**

- (a) Check if a different CD can be inserted.
- (1) Check if the CD is a normal audio CD, and that there are no cracks, scratches, deformations, dirt, or other failure.

OK: The CD is a normal audio CD without any problems.


HINT:

- Translucent or deformed CDs cannot be played.
- CD-ROMs (even those with music) and CD-R discs cannot be used.
- A copy protected CD cannot be used.
- An adaptor is not necessary to play 3.2 inch (8 cm) CD.

NG**REPLACE THE CD****OK****2 CHECK THE CD**

- (a) Check for dirt on the CD surface.

OK: The CD is clean.

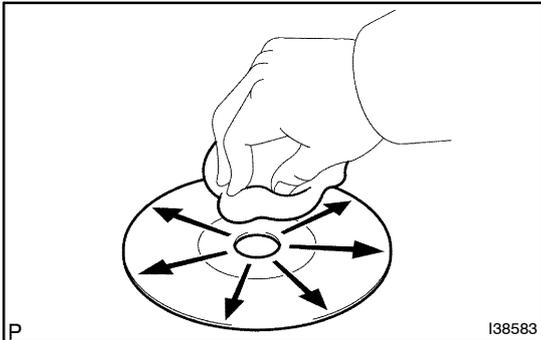

HINT:

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:

Do not use conventional record cleaner or anti-static preservative.

NG**CLEAN THE CD****OK**

3 CHECK USING ANOTHER CD

- (a) Check using another CD.
(1) Check if the problem recurs using another CD.

OK: The problem does not occur.

OK

REPLACE THE CD

NG

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1660)**