


INSPECTION

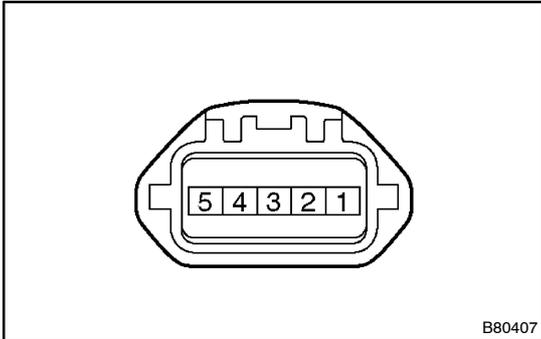

B80407


1. INSPECT OUTSIDE DOOR HANDLE

- (a) Remove the outside door handle.
- (b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	4 - 5	Below 1 Ω
Switch not pushed	4 - 5	10 k Ω or higher

If the result is not as specified, replace the outside door handle.

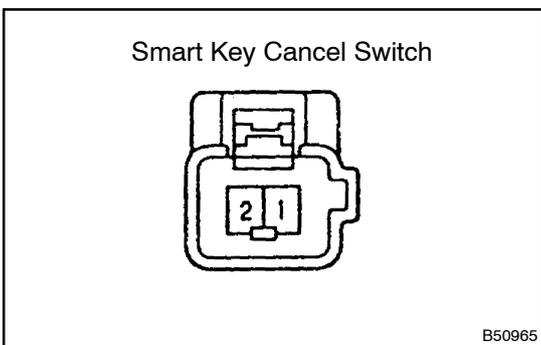

Smart Key Cancel Switch

B50965

2. INSPECT SMART KEY CANCEL SWITCH

- (a) Remove the smart key cancel switch.
- (b) Check the resistance between the terminals of the connector when the switch is operated.

Standard:

Switch Condition	Tester Connection	Specified Condition
Switch pushed	1 - 2	Below 1 Ω
Switch not pushed	1 - 2	10 k Ω or higher

If the result is not as specified, replace the smart key cancel switch.