


# YAWRATE SENSOR REPLACEMENT


32147-01

1. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSY (SEE PAGE 71-6)
2. REMOVE CONSOLE BOX CARPET
3. REMOVE REAR CONSOLE ARMREST ASSY (SEE PAGE 71-6)

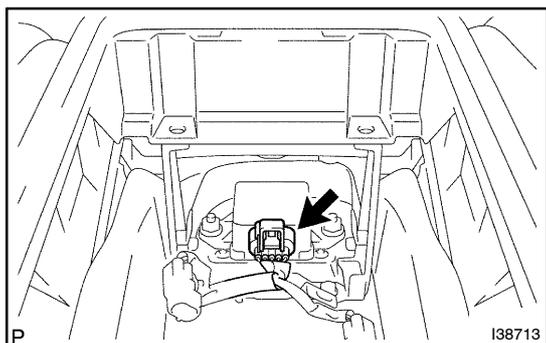


## 4. REMOVE YAWRATE SENSOR

- (a) Disconnect the yawrate sensor connector.

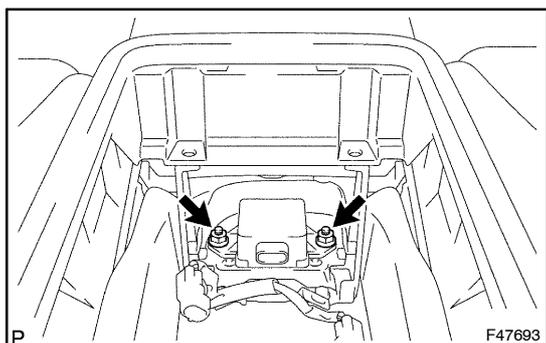


- (b) Remove the 2 nuts and yawrate sensor.

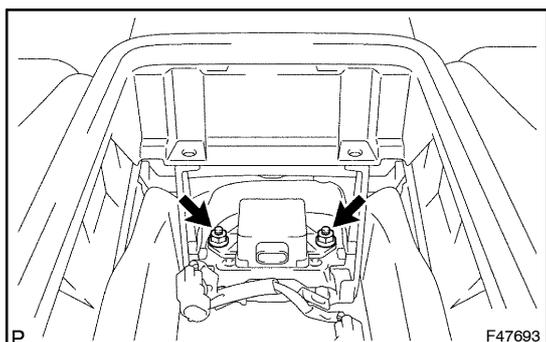

## 5. INSTALL YAWRATE SENSOR

- (a) Install the yawrate sensor with 2 nuts.  
**Torque: 12.5 N·m (127.5 kgf·cm, 9 ft·lbf)**

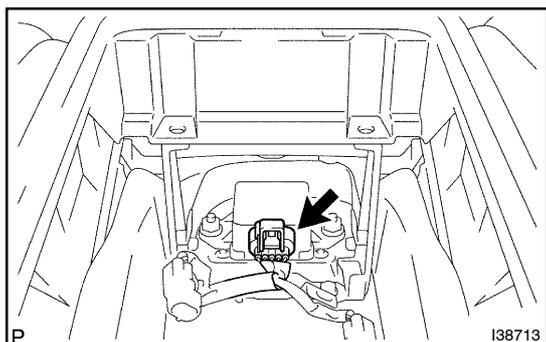

- (b) Connect the yawrate sensor connector.

6. INSTALL REAR CONSOLE ARMREST ASSY (SEE PAGE 71-6)
7. INSTALL CONSOLE BOX CARPET
8. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSY (SEE PAGE 71-6)
9. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05-387)