


REMOVAL

1. REMOVE HOOD LOCK RELEASE LEVER

- (a) Remove the 2 screws and disconnect the hood lock release lever.
- (b) Disconnect the hood lock control cable.

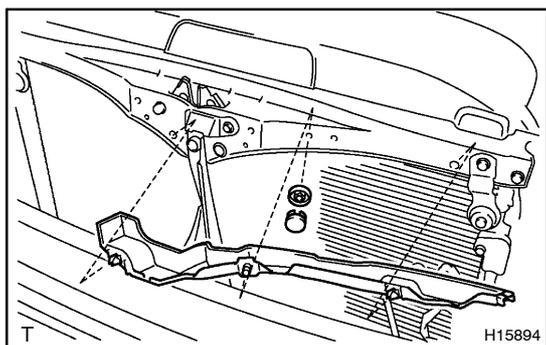


2. REMOVE HOOD LOCK CONTROL CABLE COVER

- (a) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the nut and hood lock control cable cover.

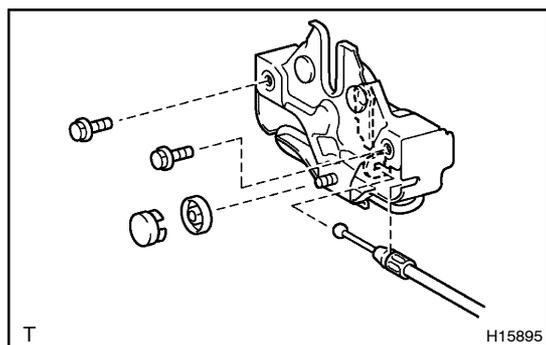

3. REMOVE HOOD LOCK

- (a) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.



- (b) Remove the 2 bolts, nut and hood lock.
- (c) Disconnect the hood lock control cable.

4. REMOVE HOOD LOCK CONTROL CABLE

- (a) Using a screwdriver, disconnect the cable clamps as shown in the illustration below.

HINT:

Tape the screwdriver tip before use.

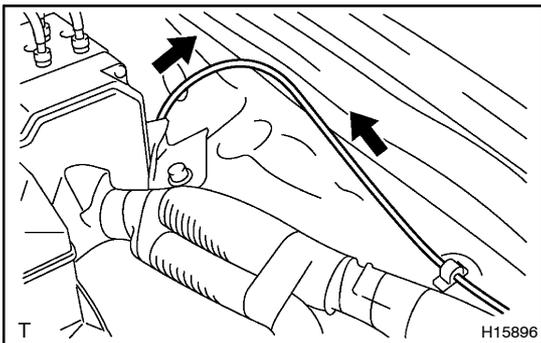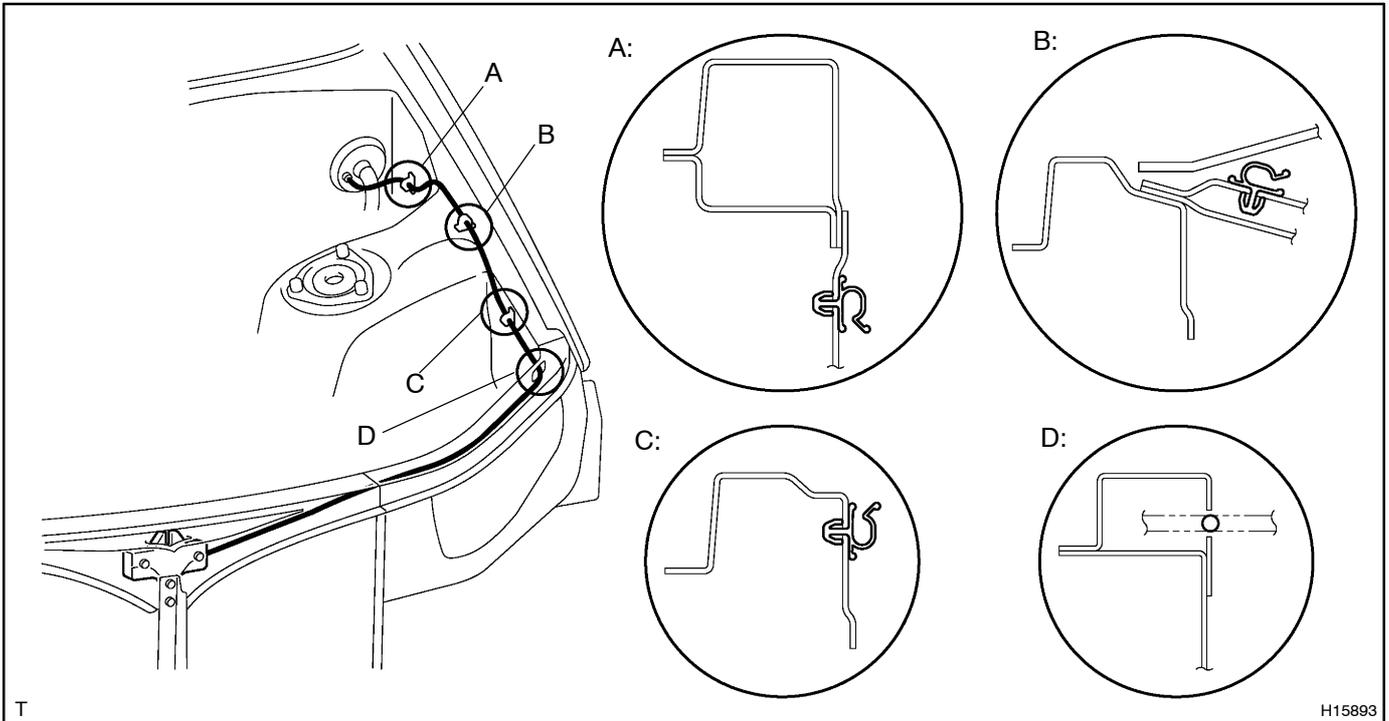

- (b) Pull the cable from the engine room to remove it.