

REPLACEMENT

CAUTION:


- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Care should be taken, therefore, when changing engine oil to minimize the frequency and length of time your skin is exposed to used engine oil. Protective clothing and gloves that cannot be penetrated by oil should be worn. The skin should be thoroughly washed with soap and water, or use water-less hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filters must be disposed of only at designated disposal sites.

1. REMOVE ENGINE UNDER COVER


2. DRAIN ENGINE OIL

- Remove the oil filler cap.
- Remove the oil drain plug, and drain the oil into a container.


3. REPLACE OIL FILTER

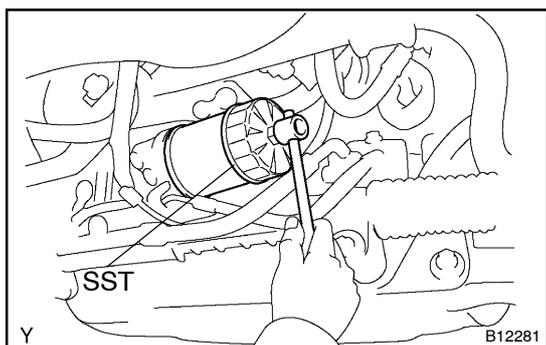

- Using SST, remove the oil filter.
SST 09228-07501
- Clean the oil filter contact surface on the oil filter mounting.
- Lubricate the filter rubber gasket with clean engine oil.

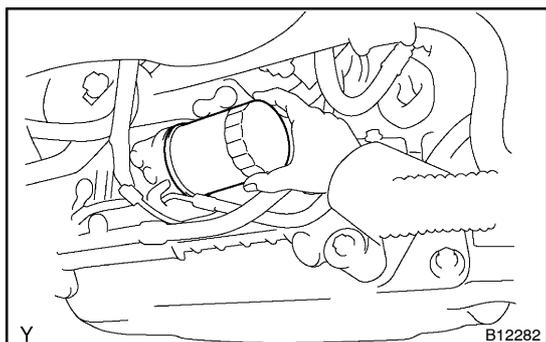

- Tighten the oil filter by hand until the rubber gasket contacts the seat of the filter mounting.

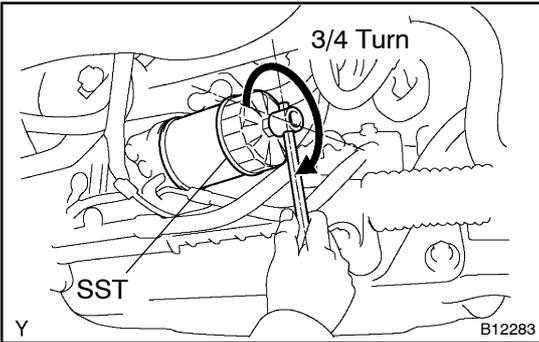

(e) Using SST, give it an additional 3/4 turn to seat the filter.
SST 09228-07501

(f) Reinstall the engine under cover with the 3 screws.

4. FILL WITH ENGINE OIL

(a) Clean and install the oil drain plug with a new gasket.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

(b) Fill with new engine oil.

Capacity: for w/ Oil cooler

Drain and refill	w/ Oil filter change	4.6 liters (4.9 US qts, 4.0 Imp. qts)
	w/o Oil filter change	4.3 liters (4.5 US qts, 3.8 Imp. qts)
Dry fill		6.2 liters (6.6 US qts, 5.5 Imp. qts)

Capacity: for w/o Oil cooler

Drain and refill	w/ Oil filter change	4.5 liters (4.8 US qts, 4.0 Imp. qts)
	w/o Oil filter change	4.2 liters (4.4 US qts, 3.7 Imp. qts)
Dry fill		6.1 liters (6.4 US qts, 5.4 Imp. qts)

(c) Reinstall the oil filler cap.

5. INSTALL ENGINE UNDER COVER

6. START ENGINE AND CHECK FOR ENGINE OIL LEAKS

7. RECHECK ENGINE OIL LEVEL